


Gates and Accessories

Let Us Help You Make An Entrance

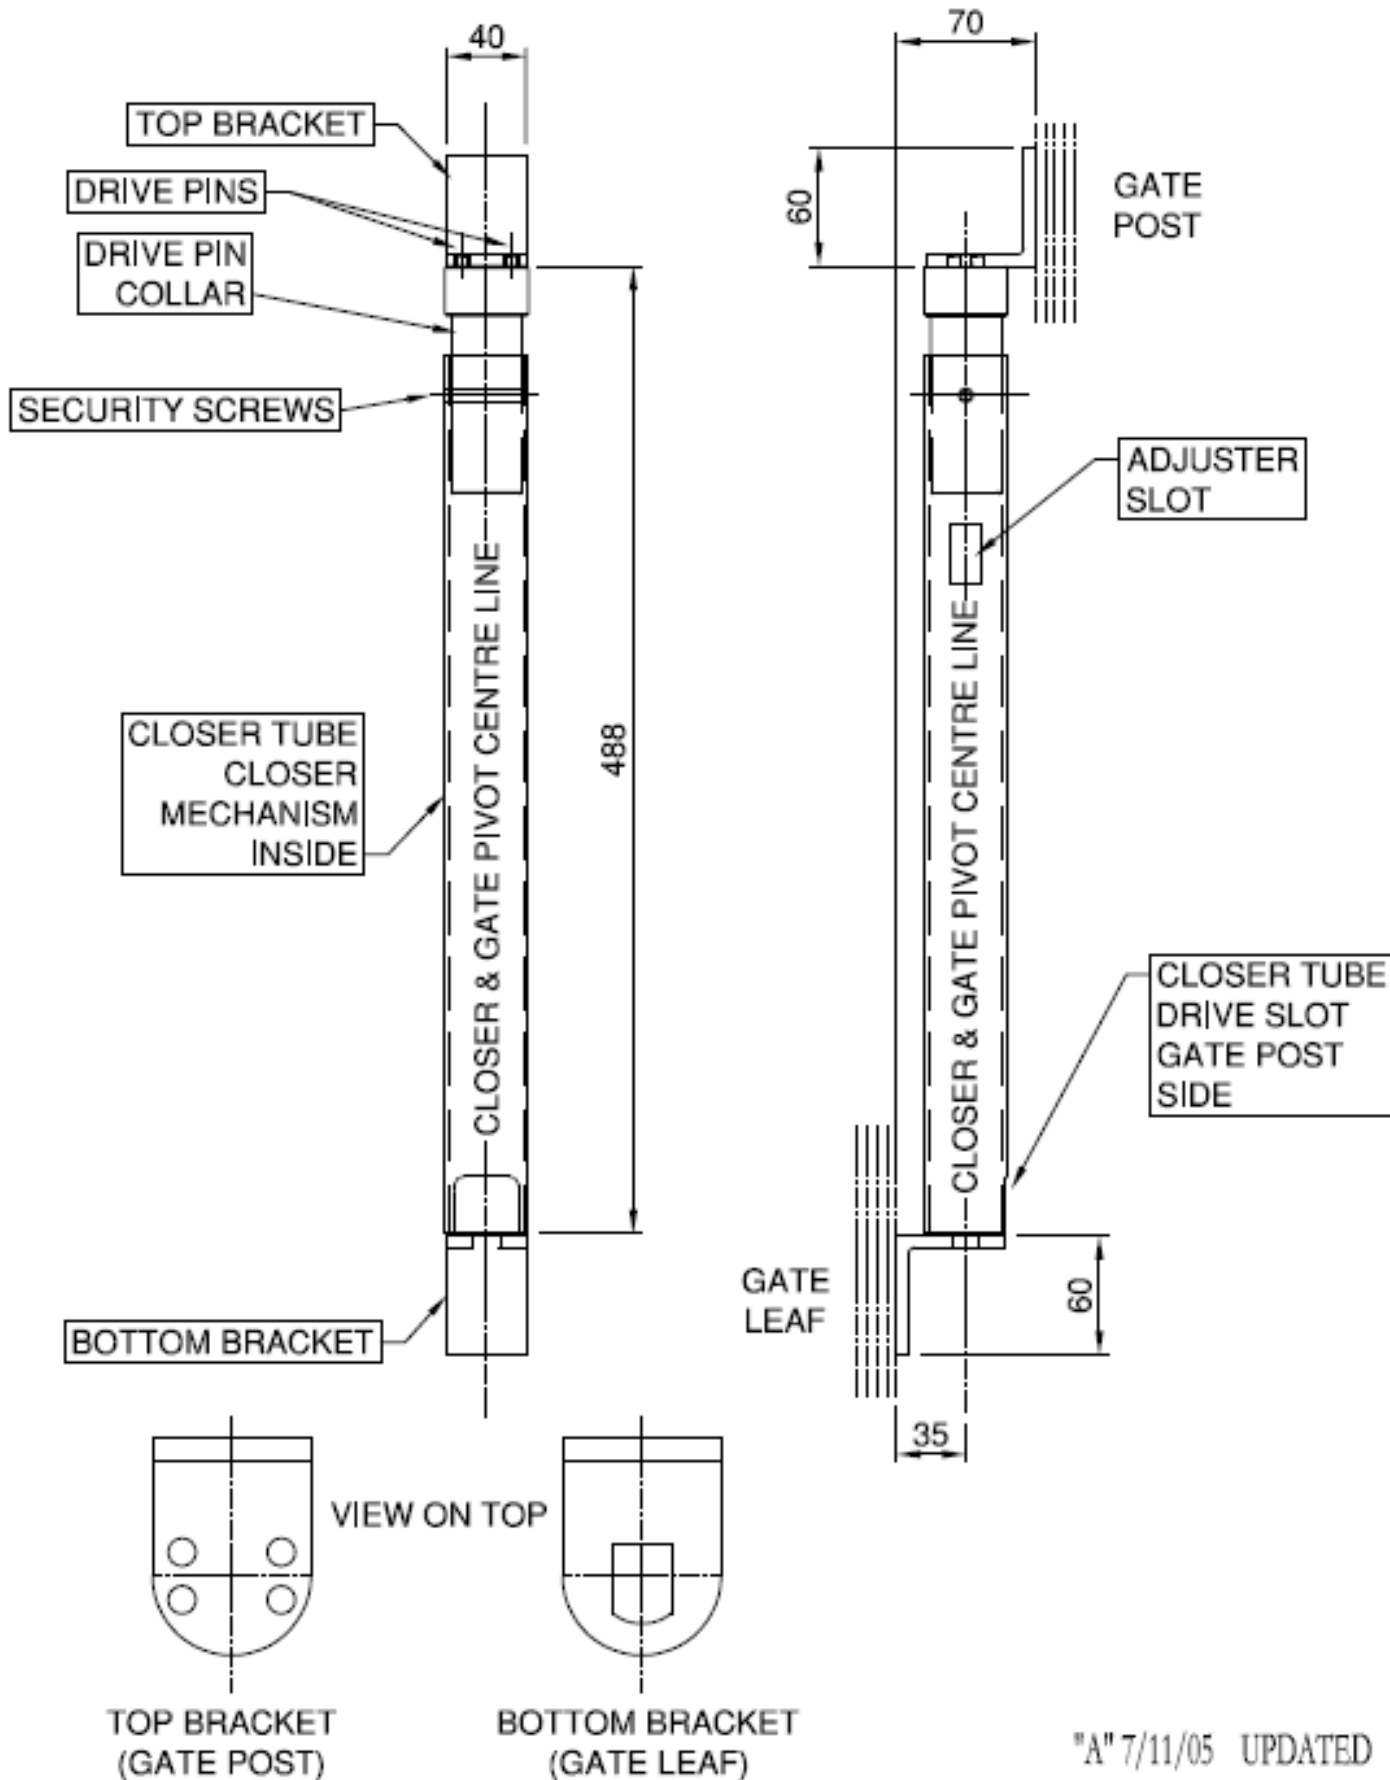

"A" 7/11/05 UPDATED

Fitting Instructions

This closer is designed to fit between the gate and its hinge post where there is a minimum gap of 70mm and the hinges are in line as per drawing.

- 1) Fix the bottom bracket to the gate leaf (as per drawing), using good quality security screws (restorix type).
- 2) With the outer sleeve in place on the tube, slide the mechanism into place, securing the drive dog into the slot provided at the base of the tube. Fix onto the bottom bracket - you will find it will only go in one way. N.B The centre lines MUST be in line with one another and with the hinges of the gate. if the gap between the post and gate leaf is greater than 70mm, packers will be required to adjust the brackets to this measurement.
- 3) Grip the tube and twist to line up with the top bracket approximately five degrees with the gate post. Fix securely with a security screw as done previously with the bottom bracket.
- 4) Drop the outer sleeve to the bottom until it locates on the drive dog.
- 5) To adjust the closing speed of the gate remove the plastic cover from the slot on the side of the tube which will reveal the speed adjustment cog. To slow the gate down rotate the cog clockwise and to speed it up rotate it anti-clockwise. do not wind the cog fully clockwise – this will result in hydraulic leakage and the closer will not function. Replace plastic cover when adjustment is complete.
- 6) Make sure that the top protective cover is in place.
- 7) If you have any questions about installing the closer, please call our sales office at Gates And Accessories 01223 839991.