

CAME WIRELESS KEYPAD QUICK PROGRAMMING GUIDE

There are 4 Internal radio codes to allocate number codes to incorporated in the keypad.

The Keypad has a total capacity of 25 number codes Additional codes are added using a Remote if required.

To Program using the internal radio codes

Step 1 Enter 555# (Installer Password)

Step 2 Enter 3#

Step 3 Enter Your 2 to 8 digit code and #

Step 4 Repeat Step 3

Step 5 Go to the gate control board and add the code as you would a Remote by entering your keypad code when the gate control board is waiting.

When adding the code as with a remote you can choose the function you require for example

OPEN for fully open or 2 & 3P partial opening of one leaf for pedestrian opening.