

HOW DOES THE SYSTEM WORK

The Telguard Alert-Guard unit is designed to control remote equipment using your mobile or landline telephone and alert users of misuse, arrival of guests or unauthorised activity.

Once your telephone number is programmed as an authorised number, you can call the Alert-Guard OR use the **CommTEL CONTROL App** to operate the equipment it's connected to. Depending on how the Alert-Guard is programmed it will either automatically perform a pre-defined action OR you can choose the operation it performs.

ENTRY OPTIONS

- Authorise Only** The unit recognises your telephone number as authorised and answers the call. You then press the default command on your telephone keypad (*listed below*) to operate the unit. If your installer has changed the default commands they will inform you.
- Dial to Open** The unit recognises your telephone number as authorised, drops the call, and activates the equipment.
- Answer Delay** The unit is programmed to ring for a determined amount of time. If you hang up before the unit answers a pre-defined action is performed. If you let the unit answer you can operate the unit as per the 'Authorise Only' method above.

DEFAULT COMMANDS

# Pulse R1	2# Pulse R2	5# Pulse R3
3# Latch R1	4# Latch R2	8# Latch R3
6# Unlatch R1	7# Unlatch R2	9# Unlatch R3

OTHER FUNCTIONS

Please contact your installer if you would like to update any of the below features OR change the authorised telephone number list.

- Time Periods
- AUX Triggered SMS Alerts
- PIN Codes (where TelPad fitted)
- Activity Alerts
- Timed Latch
- System Settings

COMMTEL CONTROL APP



Allowing **end users** to:
Open Multiple Entrances / Hold Open Entrances / Close Entrances.

