

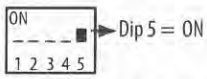
 


# E721

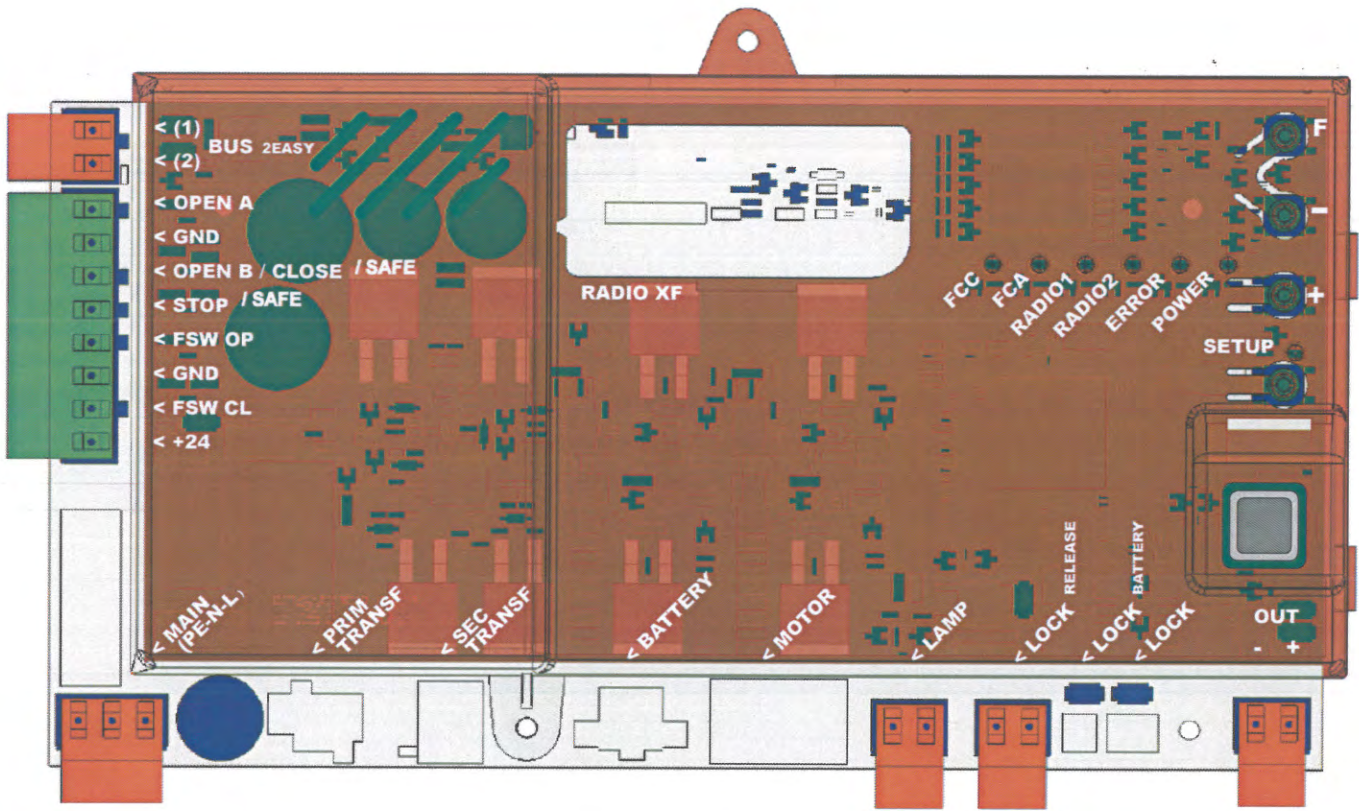

E721 additional sheet

<p><b>1</b></p>  <p>Dip 5 = OFF</p> <table border="1"> <tr><td>0 0 0 0</td><td>Open A_1</td></tr> <tr><td>0 0 0 1</td><td>Open A_2</td></tr> <tr><td>0 0 1 0</td><td>Open A_3</td></tr> <tr><td>0 0 1 1</td><td>Open A_4</td></tr> <tr><td>0 1 0 0</td><td>Open A_5</td></tr> <tr><td>0 1 0 1</td><td>Stop</td></tr> <tr><td>0 1 1 0</td><td>Stop NC_1</td></tr> <tr><td>0 1 1 1</td><td>Stop NC_2</td></tr> <tr><td>1 0 0 0</td><td>Close</td></tr> <tr><td>1 0 0 1</td><td>Open B_1</td></tr> <tr><td>1 0 1 0</td><td>Open B_2</td></tr> <tr><td>1 0 1 1</td><td>Open B_3</td></tr> <tr><td>1 1 0 0</td><td>Open B_4</td></tr> <tr><td>1 1 0 1</td><td>Open B_5</td></tr> <tr><td>1 1 1 0</td><td>/ not used</td></tr> <tr><td>1 1 1 1</td><td>/ not used</td></tr> </table>	0 0 0 0	Open A_1	0 0 0 1	Open A_2	0 0 1 0	Open A_3	0 0 1 1	Open A_4	0 1 0 0	Open A_5	0 1 0 1	Stop	0 1 1 0	Stop NC_1	0 1 1 1	Stop NC_2	1 0 0 0	Close	1 0 0 1	Open B_1	1 0 1 0	Open B_2	1 0 1 1	Open B_3	1 1 0 0	Open B_4	1 1 0 1	Open B_5	1 1 1 0	/ not used	1 1 1 1	/ not used	<p><b>2</b></p>  <p>Dip 5 = ON</p> <table border="1"> <tr><td>0 0 0 0</td><td>Open A_1</td><td>Open B_1</td></tr> <tr><td>0 0 0 1</td><td>Open A_1</td><td>Open B_2</td></tr> <tr><td>0 0 1 0</td><td>Open A_1</td><td>Stop</td></tr> <tr><td>0 0 1 1</td><td>Open A_1</td><td>Close</td></tr> <tr><td>0 1 0 0</td><td>Open A_2</td><td>Open B_1</td></tr> <tr><td>0 1 0 1</td><td>Open A_2</td><td>Open B_2</td></tr> <tr><td>0 1 1 0</td><td>Open A_2</td><td>Stop</td></tr> <tr><td>0 1 1 1</td><td>Open A_2</td><td>Close</td></tr> <tr><td>1 0 0 0</td><td>Open A_3</td><td>Open B_3</td></tr> <tr><td>1 0 0 1</td><td>Open A_3</td><td>Open B_4</td></tr> <tr><td>1 0 1 0</td><td>Open A_3</td><td>StopNC_1</td></tr> <tr><td>1 0 1 1</td><td>Open A_3</td><td>Close</td></tr> <tr><td>1 1 0 0</td><td>Open A_4</td><td>Open B_3</td></tr> <tr><td>1 1 0 1</td><td>Open A_4</td><td>Open B_4</td></tr> <tr><td>1 1 1 0</td><td>Open A_4</td><td>StopNC_2</td></tr> <tr><td>1 1 1 1</td><td>Open A_4</td><td>Close</td></tr> </table>	0 0 0 0	Open A_1	Open B_1	0 0 0 1	Open A_1	Open B_2	0 0 1 0	Open A_1	Stop	0 0 1 1	Open A_1	Close	0 1 0 0	Open A_2	Open B_1	0 1 0 1	Open A_2	Open B_2	0 1 1 0	Open A_2	Stop	0 1 1 1	Open A_2	Close	1 0 0 0	Open A_3	Open B_3	1 0 0 1	Open A_3	Open B_4	1 0 1 0	Open A_3	StopNC_1	1 0 1 1	Open A_3	Close	1 1 0 0	Open A_4	Open B_3	1 1 0 1	Open A_4	Open B_4	1 1 1 0	Open A_4	StopNC_2	1 1 1 1	Open A_4	Close	<p><b>2 FSW</b></p>  <table border="1"> <tr><td>1 0 0 0</td><td></td></tr> <tr><td>1 0 0 1</td><td></td></tr> <tr><td>1 0 1 0</td><td>CL FSW</td></tr> <tr><td>1 0 1 1</td><td></td></tr> <tr><td>1 1 0 0</td><td></td></tr> <tr><td>1 1 1 0</td><td></td></tr> <tr><td>0 0 0 0</td><td></td></tr> <tr><td>0 0 0 1</td><td></td></tr> <tr><td>0 0 1 0</td><td>OP FSW</td></tr> <tr><td>0 0 1 1</td><td></td></tr> <tr><td>0 1 1 1</td><td></td></tr> <tr><td>0 1 0 0</td><td>OP/CL FSW</td></tr> <tr><td>0 1 0 1</td><td></td></tr> <tr><td>1 1 1 1</td><td>OPEN</td></tr> </table>	1 0 0 0		1 0 0 1		1 0 1 0	CL FSW	1 0 1 1		1 1 0 0		1 1 1 0		0 0 0 0		0 0 0 1		0 0 1 0	OP FSW	0 0 1 1		0 1 1 1		0 1 0 0	OP/CL FSW	0 1 0 1		1 1 1 1	OPEN	<p><b>3 Edge</b></p> <table border="1"> <tr><td>1 1 0 1</td><td>CL Edge</td></tr> <tr><td>0 1 1 0</td><td>OP Edge</td></tr> </table>	1 1 0 1	CL Edge	0 1 1 0	OP Edge
0 0 0 0	Open A_1																																																																																																																		
0 0 0 1	Open A_2																																																																																																																		
0 0 1 0	Open A_3																																																																																																																		
0 0 1 1	Open A_4																																																																																																																		
0 1 0 0	Open A_5																																																																																																																		
0 1 0 1	Stop																																																																																																																		
0 1 1 0	Stop NC_1																																																																																																																		
0 1 1 1	Stop NC_2																																																																																																																		
1 0 0 0	Close																																																																																																																		
1 0 0 1	Open B_1																																																																																																																		
1 0 1 0	Open B_2																																																																																																																		
1 0 1 1	Open B_3																																																																																																																		
1 1 0 0	Open B_4																																																																																																																		
1 1 0 1	Open B_5																																																																																																																		
1 1 1 0	/ not used																																																																																																																		
1 1 1 1	/ not used																																																																																																																		
0 0 0 0	Open A_1	Open B_1																																																																																																																	
0 0 0 1	Open A_1	Open B_2																																																																																																																	
0 0 1 0	Open A_1	Stop																																																																																																																	
0 0 1 1	Open A_1	Close																																																																																																																	
0 1 0 0	Open A_2	Open B_1																																																																																																																	
0 1 0 1	Open A_2	Open B_2																																																																																																																	
0 1 1 0	Open A_2	Stop																																																																																																																	
0 1 1 1	Open A_2	Close																																																																																																																	
1 0 0 0	Open A_3	Open B_3																																																																																																																	
1 0 0 1	Open A_3	Open B_4																																																																																																																	
1 0 1 0	Open A_3	StopNC_1																																																																																																																	
1 0 1 1	Open A_3	Close																																																																																																																	
1 1 0 0	Open A_4	Open B_3																																																																																																																	
1 1 0 1	Open A_4	Open B_4																																																																																																																	
1 1 1 0	Open A_4	StopNC_2																																																																																																																	
1 1 1 1	Open A_4	Close																																																																																																																	
1 0 0 0																																																																																																																			
1 0 0 1																																																																																																																			
1 0 1 0	CL FSW																																																																																																																		
1 0 1 1																																																																																																																			
1 1 0 0																																																																																																																			
1 1 1 0																																																																																																																			
0 0 0 0																																																																																																																			
0 0 0 1																																																																																																																			
0 0 1 0	OP FSW																																																																																																																		
0 0 1 1																																																																																																																			
0 1 1 1																																																																																																																			
0 1 0 0	OP/CL FSW																																																																																																																		
0 1 0 1																																																																																																																			
1 1 1 1	OPEN																																																																																																																		
1 1 0 1	CL Edge																																																																																																																		
0 1 1 0	OP Edge																																																																																																																		

1 = ON ; 0 = OFF

**FR COMPLÉMENT AUX INSTRUCTIONS COMPLÈTES**

**INSTALLATION D'ACCESSOIRES BUS ZEASY**

On peut installer plusieurs dispositifs sur la ligne BUS Zeasy : des photocellules, des bords de sécurité et des dispositifs de commande.

**i** La carte gère les dispositifs de commande BUS Zeasy, uniquement si le micrologiciel est mis à jour à la version FW 2.9 ou à la version suivante.

1. Vérifier l'adresse (position des DIP) de chaque dispositif installé.

**1 DISPOSITIFS DE COMMANDE.** La position des DIP attribue les commandes. **Attention :** une commande (ex. : OPEN A\_1) doit être utilisée sur un seul dispositif parmi ceux connectés. **Stop NC** génère un arrêt même au moment où le dispositif est déconnecté.

**2 PHOTOCÉLULES (FSW).** La position des DIP identifie la paire émettrice-réceptrice et attribue le type de fonctionnement : photocellule active en phase de fermeture (CL FSW), en ouverture (OP FSW), en ouverture et en fermeture (OP/CL FSW), ou par impulsion (OPEN). **Attention :** dans une paire de photocellules, l'émettrice et la réceptrice doivent avoir la même adresse, mais on admet une seule paire de photocellules avec la même adresse.

**3 BORDS DE SÉCURITÉ (Edge).** Les bords peuvent être programmés pour la reconnaissance d'un obstacle en phase de fermeture (CL Edge), ou d'ouverture (OP Edge), au cours des deux phases. **Attention :** les adresses réservées aux bords ne doivent pas être attribuées aux photocellules.

2. Mettre la carte sous tension.

3. Procéder à la mémorisation des dispositifs BUS Zeasy (voir les instructions de la carte). **Attention :** lorsque plusieurs dispositifs sont installés, en présence de 2 ou plusieurs adresses identiques, la carte indique une erreur (conflit). Les adresses des dispositifs de commande ne génèrent aucun conflit avec des Photocellules ou des Bords de sécurité et vice versa.

**Attention :** Toujours répéter la mémorisation BUS Zeasy, après une modification d'adresse sur un dispositif.

**SIGNALISATIONS RELATIVES AU BUS ZEASY**

**i** La LED ROUGE BUS Zeasy clignotante signale l'activité du dispositif de commande ou bien l'engagement ou le non-alignement de la photocellule.

**ENTRÉES CONFIGURABLES POUR SÉCURITÉ BORD (J13)**

Le fonctionnement des bords raccordés aux entrées configurables du bornier J13 peut être programmé moyennant les fonctions **0b**, **5P**.

**Programmation 2e niveau** **Par défaut**

**0b Open B / Close / Sécurité Bord / Bord en fermeture :**   
 = OPEN B  
1 = CLOSE  
2 = Sécurité Bord en ouverture et fermeture (contact N.C.)  
3 = Sécurité Bord en fermeture (contact N.C.)  
 Si l'on a sélectionné une logique de fonctionnement qui prévoit l'utilisation de la commande de CLOSE (logique b, bC, C), **0b** est sélectionné sur  non modifiable.

**5P Stop / Sécurité Bord / Bord en ouverture :**   
 = STOP  
1 = Sécurité Bord en ouverture et fermeture (contact N.C.)  
2 = Sécurité Bord en ouverture (contact N.C.)

**IT INTEGRAZIONE ALLE ISTRUZIONI COMPLETE**

**INSTALLAZIONE DI ACCESSORI BUS ZEASY**

Sulla linea BUS Zeasy possono essere installati più dispositivi: fotocellule, coste di sicurezza e dispositivi di comando.

**i** La scheda gestisce i dispositivi di comando BUS Zeasy, solo se il firmware è aggiornato alla versione FW 2.9 o successiva.

1. Verificare l'indirizzo (posizione dei DIP) di ogni dispositivo installato.  
**1 DISPOSITIVI DI COMANDO.** La posizione dei DIP assegna i comandi. **Attenzione :** un comando (es.: OPEN A\_1) deve essere utilizzato su un solo dispositivo tra quelli collegati. **Stop NC** genera uno stop anche nel momento in cui il dispositivo viene scollegato.

**2 FOTOCÉLULE (FSW).** La posizione dei DIP identifica la coppia trasmittente-ricevente e assegna il tipo di funzionamento: fotocellula attiva in fase di chiusura (CL FSW), in apertura (OP FSW), in apertura e chiusura (OP/CL FSW), o per impulso (OPEN). **Attenzione :** in una coppia di fotocellule, la trasmittente e la ricevente devono avere lo stesso indirizzo, ma non ci devono essere due o più coppie di fotocellule con lo stesso indirizzo.

**3 COSTE DI SICUREZZA (Edge).** Le coste possono essere programmate per il riconoscimento di un ostacolo in fase di chiusura (CL Edge), o di apertura (OP Edge), o in entrambe le fasi. **Attenzione :** gli indirizzi riservati alle coste non devono essere assegnati alle fotocellule.

2. Alimentare la scheda.

3. Eseguire la memorizzazione dei dispositivi BUS Zeasy (vedere istruzioni della scheda). **Attenzione :** quando sono installati più dispositivi, se sono presenti 2 o più indirizzi uguali, la scheda va in errore (conflitto). Gli indirizzi dei dispositivi di comando non generano conflitto con Fotocellule o Coste di sicurezza e viceversa.

**Attenzione :** ripetere sempre la memorizzazione BUS Zeasy, dopo una modifica di indirizzo su un dispositivo.

**SEGNALAZIONI RELATIVE AL BUS ZEASY**

**i** Il Led ROSSO BUS Zeasy lampeggiante segnala attività del dispositivo di comando, o che la fotocellula è impegnata o non allineata.

**INGRESSI CONFIGURABILI PER SICUREZZA COSTA (J13)**

Il funzionamento delle coste collegate agli ingressi configurabili della morsettiera J13 può essere programmato mediante le funzioni **0b**, **5P**.

**Programmazione 2° livello** **Default**

**0b Open B / Close / Sicurezza Costa / Costa in chiusura :**   
 = OPEN B  
1 = CLOSE  
2 = Sicurezza Costa in apertura e chiusura (contatto N.C.)  
3 = Sicurezza Costa in chiusura (contatto N.C.)  
 Se è impostata una logica di funzionamento che prevede l'utilizzo del comando di CLOSE (logica b, bC, C), **0b** è impostata su  non modificabile.

**5P Stop / Sicurezza Costa / Costa in apertura :**   
 = STOP  
1 = Sicurezza Costa in apertura e chiusura (contatto N.C.)  
2 = Sicurezza Costa in apertura (contatto N.C.)

**EN SUPPLEMENT TO THE FULL INSTRUCTIONS**

**INSTALLATION OF BUS ZEASY ACCESSORIES**

Multiple devices can be installed on the BUS Zeasy line: photocells, safety edges and control devices.

**i** The board controls the BUS Zeasy control devices only if the firmware has been updated to version FW 2.9 or later.

1. Check the address (DIP switch position) of each installed device.  
**1 CONTROL DEVICES.** The commands are assigned by the position of the DIP switches. **Warning :** a command (e.g.: OPEN A\_1) must be used on only one of the connected devices. **Stop NC** also generates a stop when the device is disconnected.

**2 PHOTOCÉLLS (FSW).** The position of the DIP switches identifies the transmitter-receiver pair and assigns the type of operation: photocell active during closing (CL FSW), during opening (OP FSW), during opening and closing (OP/CL FSW) or by impulse (OPEN). **Warning :** the transmitter and receiver of a pair of photocells must have the same address, but there must never be two or more pairs of photocells with the same address.

**3 SAFETY EDGES (Edge).** The edges can be programmed to recognise and obstacle during closing (CL Edge) or opening (OP Edge), or during both opening and closing. **Warning :** the addresses reserved for the edges must not be assigned to the photocells.

2. Turn power on to the board.

3. Store the BUS Zeasy devices (see board instructions). **Warning :** when multiple devices are installed, if there are 2 or more addresses that are the same, it will generate a conflict error on the board. The addresses of control devices do not generate conflicts with Photocells or Safety edges or vice versa.

**Warning :** Always repeat the BUS Zeasy storage procedure after the address of a device has been modified.

**ALERTS RELATING TO BUS ZEASY**

**i** The flashing RED BUS Zeasy LED indicates the activity of the control device, or that the photocell is engaged or not aligned.

**CONFIGURABLE INPUTS FOR SAFETY EDGE SAFETY (J13)**

The operation of the edges connected to the configurable inputs of terminal board J13 can be programmed via the functions **0b**, **5P**.

**Level 2 programming** **Default**

**0b Open B / Close / Safety edge safety / Closing edge :**   
 = OPEN B  
1 = CLOSE  
2 = Opening and closing safety edge safety (N.C. contact)  
3 = Closing safety edge safety (N.C. contact)  
 If an operating logic has been set that uses the CLOSE (logic b, bC, C), **0b** command, it is set to  non-modifiable.

**5P Stop / Safety edge safety / Opening edge :**   
 = STOP  
1 = Opening and Closing safety edge safety (N.C. contact)  
2 = Opening safety edge safety (N.C. contact)

## CONTENTS

<b>1 WARNINGS</b> .....	<b>2</b>
<b>2 LAYOUT AND COMPONENTS</b> .....	<b>2</b>
2.1 COMPONENT DESCRIPTION .....	3
2.2 DESCRIPTION OF TERMINAL BLOCK J13 .....	3
<b>3 TECHNICAL SPECIFICATIONS</b> .....	<b>3</b>
<b>4 ELECTRIC CONNECTIONS</b> .....	<b>4</b>
4.1 BUS-2EASY PHOTOCELLS .....	5
4.1.1 ADDRESSING BUS-2EASY PHOTOCELLS .....	5
4.1.2 STORING BUS-2EASY ACCESSORIES .....	5
4.2 TRADITIONAL PHOTOCELLS .....	6
4.3 SAFE INPUT CONNECTIONS.....	7
<b>5 PROGRAMMING</b> .....	<b>8</b>
5.1 1 <sup>st</sup> LEVEL PROGRAMMING .....	8
5.2 2 <sup>nd</sup> LEVEL PROGRAMMING .....	10
<b>6 STORING RADIO CODE</b> .....	<b>12</b>
6.1 STORING DS RADIOCONTROLS .....	12
6.2 STORING SLH RADIOCONTROLS .....	13
6.3 STORING LC/RC RADIOCONTROLS (ONLY FOR SOME MARKETS) .....	13
6.3.1 STORING LC/RC RADIOCONTROLS REMOTELY .....	13
6.4 RADIOCONTROLS DELETION PROCEDURE .....	13
<b>7 OPERATIONAL START-UP</b> .....	<b>14</b>
7.1 CHECKING THE LEDS .....	14
7.2 BATTERY OPERATION .....	14
7.3 POSITIONING LIMIT SWITCHES .....	
7.4 MASTER / SLAVE CONFIGURATIONS.....	16
7.4.1 MASTER / SLAVE WIRING .....	16
7.4.2 MASTER/SLAVE SETUP PROCEDURE.....	16
7.5 SETUP .....	17
<b>8 TESTING THE AUTOMATED SYSTEM</b> .....	<b>17</b>
<b>9 ALARM AND ERROR SIGNALS</b> .....	<b>17</b>
9.1 ALARMS .....	17
9.2 ERRORS .....	17
<b>10 FUNCTION LOGICS</b> .....	<b>18</b>

### CE DECLARATION OF CONFORMITY

**Manufacturer:** FAAC S.p.A.

**Address:** Via Calari, 10 - 40069 Zola Predosa BOLOGNA - ITALY

**Declares that:** Control board E721

- conforms to the essential safety requirements of the following EEC directives  
2006/95/EC Low Voltage Directive  
2004/108/EC Electromagnetic Compatibility Directive

Additional note:



This product has undergone testing in a typical standard configuration (all products built by FAAC S.p.A. )

Bologna, 01-12-2011

CEO  
A. Marcellan







### WARNINGS

- Attention! To ensure the safety of people, it is important that you read all the following instructions.
- Incorrect installation or incorrect use of the product could cause serious harm to people.
- Carefully read the instructions before beginning to install the product and keep for future reference.
- The symbol  highlights notes that are important for personal safety and the protection of the automated system.
- The symbol  calls your attention to notes on product specifications or operation.

# E721

## 1 WARNINGS

-  Before attempting any work on the control board (connections, maintenance), always turn off power.
-  Install, upstream of the system, a differential thermal breaker with adequate tripping threshold.
-  Connect the earth lead to the appropriate terminal.
-  Always separate power cables from control and safety cables (push-button, receiver, photocells, etc.). To avoid any electric noise, use separate sheaths or a shielded cable (with earthed shield).



ENGLISH

## 2 LAYOUT AND COMPONENTS

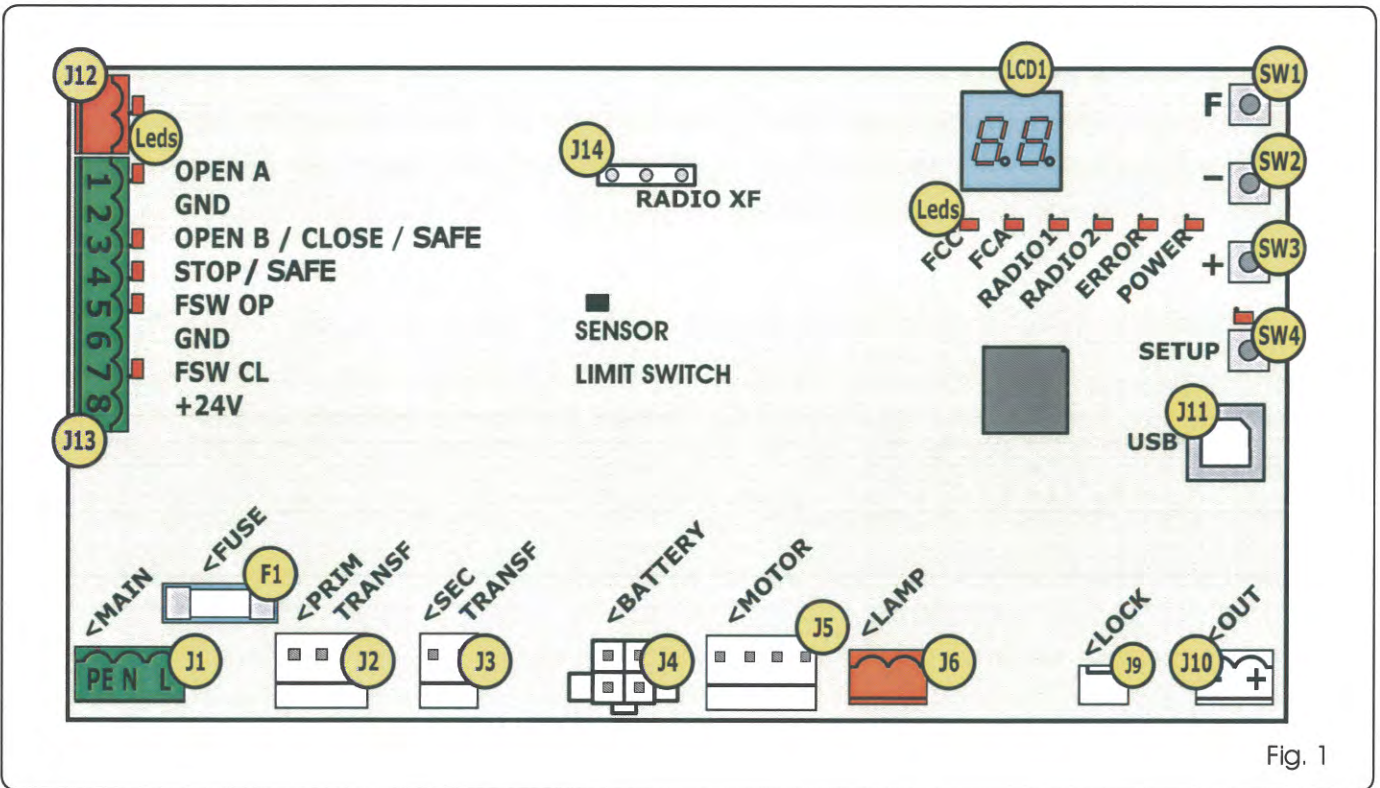


Fig. 1

**2.1 COMPONENT DESCRIPTION**


LCD	SIGNALLING AND PROGRAMMING DISPLAY
SW1	PROGRAMMING PUSH-BUTTON "F",
SW2	PROGRAMMING PUSH-BUTTON "-",
SW3	PROGRAMMING PUSH-BUTTON "+",
SW4	"SETUP" PUSH-BUTTON
LEDs	INPUTS STATUS CONTROL LED
J1	MAIN POWER SUPPLY CONNECTOR
J2	TRANSFORMER PRIMARY WINDING CONNECTOR
J3	TRANSFORMER SECONDARY WINDING CONNECTOR
J4	EMERGENCY BATTERY CONNECTOR (ACCESSORY)
J5	MOTOR CONNECTOR
J6	FLASHING LAMP CONNECTOR (24 V= - 15W)
J9	MOTOR LOCK AND MOTOR RELEASE CONTACT CONNECTOR
J10	OUT OUTPUT CONNECTOR
J11	USB CONNECTOR FOR PC CONNECTION
J12	BUS-2EASY DEVICE CONNECTION CONNECTOR
J13	INPUT CONNECTOR IN CONNECTOR BLOCK
J14	RADIO RECEIVER MODULE CONNECTOR FOR OMNIDEC
LCD1	SIGNALLING AND PROGRAMMING DISPLAY
F1	PROTECTION FUSE


**2.2 DESCRIPTION OF TERMINAL BLOCK J13**

INPUT	No	DESCRIPTION
1	OPEN A	Device with <b>N.O.</b> contact that causes total opening of the gate
2-6	GND	Accessory power supply negative
3(1)	OPEN B (DEFAULT)	Device with <b>N.O.</b> contact that causes partial opening of the gate
	CLOSE	Device with <b>N.O.</b> contact that closes the gate
	SAFE	Device with <b>N.C.</b> contact that causes the immediate and complete reversal of the gate
4(1)	STOP (DEFAULT)	Device with <b>N.C.</b> contact that halts the gate
	SAFE	Device with <b>N.C.</b> contact that causes the immediate and complete reversal of the gate
5	FSW OP	Device with <b>N.C</b> contact that reverses the motion during gate opening
7	FSW CL	Device with <b>N.C</b> contact that reverses the motion during gate closing
8	+24 V=	Accessory power supply positive

**3 TECHNICAL SPECIFICATIONS**

Power supply	230 V VERSION : 230 V~ 50 Hz 115V VERSION : 115 V~ 60 Hz
Power consumption from mains stand-by	10 W
Motor max. load	10A
Accessory power supply	24 V=
Accessory max. current	24 V= max. 500 mA BUS-2EASY max. 500 mA
Environmental temperature	(-20 - +55) °C
Flashing lamp load	24 V= - 15 W
Output load	24 V= - 100 mA (2)
Protection fuses	F1 = T1A - 250V~
Function logics	Semiautomatic, Semiautomatic "step", Automatic, Automatic "step", Automatic with timer function, Automatic Safety devices, Automatic Safety devices "step", Automatic with reverse on pause, Semiautomatic "b", Mixed logic "bC", Dead-man.
Work time	Programmable (from 0 to 10 min.)
Pause time OPEN A / OPEN B	Programmable (from 0 to 10 min.)
Motor power	Adjustable over 50 levels
Opening-closing motor speed	Adjustable over 10 levels
Connector Inputs/Outputs	Power supply, Battery, Motor, Module XF433/868, Motor lock electric release batteries, Motor Lock, USB
Inputs/Outputs in terminal block	BUS-2EASY, OPEN A, OPEN B/CLOSE/SAFE, STOP/SAFE, GND, Opening and closing photocells, +24 V=, Mains power supply, Flasher, Electric release motor lock, OUT
Programming	1 <sup>st</sup> and 2 <sup>nd</sup> level with 3 keys (+, -, F) and display.

 (1) The uses of inputs 3 and 4 can be set by configuring the corresponding parameters at programming level 2 (parameters  $\square b$  and  $\square P$ ). For the exact description on how to operate the automated system with the chosen logics, please refer to the tables featured at the end of this manual (Par. 10 - OPERATION LOGICS. As for the wiring required using these SAFE configured inputs, please refer to the diagrams shown in Fig.13 and Fig. 14

 (2) The output load must be considered as already included in the max. current available for the accessories

4 ELECTRIC CONNECTIONS

The wiring shown in Fig. 2 refers to the inputs of the board with DEFAULT configuration.

ENGLISH

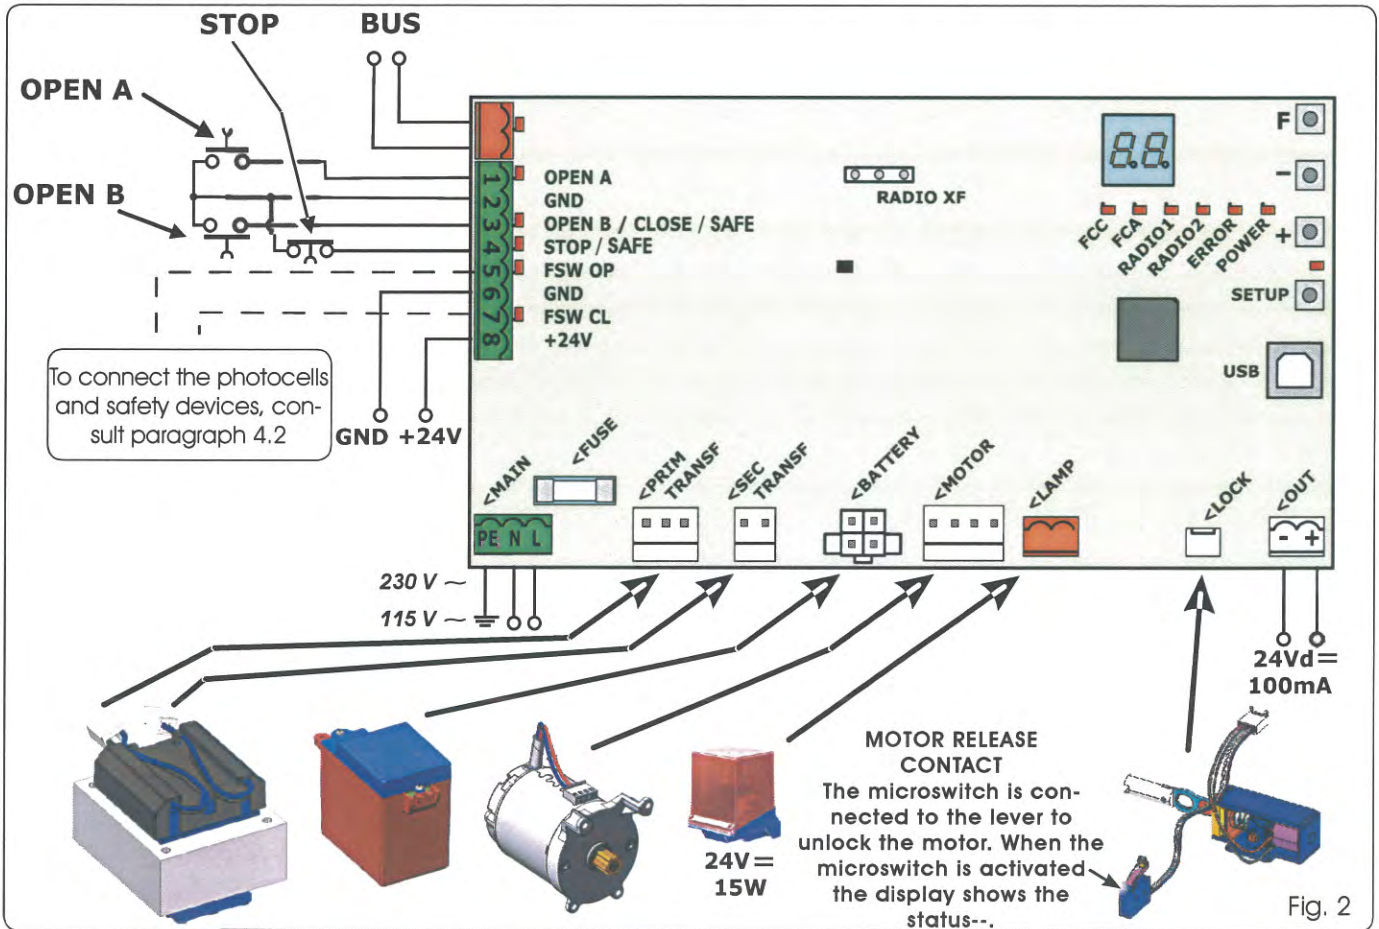


Fig. 2

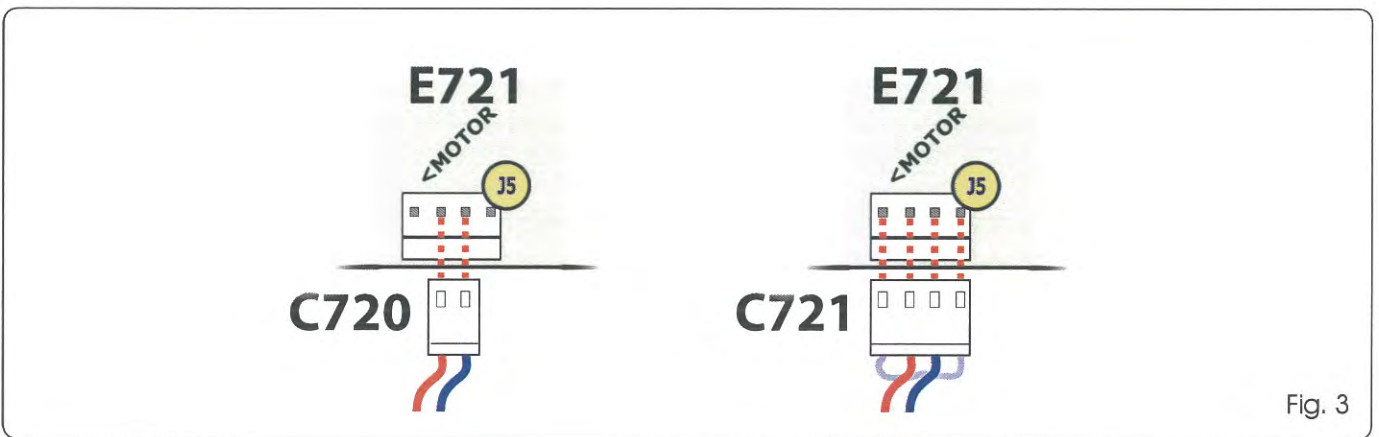


Fig. 3

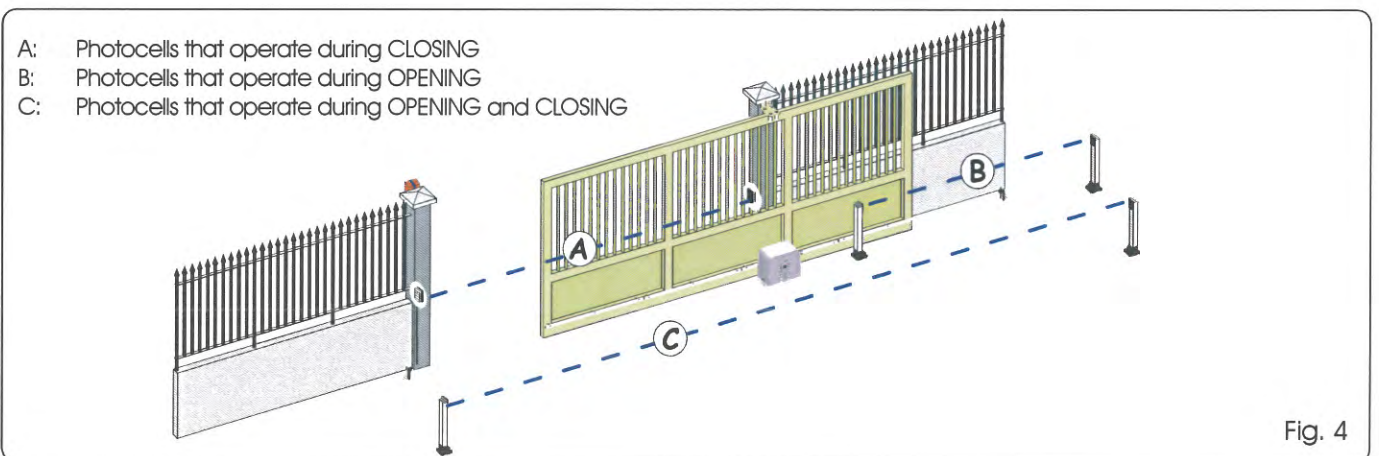


Fig. 4

Before connecting the photocells, it is advisable to select the type of operation on the basis of the area of movement that they need to protect:

**Safety devices during closing:** operate only during the automated system closing movement and are therefore suitable for protecting the closing area from the risk of impact.


**Safety devices during opening:** operate only during the automated system opening movement and are therefore suitable for protecting the opening area from the risk of impact.

**Safety devices during opening/closing:** operate during both the automated system opening and closing movements and are therefore suitable for protecting the entire movement area from the risk of impact.

**4.1 BUS-2EASY PHOTOCELLS**

This board is equipped with a BUS-2EASY circuit that can be used to easily connect a high number of auxiliary BUS-2EASY devices to the safety device (e.g. up to 16 pairs of photocells), appropriately programmed, using only two cables without polarity.

Before connecting the photocells, it is advisable to select the type of operation (Fig. 4) on the basis of the area of movement the cells must protect and to position the dip switches on both the transmitter and receiver (see Fig. 5) as in Tab. 1.

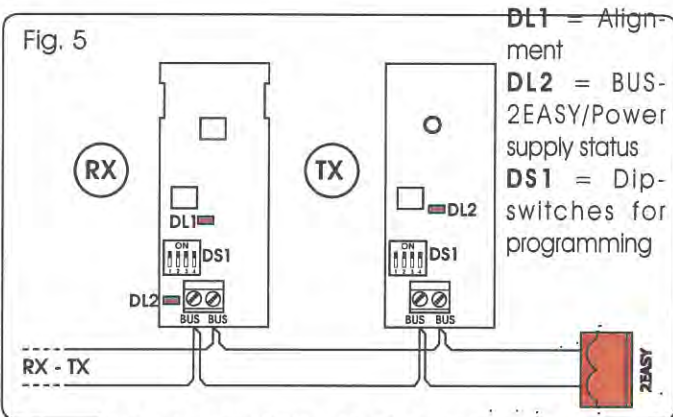

**4.1.1 ADDRESSING BUS-2EASY PHOTOCELLS**

- It is important to give both the transmitter and the receiver the same address.**
- Ensure that there are not two or more photocell pairs with the same address.**
- If no BUS-2EASY accessory is used, leave the BUS-2EASY connector (J12 - fig. 1) free.**

**Tab. 1 - Addressing BUS-2EASY photocells**

Dip1	Dip2	Dip3	Dip4	Re.	Type
OFF	OFF	OFF	OFF	B	OPENING Max. 6 pairs
OFF	OFF	OFF	ON		
OFF	OFF	ON	OFF		
OFF	OFF	ON	ON		
OFF	ON	ON	OFF		
OFF	ON	ON	ON		
ON	OFF	OFF	OFF	A	CLOSING Max. 7 pairs
ON	OFF	OFF	ON		
ON	OFF	ON	OFF		
ON	OFF	ON	ON		
ON	ON	OFF	OFF		
ON	ON	OFF	ON		
OFF	ON	OFF	OFF	C	OPENING and CLOSING Max. 2 pairs
OFF	ON	OFF	ON		
ON	ON	ON	ON	/	OPEN PULSE

ENGLISH

**4.1.2 STORING BUS-2EASY ACCESSORIES**

At any time it is possible to add BUS-2EASY photocells and accessories to the system, simply by following the procedure below:

1. Install and programme the accessories with the required address (see par. 4.1.1).
2. Cut off power to the board.
3. Connect both cables of the BUS-2EASY accessories to the red terminal block J12 (polarity irrelevant).
4. Power the board.
5. Quickly press the SETUP push-button (SW4) once to register the accessories. Check the operation of the installed BUS-2EASY devices.
6. The board has stored the BUS-2EASY accessories.

Follow the instructions in the following table to check that the BUS-2EASY connection status is efficient.

**The same procedure must be performed on a MASTER unit also when acquiring a SLAVE unit connected to the BUS-2EASY with POLARISED connection**


**Tab. 2 - Description of BUS-2EASY LED**

<b>Fixed ON</b>	Normal activity (LED on even without photocells). No registered photocell engaged.
<b>Slow flasher</b>	At least one registered photocell engaged or not aligned.
<b>Off (flash every 2.5 secs)</b>	BUS-2EASY line short-circuited.
<b>Off</b>	- BUS-2EASY line disabled (does not supply power) - Battery operation - Unit programmed as a SLAVE

4.2 TRADITIONAL PHOTOCELLS

Connection of 1 pair of closing photocells with FAIL-SAFE safety device **activated**  
Set in second level of programming

$\alpha 1 = 01$

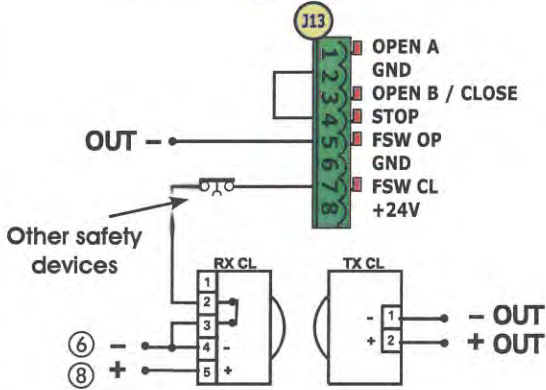

Connection of 1 pair of closing photocells with FAIL-SAFE and STOP safety device **deactivated**

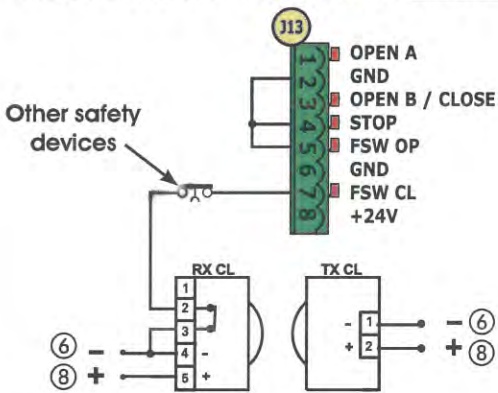


Fig. 6

**⚠** If the FAIL-SAFE safety device is not used, connect the power supply of the transmitters to terminals 6 and 8 of J13.

**⚠** If the FAIL-SAFE safety device is used, connect the power supply of the transmitters to OUT after setting it as appropriate (see 2nd level programming and Fig. 6).

**⚠** If the FAIL-SAFE safety device is used, even the unused safety inputs must be connected via a shunt lead to the negative of OUT (see Fig. 6).

Connection of a pair of opening photocells

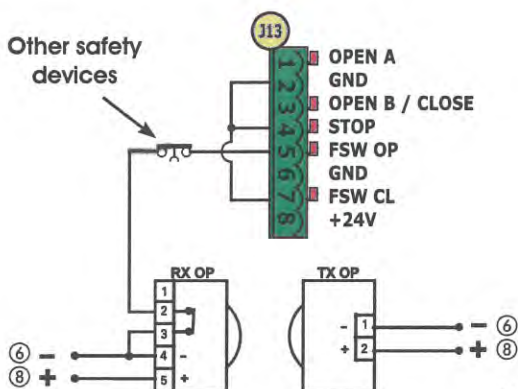


Fig. 7

Connection of a pair of closing photocells and a pair of opening photocells

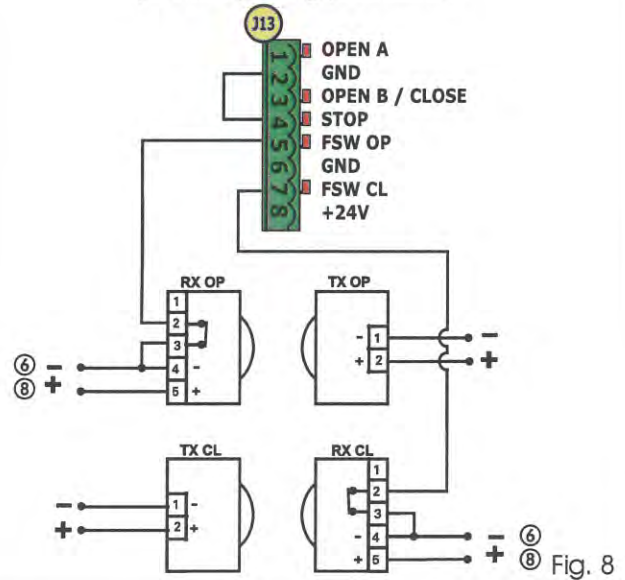


Fig. 8

Connection of two pairs of closing photocells

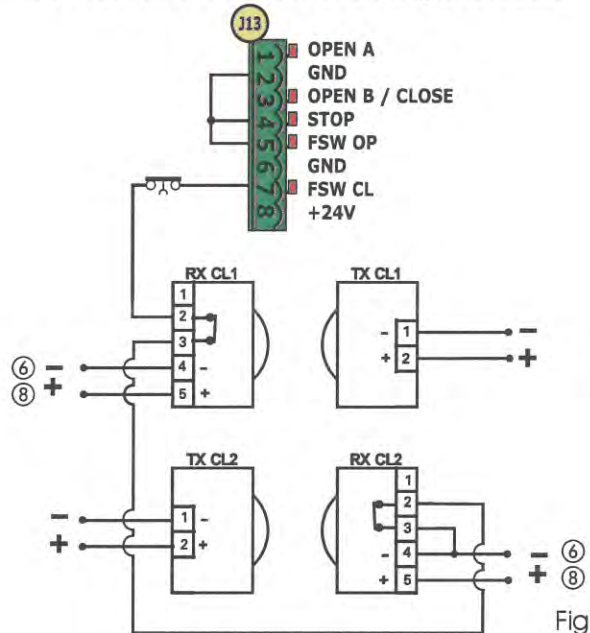


Fig. 9

Connection of a pair of closing photocells and a pair of opening/closing photocells

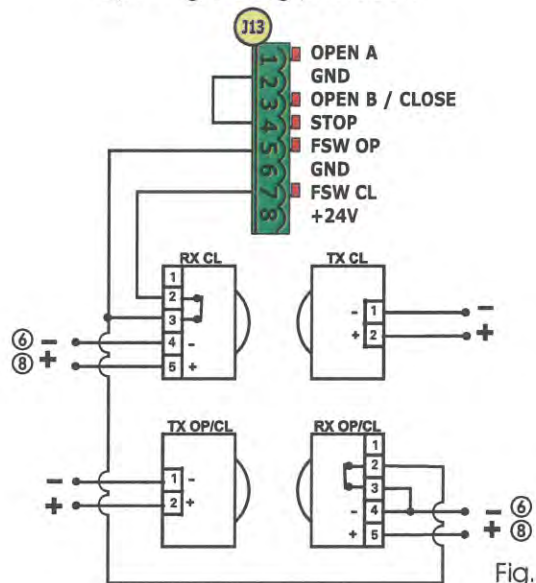


Fig. 10



Connection of a pair of closing photocells, a pair of opening photocells and a pair of opening/closing photocells

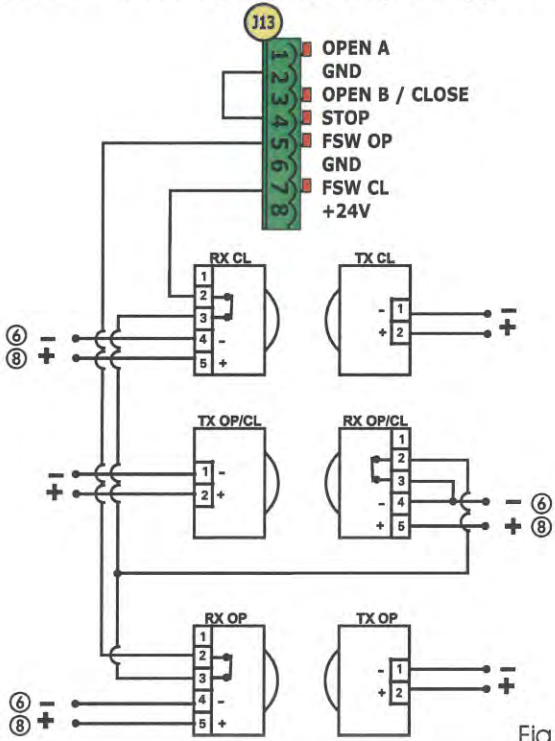


Fig. 11

Connection of no safety and stop device

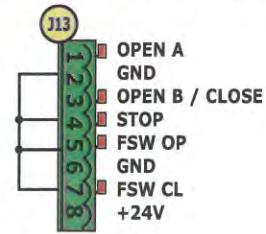



Fig. 12

4.3 SAFE INPUT CONNECTIONS

**Hand icon:** If the Fail Safe safety device is enabled (parameter that can be set in programming level 2), the negative used for managing the SAFE input is - OUT (see Fig. 13).

Connection of a safety device (other safety devices) to the SAFE input with the **FAIL SAFE** function enabled

By setting: 2nd level  $\alpha I=01$  (FAIL SAFE ENABLED)  
2nd level  $SP=01$  (INPUT 4 = SAFETY EDGE SAFETY)

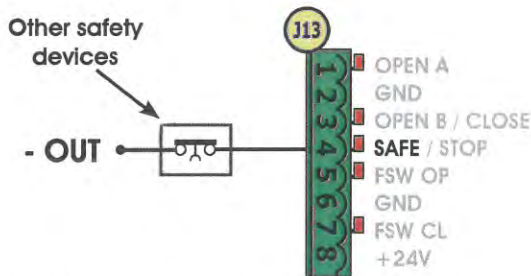

By setting: 2nd level  $\alpha I=01$  (FAIL SAFE ENABLED)  
2nd level  $Ob=02$  (INPUT 3 = SAFETY EDGE SAFETY)


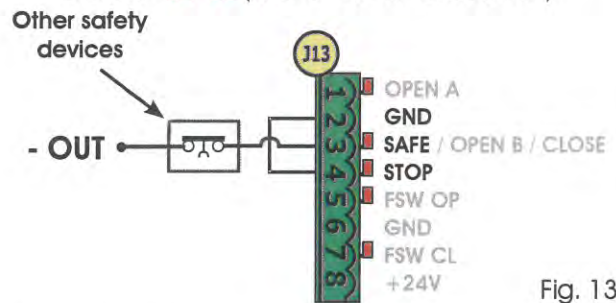


Fig. 13

**Hand icon:** If the Fail Safe safety device is disabled (parameter that can be set in programming level 2), the negative used for managing the SAFE input is - 6 (see Fig. 14).

Connection of a safety device (other safety devices) to the SAFE input with the **FAIL SAFE** function disabled

By setting: 2nd level  $\alpha I=00$  (FAIL SAFE DISABLED)  
2nd level  $SP=01$  (INPUT 4 = SAFETY EDGE SAFETY)

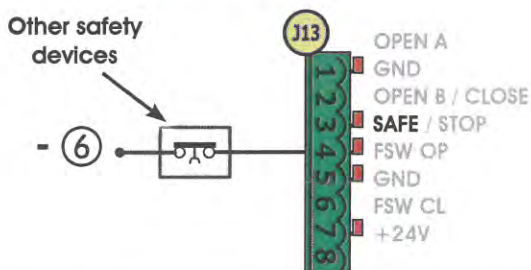

By setting: 2nd level  $\alpha I=00$  (FAIL SAFE DISABLED)  
2nd level  $Ob=02$  (INPUT 3 = SAFETY EDGE SAFETY)

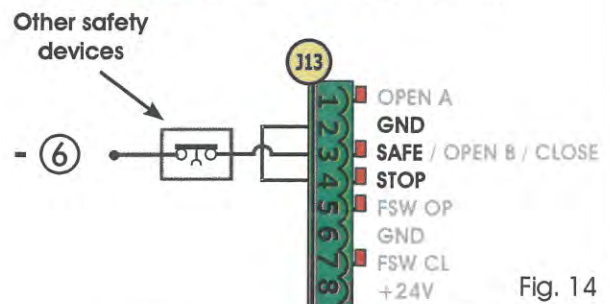



Fig. 14

**Hand icon:** In case N.C. contact devices are not used (other safety devices) the SAFE input must be jumpered to -OUT with FAIL SAFE enabled or to GND with FAIL SAFE disabled.

**5 PROGRAMMING**

It is necessary to access PROGRAMMING mode in order to program automated system operation. Programming is divided in two parts: 1<sup>st</sup> LEVEL and 2<sup>nd</sup> LEVEL.


 **The status of the automated system is normally shown on the display. When push-button F is pressed or when F and + are pressed simultaneously, this gives access to 1<sup>st</sup> or 2<sup>nd</sup> level programming. During battery operation the display is off. Briefly press "+" to view the state of the automated system.**


 **To restore the default settings, simply reload the desired default in the first passage of the 1<sup>st</sup> level programming.**


**5.1 1<sup>st</sup> LEVEL PROGRAMMING**





To access 1<sup>st</sup> level programming, press push-button F.

- Press **F** (and hold down) to display the function name.
- If you release the key, the display shows the value of the function that can be modified with keys + and -.
- If you press **F** again (and hold it down), the display shows the name of the next function, etc.
- When you reach the last function, press push-button **F** to exit the program and store the parameters. The display shows again the status of the automated system.





 **Changes to the programming parameters become effective as soon as they are carried out, while final memorisation occurs only upon exiting programming and returning to the input state display. If the unit is powered down before returning to the input state display, all changes made will be lost.**

 **It is possible to return to the input status display and store all the parameters modified to that moment from any point of the 1<sup>st</sup> and 2<sup>nd</sup> level programming by pressing keys F and - simultaneously.**

 **When the board is turned on, the software version of the board with two figures separated by a decimal point appears on the LCD1 display.**




1 <sup>st</sup> LEVEL PROGRAMMING 		Default
Display	Function	
dF	<p><b>DEFAULT:</b></p> <p><b>I</b> Configures the parameters with DEFAULT values.</p> <p><b>CU</b> If push-button <b>F</b> is released, the value <b>CU</b> appears, this means that the standard modified configuration has been selected by means of push-buttons and display. If you wish to maintain this programming, press push-button <b>F</b> again, otherwise press + and select default <b>I</b>.</p>	I
Ct	<p><b>MASTER/SLAVE CONFIGURATION:</b></p> <p><b>MA</b> Configures the board in <b>MASTER</b> mode</p> <p><b>SL</b> Configures the board in <b>SLAVE</b> mode</p> <p> <b>Configuring the board in SLAVE mode you will not be able to view the parameters LO-PA-Pb-Ph-Op (for Master/Slave operation see Par. 7.4)</b></p>	MA
LO	<p><b>FUNCTION LOGICS:</b></p> <p><b>E</b> Semiautomatic.</p> <p><b>EP</b> Semiautomatic "Step".</p> <p><b>A</b> Automatic.</p> <p><b>AI</b> Automatic 1.</p> <p><b>AP</b> Automatic "Step".</p> <p><b>At</b> Automatic with timer function.</p> <p><b>S</b> Automatic "Safety devices".</p> <p><b>SP</b> Automatic Safety Devices "Step".</p> <p><b>SA</b> Automatic with reverse during pause.</p> <p><b>b</b> Semiautomatic "b".</p> <p><b>bC</b> Mixed (AP pulse/ CH dead-man).</p> <p><b>C</b> Dead-man.</p> <p> <b>Parameter not displayed in SLAVE mode</b></p>	E
PA	<p><b>PAUSE TIME A:</b></p> <p>Pause time with a <b>TOTAL</b> opening command. This has effect only if the automatic logic was selected. Adjustable from 0 to 59 secs. in one-second steps. Subsequently, display changes to minutes and tens of seconds (separated by a point) and time is adjusted in 10-second steps, up to the maximum value of <b>9.5</b> minutes.</p> <p>E.g. if the display shows <b>2.5</b>, pause time is 2 min. and 50 secs.</p> <p> <b>Parameter not displayed in SLAVE mode</b></p>	20

ENGLISH



Display	Function	Default
Pb	<p><b>PAUSE TIME B:</b>                      Pause time with a <b>PARTIAL</b> opening command. This has effect only if the automatic logic was selected. Adjustable from 0 to 59 secs. in one-second steps.                      Subsequently, display changes to minutes and tens of seconds (separated by a point) and time is adjusted in 10-second steps, up to the maximum value of 9.5 minutes.                      E.g. if the display shows 2.5, pause time is 2 min. and 50 secs..</p> <p> <b>Parameter not displayed in SLAVE mode</b></p>	20
F0	<p><b>MOTOR POWER:</b>                      Adjusts the motor power level</p> <p>01 = minimum power                      50 = maximum power</p> <p> <b>When the power value has been changed, it is advisable to perform a new SETUP (see par. 7.3)</b></p>	50
S0	<p><b>OPENING SPEED:</b>                      Adjusts the motor opening speed to 10 levels</p> <p>01 = minimum speed                      10 = maximum speed</p> <p> <b>When the speed value has been changed, it is advisable to perform a new SETUP (see par. 7.3)</b></p>	08
S0	<p><b>CLOSING SPEED:</b>                      Adjusts the motor closing speed to 10 levels.</p> <p>01 = minimum speed                      10 = maximum speed</p> <p> <b>When the speed value has been changed, it is advisable to perform a new SETUP (see par. 7.3)</b></p>	08
r0	<p><b>SLOWING DURING OPENING</b>                      Adjusts the slowing space as a percentage of the total gate travel. Adjustable from 5 (with speed &lt;5), 10 (with speed between 5 and 8), 15 (with speed &gt;8) to 99 % in 1% steps.</p> <p>5-10-15 = minimum slowing                      99 = maximum slowing</p>	20
r0	<p><b>SLOWING DURING CLOSING:</b>                      Adjusts the slowing space as a percentage of the total gate travel. Adjustable from 5 (with speed &lt;5), 10 (with speed between 5 and 8), 15 (with speed &gt;8) to 99 % in 1% steps.</p> <p>5-10-15 = minimum slowing                      99 = maximum slowing</p>	20
Sr	<p><b>SPEED DURING SLOWING:</b>                      Adjusts gate speed during slowing.</p> <p>0 = LOW speed                      1 = HIGH speed</p>	0
St	<p><b>STATUS OF AUTOMATED SYSTEM:</b>                      Exit from programming, data storage, and return to gate status display.</p> <p>00 = CLOSED                      01 = OPEN                      02 = Stop then "OPEN"                      03 = Stop then "CLOSE"                      04 = In "PAUSE"                      05 = During opening stage                      06 = During closing stage</p> <p>07 = FAIL SAFE in progress                      08 = BUS-2EASY device check in progress                      09 = Preflashing then "OPEN"                      10 = Preflashing then "CLOSE"                      11 = OPEN in Partial Opening                      12 = in PAUSE Partial Opening                      -- = Motor unlocked</p>	

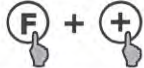**5.2 2<sup>nd</sup> LEVEL PROGRAMMING**

- To access 2ND LEVEL PROGRAMMING, press push-button **F** and hold down while pressing push-button **+**:
- if you also release push-button **F**, the display shows the value of the function that can be modified with keys **+** and **-**.
  - if you press key **F** (and hold down), the display shows the name of the next function. If you release it, the value that can be modified with keys **+** and **-** is displayed.
  - when you reach the last function, press **F** to exit programming, and the display resumes showing the automated system status.

2 <sup>nd</sup> LEVEL PROGRAMMING 		
Display	Function	Default
<b>bo</b>	<p><b>MAXIMUM TAKE-OFF POWER:</b> The motor works at maximum power (ignoring the selected power level) during the movement take-off.</p> <p><b>y</b> = active <b>no</b> = excluded</p>	<b>no</b>
<b>PF</b>	<p><b>PREFLASHING:</b> Allows 5 types of preflashing to be selected, with a duration equal to 3 secs.</p> <p><b>no</b> = no preflashing. <b>OC</b> = preflashing before each movement. <b>CL</b> = preflashing before a closing movement. <b>OP</b> = preflashing before an opening movement. <b>PA</b> = preflashing only at end of pause.</p>	<b>no</b>
<b>tP</b>	<p><b>PREFLASHING TIME (visible only if preflashing is selected in the previous menu):</b> Adjusts preflashing time from <b>1</b> to <b>10</b> sec. in 1 second steps.</p> <p><b>01</b> = minimum preflashing <b>10</b> = maximum preflashing</p>	<b>03</b>
<b>Ph</b>	<p><b>CLOSING PHOTOCELLS:</b> Activate the function if you want the closing photocells to lock movement and reverse it on disengagement. Normally, operation of the closing photocells immediately puts the gate into reverse when this function is off.</p> <p><b>y</b> = reversal on disengagement <b>no</b> = immediate reversal to opening.</p> <p> <b>Parameter not displayed in SLAVE mode</b></p>	<b>no</b>
<b>oP</b>	<p><b>OPENING PHOTOCELLS:</b> Activate the function if you want the opening photocells to lock movement and reverse it during closing. Normally, with this function off, operation of the opening photocells determines the resumption of movement on their disengagement.</p> <p><b>no</b> = immediate reversal to closing <b>no</b> = resumption of motion on disengagement</p> <p> <b>Parameter not displayed in SLAVE mode</b></p>	<b>no</b>
<b>Ad</b>	<p><b>ADMAP FUNCTION</b> Permits activation of operation in accordance with French standard NFP 25/362.</p> <p><b>y</b> = active <b>no</b> = excluded</p>	<b>no</b>
<b>EC</b>	<p><b>ENCODER:</b> The "virtual" encoder on the board operates as an anti-crushing device and manages the slowing and partial opening start points. If the gate strikes an obstacle during the opening or closing stage, the "virtual" encoder causes reversal of the motion. The second obstacle detected in the same direction causes the motor to stop. An alarm is signalled in both cases (see section on alarms). It is necessary to adjust the sensitivity of the "virtual" encoder by varying the time that the board waits for before controlling reversal of motion from a minimum of <b>0</b> sec to a maximum of <b>10</b> sec in one-second steps.</p> <p><b>00</b> = maximum sensitivity <b>10</b> = minimum sensitivity</p>	<b>02</b>


ENGLISH

Display	Function	Default
PO	<p><b>PARTIAL OPENING:</b></p> <p>It is possible to adjust the width of the partial leaf opening as a percentage of the total gate travel.</p> <p>Adjustable from 0 to 99% in 1% steps.</p> <p>00 = no partial opening 01 = minimum partial opening 99 = maximum partial opening</p>	50
T	<p><b>TIME-OUT</b></p> <p>It is advisable to set a value higher than the time taken by the gate to open or close fully. Adjustable from 0 to 59 sec. in 1 second steps. Subsequently, display changes to minutes and tens of seconds (separated by a point) and time is adjusted in 10-second steps, up to the maximum value of 9.5 minutes.</p> <p>E.g.: if the display shows 2.5, pause time is 2 min. and 50 secs.</p> <p> <b>When using a system with MASTER/SLAVE configuration you must set a WORK TIME on the MASTER unit that takes into account the movement time of both leaves.</b></p>	2.0
01	<p><b>OUT 1:</b></p> <p>Allows output OUT (open collector N.O.) to be activated in one of the following functions:</p> <p>00 = Always enabled (supplies 24V voltage= with a max absorption of 100 mA) 01 = FAIL-SAFE (monitors the correct operation of the connected traditional photocells) 02 = WARNING LIGHT (off when closed, on during opening and open/pause, flashing during closing) 03 = COURTESY LIGHT (see next function) 04 = ALARM, BATTERY operation 05 = gate OPEN or PAUSED 06 = gate CLOSED 07 = gate in MOTION 08 = gate OPENING 09 = gate CLOSING 10 = ACTIVE safety 11 = timed output that can be activated by second radio channel (see next function) 12 = output that can be activated by second radio channel (step function)</p>	00
T1	<p><b>TIMING OF OUT 1 (only if option 03 or 11 is selected at the previous step):</b></p> <p>Can be used to adjust timing of output OUT if a timed function was selected (e.g. 03 or 11) from 1 to 99 minutes in 1 minute steps.</p>	02
0b	<p><b>OPEN B / CLOSE / EDGE SAFETY DEVICE:</b></p> <p>It is possible to select the use of OPEN B input as partial opening, CLOSE command or EDGE SAFETY DEVICE.</p> <p>00 = OPEN B 01 = CLOSE 02 = SAFETY EDGE SAFETY (N.C. contact)</p> <p> <b>If you select a function logic that involves the use of the CLOSE command (logic b, bC, C) this function will be preset to 01 and it will not be possible to change it.</b></p>	00
SP	<p><b>STOP / EDGE SAFETY DEVICE</b></p> <p>It is possible to select the use of STOP input as STOP or EDGE SAFETY DEVICE.</p> <p>00 = STOP 01 = SAFETY EDGE SAFETY (N.C. contact)</p>	00
IP	<p><b>PARTIAL REVERSE:</b></p> <p>It is possible to set the reverse type (complete or partial) when an obstacle is encountered or when a safety edge is triggered.</p> <p>y = Partial reverse activation. When an obstacle is encountered or when a safety edge is triggered the leaf reverses movement for approximately 2" and will then stop</p> <p>no = Partial reverse deactivation. When an obstacle is encountered or when a leaf safety edge is triggered it completely reverses movement and will place itself in open or closed position</p>	no
Lc	<p><b>MOTOR LOCK:</b></p> <p>It is possible to select the use of the motor lock during battery operation:</p> <p>y = the motor lock continues to operate regularly even during battery operation no = when the system switches to battery operation, the motor lock remains open.</p>	y

Display	Function	Default														
AS	<p><b>SERVICE REQUEST - CYCLE COUNTER (combined with the two successive functions):</b></p> <p><b>y</b> = when the set number of cycles is reached with successive functions <b>nc</b> and <b>nd</b>, the system carries out an 8 sec. preflashing sequence (in addition to the sequence already set using the <b>PF</b> function) before each movement.</p> <p><b>no</b> = successive functions <b>nc</b> and <b>nd</b> indicate how many cycles the system has performed up to the maximum possible display of 99,990.</p> <p> <b>If the number of cycles is higher than 99,990, the two successive functions nc and nd will show 99 and 99 respectively.</b></p> <p>This function may be useful for setting programmed maintenance operations or for checking work cycles performed.</p>	no														
nc	<p><b>CYCLE PROGRAMMING (THOUSANDS):</b></p> <p>If <b>AS = y</b> the display indicates the number of thousands of cycles after which service is required (may be set from <b>0</b> to <b>99</b>).</p> <p>If <b>AS = no</b> the display indicates the number of thousands of cycles performed. The value displayed is updated with the sequence of cycles, interacting with the value of <b>nd</b>.</p> <p> <b>If AS = no press keys + and - for 5 sec. to zero the cycle counter.</b></p>	00														
nd	<p><b>CYCLE PROGRAMMING (TENS):</b></p> <p>If <b>AS = y</b> the display indicates the number of tens of cycles after which service is required (may be set from <b>0</b> to <b>99</b>).</p> <p>If <b>AS = no</b> the display indicates the number of tens of cycles performed. The value displayed is updated with the sequence of cycles, interacting with the value of <b>nc</b>.</p> <p> <b>Example: if the system has performed 11.218, it will display nc = 11 and nd = 21</b></p>	00														
St	<p><b>STATUS OF AUTOMATED SYSTEM:</b></p> <p>Exit from programming, data storage, and return to gate status display.</p> <table border="0"> <tr> <td>00 = CLOSED</td> <td>07 = FAIL SAFE in progress</td> </tr> <tr> <td>01 = OPEN</td> <td>08 = BUS-2EASY device check in progress</td> </tr> <tr> <td>02 = Stop then "OPEN"</td> <td>09 = Preflashing then "OPEN"</td> </tr> <tr> <td>03 = Stop then "CLOSE"</td> <td>10 = Preflashing then "CLOSE"</td> </tr> <tr> <td>04 = In "PAUSE"</td> <td>11 = OPEN in Partial Opening</td> </tr> <tr> <td>05 = During opening stage</td> <td>12 = in PAUSE Partial Opening</td> </tr> <tr> <td>06 = During closing stage</td> <td>-- = Motor unlocked</td> </tr> </table>	00 = CLOSED	07 = FAIL SAFE in progress	01 = OPEN	08 = BUS-2EASY device check in progress	02 = Stop then "OPEN"	09 = Preflashing then "OPEN"	03 = Stop then "CLOSE"	10 = Preflashing then "CLOSE"	04 = In "PAUSE"	11 = OPEN in Partial Opening	05 = During opening stage	12 = in PAUSE Partial Opening	06 = During closing stage	-- = Motor unlocked	
00 = CLOSED	07 = FAIL SAFE in progress															
01 = OPEN	08 = BUS-2EASY device check in progress															
02 = Stop then "OPEN"	09 = Preflashing then "OPEN"															
03 = Stop then "CLOSE"	10 = Preflashing then "CLOSE"															
04 = In "PAUSE"	11 = OPEN in Partial Opening															
05 = During opening stage	12 = in PAUSE Partial Opening															
06 = During closing stage	-- = Motor unlocked															

**6 STORING RADIO CODE**

The control board is equipped with an integrated dual channel decoding system (DS, SLH, LC/RC) known as OMNIDEC. This system can use an additional receiving module (Fig. 15 ref. ①) and radiocontrols of the same frequency to store both total opening (OPEN A) and partial opening (OPEN B) of the automated system.

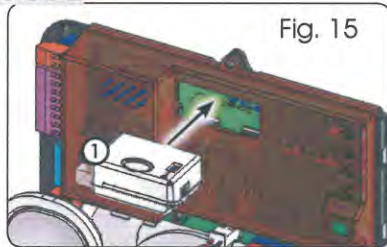

**The 3 types of radio coding (DS, SLH, LC/RC) can co-exist at the same time on the two channels. It is possible to enter up to 256 radio codes subdivided between OPEN A and OPEN B.**

**To use the different coding systems on the same channel, finish the learning process for each system and then repeat the procedure for another..**

**Do not connect any radio devices on SLAVE-configured equipment**


**6.1 STORING DS RADIOCONTROLS**

**It is possible to store a maximum of 256 codes divided between OPEN A and OPEN B/CLOSE.**


1. On the DS radiocontrol, select the required ON - OFF combination of the 12 dip-switches.
2. Press and hold down push-button + (SW3) or - (SW2) and then press the SETUP push-button (SW4), to store total opening (OPEN A) or partial opening (OPEN B/CLOSE) respectively. The corresponding LED (RADIO1 or RADIO2) will begin to flash slowly for 5 secs.
3. Release both push-buttons.
4. Within this 5 second period, press the required push-button on the radiocontrol.
5. The corresponding LED (RADIO1 or RADIO2) will come on with a fixed light for 1 second and then go off to indicate the setting has been stored.
6. To add other codes other than the one you have recently stored, repeat the procedure from point 1.

- To use radiocontrols with the same code, copy the ON - OFF combination to the other radiocontrols without the need to change anything on the control board.

## 6.2 STORING SLH RADIOCONTROLS


 **It is possible to store a maximum of 256 codes divided between OPEN A and OPEN B/CLOSE.**

- On the SLH radiocontrol, press and hold down P1 and P2 simultaneously.
- The radiocontrol LED will begin to flash.
- Release both push-buttons.
- Press and hold down push-button + (SW3) or - (SW2) and then press the SETUP push-button (SW4), to store total opening (OPEN A) or partial opening (OPEN B/CLOSE) respectively. The corresponding LED (RADIO1 or RADIO2) will begin to flash slowly for 5 secs.
- Release both push-buttons.
- Within this 5 sec. period while the radiocontrol LED is still flashing, press and hold down the required push-button on the radiocontrol (the radiocontrol LED will come on with a fixed light).
- The corresponding LED (RADIO1 or RADIO2) will come on with a fixed light for 2 seconds and then go off to indicate the setting has been stored.
- Release the radiocontrol push-button.
- Press the stored radiocontrol push-button twice in quick succession.


 **The automated system will carry out an opening control. Ensure the automated device is free of any obstacle by people or things.**


To enable other radiocontrols with the same system code, transfer the system code of the stored radiocontrol push-button to the corresponding push-button of the radiocontrols to be added, following the procedure below:

- On the stored radiocontrol, press and hold down P1 and P2 simultaneously.
- The radiocontrol LED will begin to flash.
- Release both push-buttons.
- Press the stored push-button and hold down (the radiocontrol LED will come on with a fixed light).
- Bring the radiocontrols closer to one another, press and hold down the corresponding push-button of the radiocontrol to be added, releasing only once the LED on the radiocontrol has issued a double flash to indicate that it has been stored.
- Press the stored radiocontrol push-button twice in quick succession.

 **The automated system will carry out an opening control. Ensure the automated device is free of any obstacle by people or things.**

## 6.3 STORING LC/RC RADIOCONTROLS

 **It is possible to store a maximum of 256 codes divided between OPEN A and OPEN B/CLOSE.**

 **Use the LC/RC remote controls only with a 433 MHz receiving module.**

- Press and hold down push-button + (SW3) or - (SW2) and then press the SETUP push-button (SW4), to store total opening (OPEN A) or partial opening (OPEN B/CLOSE) respectively. The corresponding LED (RADIO1 or RADIO2) will begin to flash slowly for 5 secs.
- Release the push-button.
- Within this 5 second period, press the required push-button on the LC/RC remote control.
- The LED will come on with a fixed light for 1 second, indicating that the unit has been stored, and then resume flashing for an additional 5 seconds during which time another radiocontrol may be stored.
- Once the 5 seconds are up, the LED will go off to indicate that the procedure is complete.

### 6.3.1 STORING LC/RC RADIOCONTROLS REMOTELY


With LC/RC radiocontrols, other radiocontrols may be stored in remote mode, i.e. without operating directly on the board, using a previously stored radiocontrol.

- Obtain a radiocontrol already stored on one of its 2 channels (OPEN A or OPEN B/CLOSE).
- Press and hold down push-buttons P1 and P2 simultaneously until both LEDs flash slowly for 5 secs.
- Within 5 seconds, push the previously stored radiocontrol push-button to activate the learning stage on the selected channel.
- The LED on the board corresponding to the channel being stored (RADIO1 or RADIO2) flashes for 5 seconds, within which time the code of another radiocontrol must be sent.
- The LED will come on with a fixed light for 1 second, indicating that the unit has been stored, and then resume flashing for an additional 5 seconds during which time other radiocontrols may be stored and then it will go off.

### 6.4 RADIOCONTROLS DELETION PROCEDURE

To delete **ALL** the codes of the radiocontrols entered, simply press down together the two push-buttons + (SW3) and - (SW2), then press the SETUP push-button (SW4) for 1 second, and hold the first two push-buttons pressed for 10 secs.

- The 2 LEDs RADIO1 and RADIO2 will flash quickly for 10 secs.
- The 2 LEDs will come on with a fixed light for 2 seconds and then go off (deletion carried out).
- Release both push-buttons.


 **This operation is NOT reversible. All the codes of the radiocontrols stored as OPEN A and as OPEN B/CLOSE will be deleted.**

7 OPERATIONAL START-UP

7.1 CHECKING THE LEDS

After making all the connections and powering the board, check the status of the LEDs against the status of the inputs in the following table (in Fig. 16, the condition where the automated system is closed in stand-by).

These LEDs indicate the status of the board inputs and are of considerable importance to automated system movement:

Note that:  LED ON = contact closed  LED OFF = contact open

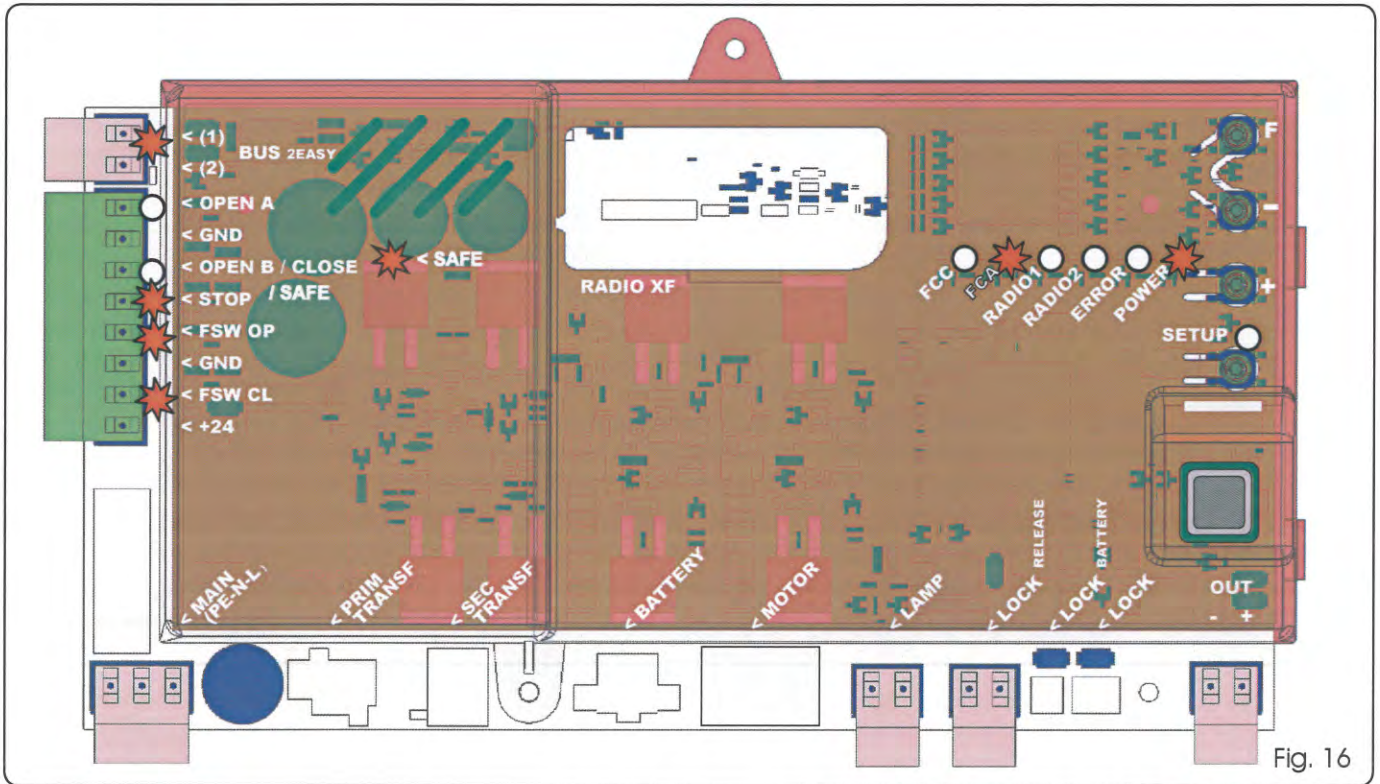








Fig. 16

Leds FCA and FCC represent the N.C. contacts of the limit switch built into the board that open when engaged and turn off the associated LED:


Automated system CLOSED	FCA 
	FCC  FCC engaged
Automated system OPEN	FCA  FCA engaged
	FCC 


 The STOP (SAFE), FSW/CL, FSW OP, OPEN B inputs configured as SAFE are safety inputs with N.C. (Normally Closed) contact and therefore the corresponding LEDs must be ON when the automated system is at rest, and off when the connected device is used.


 The OPEN A, OPEN B/CLOSE inputs are inputs with N.O. (Normally Open) contact and therefore the corresponding LEDs must be OFF when the automated system is at rest, and on when the connected device is used.

Tab. 3 - Description of POWER LED

Fixed ON	Mains-powered
Flashing	Battery-powered
Off	Board off

 When using equipment programmed as SLAVE the LEDs corresponding to terminal board J13 must be off.

 ERROR LED flashing indicates alarm in progress (situation does not impair gate operation)

 ERROR LED on with a fixed light indicates an error in progress (situation that locks operation until the cause of the error has been removed)

7.2 BATTERY OPERATION

 ATTENTION

To optimise energy consumption and protect the charge, during battery operation, when the automated system is stopped and the system is on stand-by, the LCD1 display, the BUS 2easy LED and the FCC and FCA LED will be off while the POWER LED flashes.

In this phase it is in any case possible to view the state of the automated system. To do this it is sufficient to briefly press "+" on the board. Following brief pressure, the LCD1 display shows the state of the automated system for approximately 2 seconds to then go off again. Instead, during normal operation all the diagnostic LEDs and the display state signals become consistent with the state of the automated system (see Fig. 16).

ENGLISH




7.3 POSITIONING LIMIT SWITCHES

**!** To ensure correct positioning of the limit switch magnets, the control unit must be installed and correctly connected with all control and safety accessories.

The operator is equipped with a magnetic limit switch sensor built directly into the electronic control board. The gate is stopped, during opening or closing, when the polarised magnet secured to the upper part of the rack activates the sensor.

1. Check that the operator is set for manual operating mode as described in the instructions for the operator.
2. Move the gate to **opening** position manually, leaving 40 mm from the limit switch mechanical stop (see Fig. 17).
3. Slide the magnet with the **CIRCLE** on the rack in the direction of the motor. As soon as the LED for the FCA limit switch on the board goes off, secure with the appropriate screws.
4. Move the gate to **closing** position manually, leaving 40 mm from the limit switch mechanical stop.
5. Slide the magnet with the **SQUARE** on the rack in the direction of the motor. As soon as the LED for the FCC limit switch on the board goes off, secure with the appropriate screws.
6. Check that the relevant limit switch LED goes off correctly at the end of the opening and closing movement and make the necessary changes to the position of the limit switch magnet position if necessary.

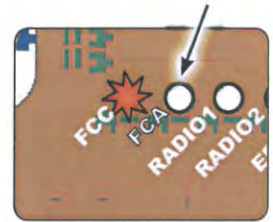

ENGLISH

**!** To avoid damage to the operator and/or interruptions in the operation of the automated system, approximately 40 mm must be left from the mechanical limit switch stops.

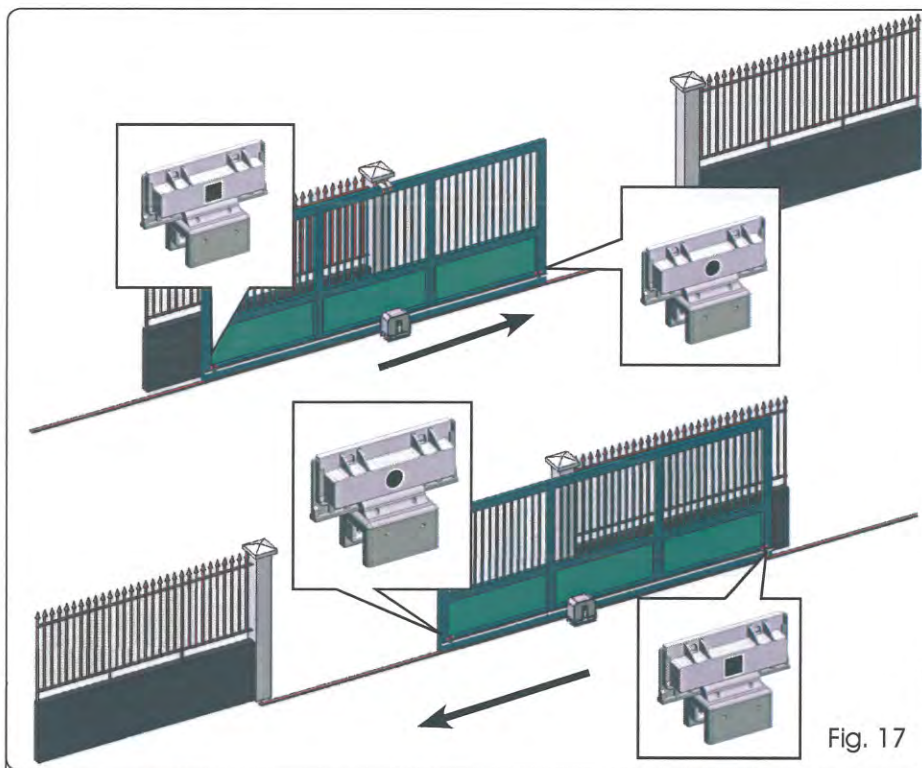


Fig. 17



For correct operation of the operator, the magnet with the **CIRCLE** must be used as an **OPENING** limit switch and the magnet with the **SQUARE** must be used as a **CLOSING** limit switch.

(SEE FIG. 17)

When using a system with **MASTER/SLAVE** configuration, the limit switch magnets must be installed as shown in Fig. 18.

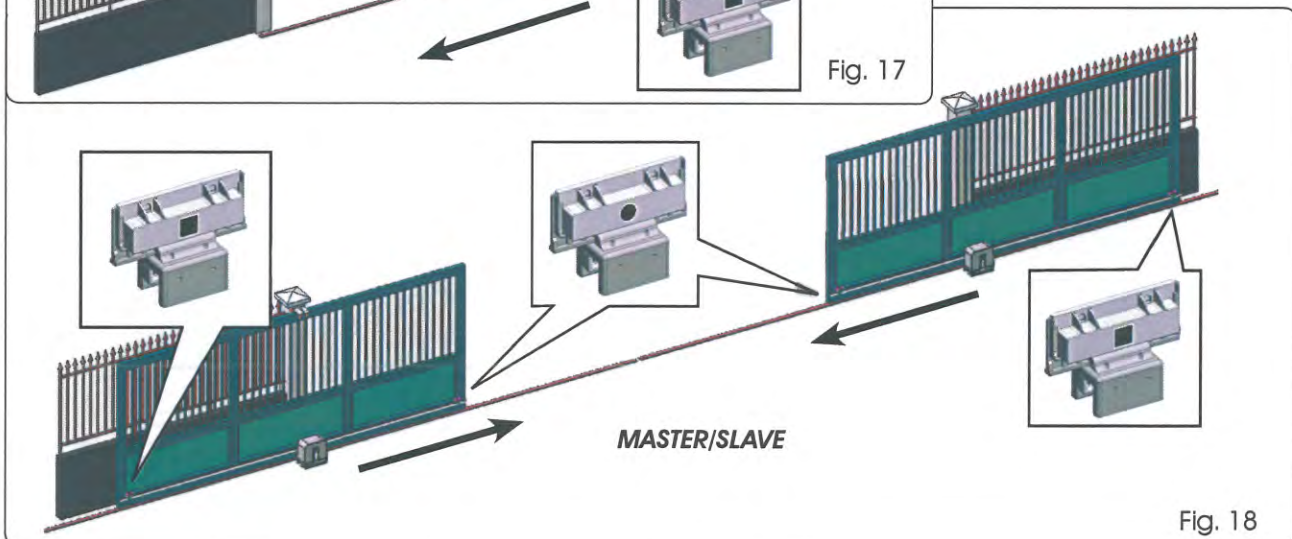





Fig. 18


## 7.4 MASTER / SLAVE CONFIGURATIONS

Should you need to build a system with opposing leaves that must be activated simultaneously for opening and closing the gate, you must connect and configure two E721 devices in Master/Slave mode. The MASTER equipment (parameter **Ct** of the first programming level configured as **MA**) must have all the necessary connections for correct operation of the system (photocells, safety switches, radio, opening pulses, flashing light) while the SLAVE equipment (parameter **Ct** of the first programming level configured as **SL**), must not be wired with terminal board J13, as all the inputs present are completely ignored. The two devices will communicate with each other through BUS-2EASY using two-pole **POLARISED** wiring on the J12 terminal board.

The MASTER device will completely control the SLAVE device through BUS-2EASY and will manage all the movements and time of both leaves.

-  **Avoid any type of connection and wiring to terminal board J13 of the SLAVE unit.**
-  **The BUS connection between the two boards must be POLARISED following the sequence of the poles of the J12 terminal board (POLE (1) - POLE (2)) - (see Fig. 19).**
-  **When a unit is configured as a SLAVE, this will force the values of some programming parameters no longer displayed in the menu (LO-PA-Pb-Ph-Op). By placing the board in MASTER mode again, the previously forced values are stored in the program.**

### 7.4.1 MASTER / SLAVE WIRING

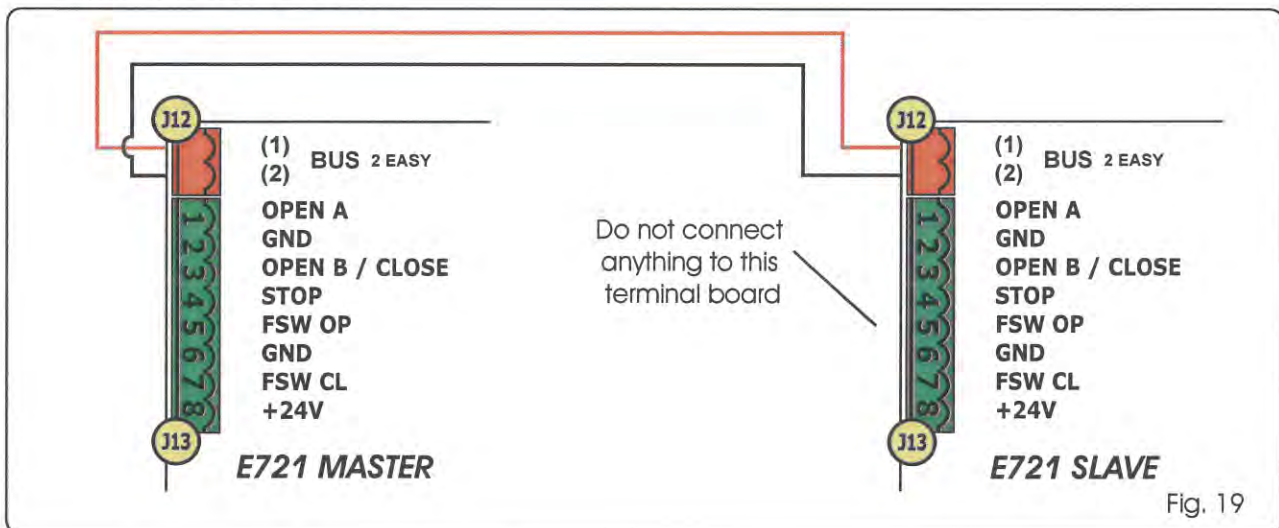

### 7.4.2 MASTER/SLAVE SETUP PROCEDURE


-  **The SETUP request signalled by the flashing **50** on the display can occur both on the MASTER unit and on the SLAVE unit. In the latter case, the MASTER unit will display an error **91**. In any case, the SETUP procedure can only be started from the MASTER unit.**


To SETUP a MASTER/SLAVE system, follow the steps below:

1. Release both leaves, place them in the middle of travel and lock again (see procedure no.1 Par. 7.5 SETUP)
2. Keep pressed the SETUP button on the MASTER board until the MASTER gate begins to move.
3. At this point the MASTER gate will perform a complete SETUP procedure (see Par. 7.5 SETUP)
4. Once you have correctly completed the SETUP of the MASTER board, the complete SETUP procedure of the SLAVE board begins (see Par. 7.5 SETUP).
5. Once this procedure has also been completed the MASTER checks the position of the SLAVE leaf and places it in the same position (open or closed) as the MASTER leaf.
6. Procedure completed.

-  **In case of error or non-completion of the above-mentioned SETUP procedure, you must repeat it completely starting from point no.1.**

**7.5 SETUP**

 When the board is powered when no **SETUP** has ever been carried out, or if the board requires it, the code **50** will flash on the display together with the **SETUP LED** to indicate that **SETUP** must be carried out.


 To ensure the effective outcome of the **SETUP** procedure, carefully check the correct polarity of the magnetic limit switches as described in the previous paragraph.

Proceed as follows to carry out the **SETUP**:

1. **Place the gate at half its travel (very important for a successful SETUP) and check that both the FCA and FCC LEDs are on. Otherwise, the board will signal error 12 (see tab. 5)**
2. Press and hold the **SETUP (SW4)** push-button until the gate begins to move slowly and stops when it reaches the limit switch. If the limit switch reached is the closing switch (with the **SQUARE**) the device stores that point as the **closing** stop, conversely if the limit switch is the opening switch (with the **CIRCLE**) the device stores that point as the **opening** stop. During that stage, **51** flashes on the display
3. The gate automatically begins to move slowly in the opposite direction and then stops when it reaches the limit switch. If the limit switch reached is the opening switch (with the **SQUARE**) the device stores that point as the **opening** stop, conversely if the limit switch is the closing switch (with the **SQUARE**) the device stores that point as the **closing** stop. During that stage, **53** flashes on the display
4. According to the final limit switch reached, the device takes up a status of closed (**00**) or open (**01**). In the second case, issue an **OPEN** pulse to close the gate.

**8 TESTING THE AUTOMATED SYSTEM**

After installation and programming, check the system is operating correctly. Above all, check that the safety devices operate correctly and ensure that the current safety regulations are met.


 Remember that the second programming level features the encoder configuration parameter (parameter **EC**). This "virtual" encoder located on the board acts as an anti-crushing device. During the open/closing phase, should the gate collide with an obstacle, the "virtual" encoder will cause the motion to reverse. At the next motion in the same direction, an obstacle in the same position will cause the motor to stop. It is essential to correctly configure this parameter to adjust the correct sensitivity of the "virtual" encoder with respect to obstacles during motion.

**9 ALARM AND ERROR SIGNALS**

If **alarms** occur (conditions that do not impair the operation of the gate) or **errors** (conditions that lock the gate operation) the display shows a number relating to the current condition.

 The **ALARM** or **ERROR** signals disappear at the next cycle only if the triggering cause is removed.

**9.1 ALARMS**


 When an **ALARM** occurs, the **ERROR LED** begins to flash and a number relating to the current fault appears on the display when the **+ and - keys** are pressed.

Tab. 4 indicates all the alarms that may be shown on the display.

**Tab. 4 - Alarms**

<b>22</b>	Limited MOTOR current
<b>24</b>	LAMP output short-circuited
<b>27</b>	Obstacle detection (visible for 10 secs)
<b>30</b>	XF radio code memory-module full (visible for 10 secs)
<b>40</b>	Service request
<b>46</b>	Forced default programming reset


**9.2 ERRORS**

 When an **ERROR** occurs, **LED DL20** comes on with a fixed light and a number relating to the current fault appears on the display when the **+ and - keys** are pressed.


Tab. 5 indicates all the errors that may be shown on the display.


**Tab. 5 - Errors**

<b>01</b>	Board faulty
<b>03</b>	Motor faulty
<b>05</b>	FailSafe error
<b>06</b>	Motor lock locked closed (check the motor lock and replace if necessary)
<b>07</b>	Gate too heavy or too much friction (try to increase motor power)
<b>08</b>	BUS-2EASY device error (e.g. same address on two photocell pairs; check address)
<b>09</b>	Bus2Easy anomaly
<b>10</b>	Both limit switches with the same polarity
<b>12</b>	Limit switch engaged at the beginning of <b>SETUP</b>
<b>15</b>	Time-out finished
<b>90</b>	No communication with the <b>SLAVE</b> unit - <b>SLAVE</b> unit missing
<b>91</b>	Error on the <b>SLAVE</b> unit
<b>92</b>	Error on the <b>SLAVE</b> unit
<b>97</b>	Configuration error (C720 detected). Repeat setup
<b>98</b>	Configuration error (C721 detected). Repeat setup
<b>99</b>	Board faulty

 Errors **90 91 and 92** are displayed only on **E721** configured as **MASTER** and in particular **91 and 92** indicate errors present on the **SLAVE** unit. Should such errors be displayed, we recommend you check on the **SLAVE** unit the type of error shown on the display to solve it and restore correct operation of the system.

10 FUNCTION LOGICS

 In brackets, the effects on the other inputs when the pulse is active.

 If enabled during leaf motion, the SAFE command will immediately and completely reverse it; when the automated system is stopped, if kept enabled it will prevent its movement.

 The CLOSE command can be enabled on the OPEN B input from programming level 2.

ENGLISH

LOGIC "E"		PULSES					
STATUS OF AUTOMATED SYSTEM	OPEN A	OPEN B	CLOSE	STOP	FSW OP	FSW CL	FSW CL/OP
CLOSED	opens the gate	opens the gate partially	no effect	no effect (OPEN inhibited)	no effect (OPEN inhibited)	no effect	no effect (OPEN inhibited)
DURING OPENING	locks operation (1)	locks operation	recloses the gate	locks operation	see 2nd level prog.	no effect	locks and opens on disengagement (OPEN locks - stores CLOSE)
OPEN	recloses the gate (1)	recloses the gate	recloses the gate	no effect (OPEN/CLOSE inhibited)	no effect	no effect (CLOSE inhibited)	no effect (OPEN/CLOSE inhibited)
DURING CLOSING	reopens the gate	reopens the gate	no effect	locks operation	no effect	reverses to opening (see 2nd level prog.)	locks and opens on disengagement (OPEN locks - stores CLOSE)
LOCKED	closes the gate	closes the gate	closes the gate	no effect (OPEN/CLOSE inhibited)	no effect (OPEN inhibited)	no effect (CLOSE inhibited)	no effect (OPEN locks - stores CLOSE)

LOGIC "EP"		PULSES					
STATUS OF AUTOMATED SYSTEM	OPEN A	OPEN B	CLOSE	STOP	FSW OP	FSW CL	FSW CL/OP
CLOSED	opens the gate	opens the gate partially	no effect	no effect (OPEN inhibited)	no effect (OPEN inhibited)	no effect	no effect (OPEN inhibited)
DURING OPENING	locks operation (1)	locks operation	recloses the gate	locks operation	see 2nd level prog.	no effect	locks and opens on disengagement (OPEN locks - stores CLOSE)
OPEN	recloses the gate (1)	recloses the gate	recloses the gate	no effect (OPEN/CLOSE inhibited)	no effect	no effect (CLOSE inhibited)	no effect (OPEN/CLOSE inhibited)
DURING CLOSING	locks operation	locks operation	no effect	locks operation	no effect	reverses to opening (see 2nd level prog.)	locks and opens on disengagement (OPEN locks - stores CLOSE)
LOCKED	resumes motion in reverse direction. After STOP, always closes	resumes motion in reverse direction. After STOP, always closes	closes the gate	no effect (OPEN/CLOSE inhibited)	no effect (OPEN inhibited)	no effect (CLOSE inhibited)	no effect (OPEN locks - stores CLOSE)

LOGIC "A"		PULSES					
STATUS OF AUTOMATED SYSTEM	OPEN A	OPEN B	CLOSE	STOP	FSW OP	FSW CL	FSW CL/OP
CLOSED	opens and recloses after the pause time	opens the gate partially and closes it after pause time B	no effect	no effect (OPEN inhibited)	no effect (OPEN inhibited)	no effect	no effect (OPEN inhibited)
DURING OPENING	no effect (1)	no effect	recloses the gate	locks operation	see 2nd level prog.	no effect	locks and opens on disengagement (stores CLOSE)
OPEN IN PAUSE	reloads pause time (1)	reloads pause time B	recloses the gate	locks operation	no effect	reloads pause time (CLOSE inhibited)	reloads pause time (CLOSE inhibited)
DURING CLOSING	reopens the gate	reopens the gate	no effect	locks operation	no effect	reverses to opening (see 2nd level prog.)	locks and opens on disengagement (stores CLOSE)
LOCKED	closes the gate	closes the gate	closes the gate	no effect (OPEN/CLOSE inhibited)	no effect (OPEN inhibited)	no effect (CLOSE inhibited)	no effect (OPEN/CLOSE inhibited)

LOGIC "A1"		PULSES					
STATUS OF AUTOMATED SYSTEM	OPEN A	OPEN B	CLOSE	STOP	FSW OP	FSW CL	FSW CL/OP
CLOSED	opens and recloses after the pause time	opens the gate partially and closes it after pause time B	no effect	no effect (OPEN inhibited)	no effect (OPEN inhibited)	no effect	no effect (OPEN inhibited)
DURING OPENING	no effect (1)	no effect	recloses the gate	locks operation	see 2nd level prog.	continues to open and recloses immediately	locks and opens on disengagement (stores CLOSE)
OPEN IN PAUSE	reloads pause time (1)	reloads pause time B	recloses the gate	locks operation	no effect	locks and immediately closes on disengagement	reloads pause time (CLOSE inhibited)
DURING CLOSING	reopens the gate	reopens the gate	no effect	locks operation	no effect	reverses to opening (see 2nd level prog.)	locks and opens on disengagement (stores CLOSE)
LOCKED	closes the gate	closes the gate	closes the gate	no effect (OPEN/CLOSE inhibited)	no effect (OPEN inhibited)	no effect (CLOSE inhibited)	no effect (OPEN/CLOSE inhibited)

(1) During the partial opening cycle, an OPEN A pulse causes total opening

LOGIC 'AP'	PULSES							
	STATUS OF AUTOMATED SYSTEM	OPEN A	OPEN B	CLOSE	STOP	FSW OP	FSW CL	FSW CL/OP
CLOSED	opens and recloses after the pause time	opens the gate partially and closes it after pause time B	no effect	no effect (OPEN inhibited)	no effect (OPEN inhibited)	no effect	no effect	no effect (OPEN inhibited)
DURING OPENING	locks operation (1)	locks operation	recloses the gate	locks operation	see 2nd level prog.	no effect	locks and opens on disengagement (OPEN locks - stores CLOSE)	
OPEN IN PAUSE	locks operation (1)	locks operation	recloses the gate	locks operation	no effect	reloads pause time (CLOSE inhibited)	reloads pause time (CLOSE inhibited)	
DURING CLOSING	reopens the gate	reopens the gate	no effect	locks operation	no effect	reverses to opening (see 2nd level prog.)	locks and opens on disengagement (OPEN locks - stores CLOSE)	
LOCKED	closes the gate	closes the gate	closes the gate	no effect (OPEN/CLOSE inhibited)	no effect (OPEN inhibited)	no effect (CLOSE inhibited)	no effect (OPEN/CLOSE inhibited)	

LOGIC 'A' (2)	PULSES							
	STATUS OF AUTOMATED SYSTEM	OPEN A	OPEN B	CLOSE	STOP	FSW OP	FSW CL	FSW CL/OP
CLOSED	opens and recloses after the pause time	opens the gate partially and closes it after pause time B	no effect	no effect (OPEN inhibited)	no effect (OPEN inhibited)	no effect	no effect	no effect (OPEN inhibited)
DURING OPENING	no effect (1)	no effect	recloses the gate	locks operation	reverses to closing (1)	no effect	locks and opens on disengagement (stores CLOSE)	
OPEN IN PAUSE	reloads pause time (1)	reloads pause time	recloses the gate	locks operation	no effect	reloads pause time (CLOSE inhibited)	reloads pause time (CLOSE inhibited)	
DURING CLOSING	reopens the gate	reopens the gate	no effect	locks operation	no effect	reverses to opening (see 2nd level prog.)	locks and opens on disengagement (stores CLOSE)	
LOCKED	closes the gate	closes the gate	closes the gate	no effect (OPEN/CLOSE inhibited)	no effect (OPEN inhibited)	no effect (CLOSE inhibited)	no effect (OPEN/CLOSE inhibited)	

LOGIC 'S'	PULSES							
	STATUS OF AUTOMATED SYSTEM	OPEN A	OPEN B	CLOSE	STOP	FSW OP	FSW CL	FSW CL/OP
CLOSED	opens and recloses after the pause time	opens the gate partially and closes it after pause time B	no effect	no effect (OPEN inhibited)	no effect (OPEN inhibited)	no effect	no effect	no effect (OPEN inhibited)
DURING OPENING	reverses to closing (1)	reverses to closing (1)	recloses the gate	locks operation	see 2nd level prog.	continues to open and recloses immediately	locks and opens on disengagement (stores CLOSE)	
OPEN IN PAUSE	recloses the gate (1)	recloses the gate	recloses the gate	locks operation	no effect	locks and immediately closes on disengagement	locks and closes on disengagement	
DURING CLOSING	reopens the gate	reopens the gate	no effect	locks operation	no effect	reverses to opening (see 2nd level programming) and closes immediately at the end	locks and on disengagement opens and at the end immediately closes	
LOCKED	closes the gate	closes the gate	closes the gate	no effect (OPEN/CLOSE inhibited)	no effect (OPEN inhibited)	no effect (CLOSE inhibited)	no effect (OPEN/CLOSE inhibited)	

LOGIC 'SP'	PULSES							
	STATUS OF AUTOMATED SYSTEM	OPEN A	OPEN B	CLOSE	STOP	FSW OP	FSW CL	FSW CL/OP
CLOSED	opens and recloses after the pause time	opens the gate partially and closes it after pause time B	no effect	no effect (OPEN inhibited)	no effect (OPEN inhibited)	no effect	no effect	no effect (OPEN inhibited)
DURING OPENING	locks operation (1)	locks operation	recloses the gate	locks operation	see 2nd level prog.	continues to open and recloses immediately	locks and on disengagement opens and at the end immediately closes (OPEN locks - stores CLOSE)	
OPEN IN PAUSE	recloses the gate (1)	recloses the gate	recloses the gate	locks operation	no effect	locks and immediately closes on disengagement	locks and immediately closes on disengagement	
DURING CLOSING	locks operation	locks operation	no effect	locks operation	no effect	reverses to opening (see 2nd level prog.)	locks and opens on disengagement (stores CLOSE)	
LOCKED	resumes motion in reverse direction. After STOP, always closes	resumes motion in reverse direction. After STOP, always closes	recloses the gate	no effect (OPEN/CLOSE inhibited)	no effect (OPEN inhibited)	no effect (CLOSE inhibited)	no effect (OPEN/CLOSE inhibited)	

(1) During the partial opening cycle, an OPEN A pulse causes total opening

LOGIC "SA"	PULSES						
STATUS OF AUTOMATED SYSTEM	OPEN A	OPEN B	CLOSE	STOP	FSW OP	FSW CL	FSW CL/OP
CLOSED	opens and recloses after the pause time	Opens the gate partially and closes it after pause time B	no effect	no effect (OPEN inhibited)	no effect (OPEN inhibited)	no effect	no effect (OPEN inhibited)
DURING OPENING	no effect (1)	no effect	recloses the gate	locks operation	see 2nd level prog.	no effect	locks and opens on disengagement (stores CLOSE)
OPEN IN PAUSE	recloses the gate (1)	recloses the gate	recloses the gate	locks operation	no effect	reloads pause time (CLOSE inhibited)	reloads pause time (CLOSE inhibited)
DURING CLOSING	reopens the gate	reopens the gate	no effect	locks operation	no effect	reverses to opening (see 2nd level prog.)	locks and opens on disengagement (stores CLOSE)
LOCKED	closes the gate	closes the gate	closes the gate	no effect (OPEN/CLOSE inhibited)	no effect (OPEN inhibited)	no effect (CLOSE inhibited)	no effect (OPEN/CLOSE inhibited)

LOGIC "B"	PULSES						
STATUS OF AUTOMATED SYSTEM	OPEN A	/	CLOSE	STOP	FSW OP	FSW CL	FSW CL/OP
CLOSED	opens the gate	/	no effect	no effect (OPEN inhibited)	no effect (OPEN inhibited)	no effect	no effect (OPEN inhibited)
DURING OPENING	no effect	/	closes the gate	locks operation	see 2nd level prog.	no effect	locks and opens on disengagement (stores OPEN/CLOSE)
OPEN	no effect	/	closes the gate	no effect (OPEN/CLOSE inhibited)	no effect	no effect (CLOSE inhibited)	no effect (OPEN/CLOSE inhibited)
DURING CLOSING	opens the gate	/	no effect	locks operation	no effect	reverses to opening (see 2nd level prog.)	locks and opens on disengagement (stores OPEN/CLOSE)
LOCKED	opens the gate	/	closes the gate	no effect (OPEN/CLOSE inhibited)	no effect (OPEN inhibited)	no effect (CLOSE inhibited)	no effect (OPEN/CLOSE inhibited)

LOGIC bC	PULSES DURING OPENING/COMMANDS MAINTAINED DURING CLOSING			PULSES			
STATUS OF AUTOMATED SYSTEM	OPEN A	/	CLOSE	STOP	FSW OP	FSW CL	FSW CL/OP
CLOSED	opens the gate	/	no effect	no effect (OPEN inhibited)	no effect (OPEN inhibited)	no effect	no effect (OPEN inhibited)
DURING OPENING	no effect	/	closes the gate	locks operation	see 2nd level prog.	no effect	locks and opens on disengagement (stores OPEN/CLOSE)
OPEN	no effect	/	closes the gate	no effect (OPEN/CLOSE inhibited)	no effect	no effect (CLOSE inhibited)	no effect (OPEN/CLOSE inhibited)
DURING CLOSING	opens the gate	/	no effect	locks operation	no effect	reverses to opening (see 2nd level prog.)	locks and opens on disengagement (stores OPEN/CLOSE)
LOCKED	opens the gate	/	closes the gate	no effect (OPEN/CLOSE inhibited)	no effect (OPEN inhibited)	no effect (CLOSE inhibited)	no effect (OPEN/CLOSE inhibited)

LOGIC "C"	COMMANDS MAINTAINED			PULSES			
STATUS OF AUTOMATED SYSTEM	OPEN A	/	CLOSE	STOP	FSW OP	FSW CL	FSW CL/OP
CLOSED	opens the gate	/	no effect	no effect (OPEN inhibited)	no effect (OPEN inhibited)	no effect	no effect (OPEN inhibited)
DURING OPENING	no effect	/	closes the gate	locks operation	see 2nd level prog.	no effect	locks and on disengagement 2nd level prog.
OPEN	no effect	/	closes the gate	no effect (OPEN/CLOSE inhibited)	no effect	no effect (CLOSE inhibited)	no effect (OPEN/CLOSE inhibited)
DURING CLOSING	opens the gate	/	no effect	locks operation	no effect	locks operation	locks operation
LOCKED	opens the gate	/	closes the gate	no effect (OPEN/CLOSE inhibited)	no effect (OPEN inhibited)	no effect (CLOSE inhibited)	no effect (OPEN/CLOSE inhibited)

(1) During the partial opening cycle, an OPEN A pulse causes total opening  
 (2) When turned on, the board checks the inputs and if an OPEN A or B command is active, it opens the leaf or gate. Otherwise it closes it.

## SEDE - HEADQUARTERS

### FAAC S.p.A.

Via Calari, 10  
40069 Zola Predosa (BO) - ITALY  
Tel. +39 051 61724 - Fax +39 051 758518  
www.faac.it - www.faacgroup.com

## ASSISTENZA IN ITALIA

### SEDE

tel. +39 051 6172501  
www.faac.it/ita/assistenza

### MILANO

tel +39 02 66011163  
filiale.milano@faacgroup.com

### ROMA

tel +39 06 41206137  
filiale.roma@faacgroup.com

### FIRENZE

tel. +39 055 301194  
filiale.firenze@faacgroup.com

### PADOVA

tel +39 049 8700541  
filiale.padova@faacgroup.com

### TORINO

tel +39 011 6813997  
filiale.torino@faacgroup.com

## SUBSIDIARIES

### AUSTRIA

FAAC GMBH  
Salzburg - Austria  
tel. +43 662 8533950  
www.faac.at

FAAC TUBULAR MOTORS  
tel. +49 30 56796645  
faactm.info@faacgroup.com  
www.faac.at

### GERMANY

FAAC GMBH  
Freilassing - Germany  
tel. +49 8654 49810  
www.faac.de

FAAC TUBULAR MOTORS  
tel. +49 30 5679 6645  
faactm.info@faacgroup.com  
www.faac.de

### SPAIN

CLEM, S.A.U.  
S. S. de los Reyes, Madrid - Spain  
tel. +34 091 358 1110  
www.faac.

### SWITZERLAND

FAAC AG  
Altdorf - Switzerland  
tel. +41 41 8713440  
www.faac.ch

### AUSTRALIA

FAAC AUSTRALIA PTY LTD  
Homebush, Sydney - Australia  
tel. +61 2 87565644  
www.faac.com.au

### INDIA

FAAC INDIA PVT. LTD  
Noida, Delhi - India  
tel. +91 120 3934100/4199  
www.faacindia.com

### BENELUX

FAAC BENELUX NV/SA  
Brugge - Belgium  
tel. +32 50 320202  
www.faacbenelux.com

FAAC TUBULAR MOTORS  
tel. +31 475 406014  
faactm.info@faacgroup.com  
www.faacbenelux.com

### IRELAND

NATIONAL AUTOMATION LIMITED  
Boyle, Co. Roscommon - Ireland  
tel. +353 071 9663893  
www.faac.ie

### MIDDLE EAST

FAAC MIDDLE EAST FZE  
Dubai Silicon Oasis free zone  
tel. +971 4 372 4187  
www.faac.ae

### CHINA

FAAC SHANGHAI  
Shanghai - China  
tel. +86 21 68182970  
www.faacgroup.cn

### NORDIC REGIONS

FAAC NORDIC AB  
Perstorp - Sweden  
tel. +46 435 779500  
www.faac.se

### FRANCE

FAAC FRANCE  
Saint Priest, Lyon - France  
tel. +33 4 72218700  
www.faac.fr

FAAC FRANCE - AGENCE PARIS  
Massy, Paris - France  
tel. +33 1 69191620  
www.faac.fr

FAAC FRANCE - DEPARTEMENT  
VOLETS  
Saint Denis de Pile - Bordeaux - France  
tel. +33 5 57551890  
www.faac.fr

### POLAND

FAAC POLSKA SP.ZO.O  
Warszawa - Poland  
tel. +48 22 8141422  
www.faac.pl

### RUSSIA

FAAC RUSSIA LLC  
Moscow - Russia  
tel. +7 495 646 24 29  
www.faac.ru

### TURKEY

FAAC OTOMATİK GEÇİS SİSTEMLERİ  
SAN. VE TİC. LTD. ŞTİ.  
Çağlayan, Kağıthane, İstanbul - Turkey  
tel. +90 (0)212 - 3431311  
www.faac.com.tr

### UNITED KINGDOM

FAAC UK LTD.  
Basingstoke, Hampshire - UK  
tel. +44 1256 318100  
www.faac.co.uk

### U.S.A.

FAAC INTERNATIONAL INC  
Rockledge, Florida - U.S.A.  
tel. +1 904 4488952  
www.faacusa.com

FAAC INTERNATIONAL INC  
Fullerton, California - U.S.A.  
tel. +1 714 446 9800  
www.faacusa.com