



e-LOOP Fitment/Setup Notes


1. NOTE: Ensure e-LOOP Sensor is fitted *Centrally* to the most frequently driven path. Avoiding Unnecessary drive-overs

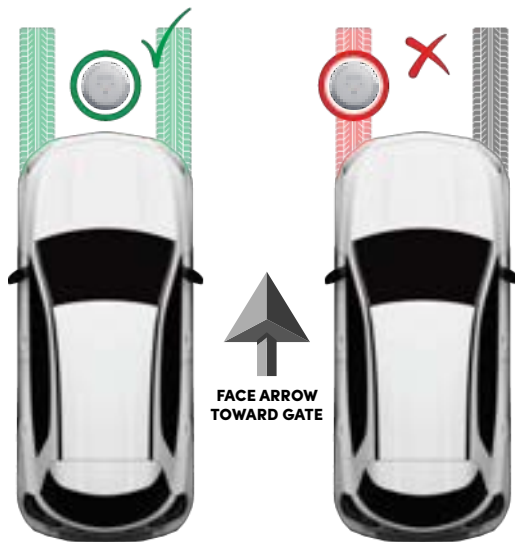

3. NOTE: Do not mount e-LOOP sensor in close proximity to high voltage cables. E.g. Power Lines, electromagnetic interference may affect e-LOOP functionality.

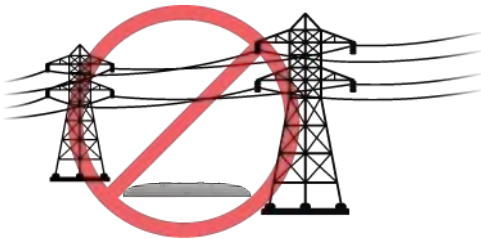

5. NOTE: When interacting with the e-LOOP magnetic buttons. Note the difference between "Hold" & "Press".

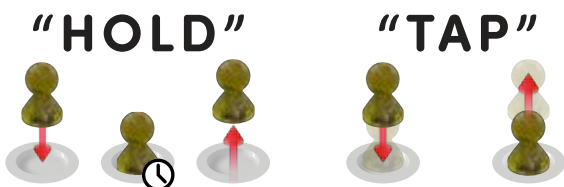


2. NOTE: Always affix e-LOOP sensor to a *Clean, Flat, Level* surface.

Fig. 1 Securing e-LOOP Sensors to the ground using adhesives, may detrimentally effect static & dynamic load capacity.
Fig. 2 & 3 Do not mount e-LOOP sensors to irregular terrain; rocks, debris or sharp terrain may pierce plastic casing under load.
Fig. 4 Do not mount e-LOOP sensors uneven terrain. Improper mating surfaces may effect calibration or damage the e-LOOP.
Fig. 5 Do not mount e-LOOP sensors in flood areas without adequate drainage. Submerged sensors may inconsistent activations, effected calibration, water ingress & soiling.



4. NOTE: Once calibrated, the e-LOOP will require re-calibration when moved. Otherwise a 5 minute wait time is required for the sensor to automatically calibrate.

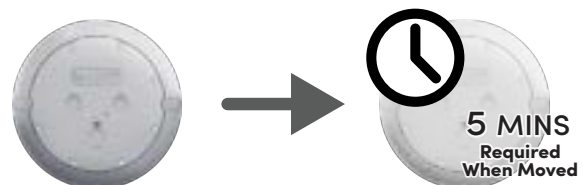

6. NOTE: The e-LOOP Light Industrial is capable of 3 operational modes.

EXIT MODE: Sends a single pulse trigger to receiver upon detection.


PRESENCE MODE: Pulses & Latches relay holding gate open whilst loop still detecting vehicle.

PARKING MODE: Same behaviour as Presence Mode, slower latch, slower release & lower power use.

Step 1 - Coding to e-TRANS

Option 1 | Short Range Coding

1. Hold the CODE Button until the Blue LED illuminates. Now Release the CODE Button.

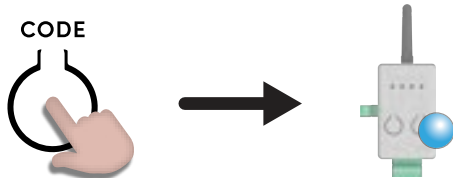

2. Hold the magnet in the CODE Recess. e-LOOP Yellow LED will flash & e-TRANS Blue LED will flash 3 times. Indicating a successful pairing.




Option 2 | Long Range Coding

1. Hold the Magnet in the CODE Recess of the e-LOOP. The Yellow LED will flash once. Now remove the magnet. The Yellow LED will illuminate solid.




2. Go to e-TRANS 50, hold the CODE button until the e-TRANS Blue LED illuminates. Remove finger from CODE button, Blue LED will flash 3 times. The e-LOOP Yellow LED will flash. Indicating a successful pairing. The LEDs will turn off returning back to normal operation

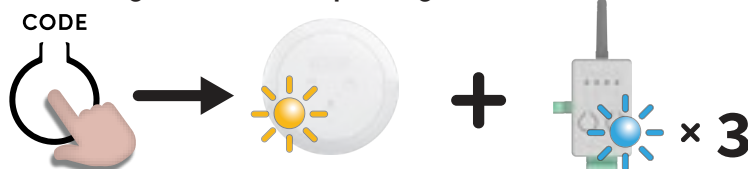

Step 2 - Mounting

Clean desired mounting location of any dirt or debris. Remove the screw caps from the e-LOOP, secure the e-LOOP with the included fasteners. Ensure the e-LOOP is firmly secured & cannot be moved. Reinstall Dust Caps.

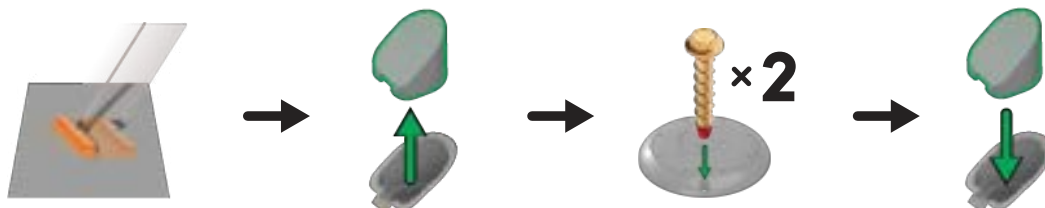

⚠ ALWAYS FIT IN ACCORDANCE WITH FITMENT NOTES. FAILURE TO DO SO MAY VOID WARRANTY

Step 3 - Calibration

1. Remove any metallic objects away from the e-LOOP sensor.
2. Hold Magnet in SET recess on e-LOOP, until the Red LED flashes twice. Then remove the magnet.



3. The e-LOOP will take about 5 seconds to calibrate, once complete the red LED will flash 3 times




NOTE: After Calibration you may get an error indication.

ERROR 1: Low Radio Range - Yellow LED Flash 3 Times

ERROR 2: No Radio Connection - Yellow & Red LED Flash 3 Times.

Un-Calibration

Hold magnet in SET recess on e-LOOP, until red LED flashes 4 times. e-LOOP is now uncalibrated

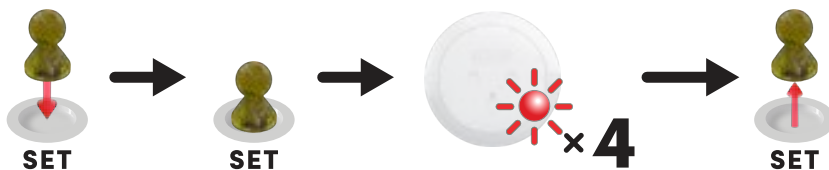


Connecting With e-CONNECT App

The e-LOOP Connect Mobile Application is available for both Android & iPhones. Download to access advanced settings & diagnostics.



Step 1.

- Open the e-LOOP Connect mobile application
- Allow all requested device permissions (bluetooth, wifi, etc)
- Tap the magnet on the CODE recess of your e-LOOP. Yellow LED will illuminate solid
- Press "Scan for Devices"
- Allow the application a moment to scan for devices

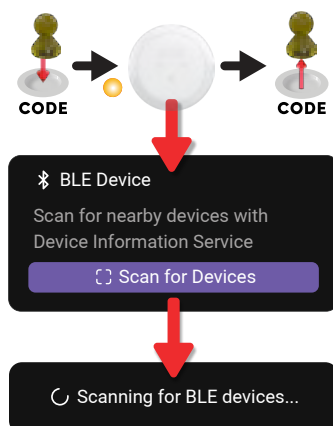


Step 2.

Once e-LOOP is located, details will be shown. Tap "Connect" on the corresponding e-LOOP tab.

Once a successful connection has been established you will be shown a summary of the unit.

You are now ready to make your desired changes.

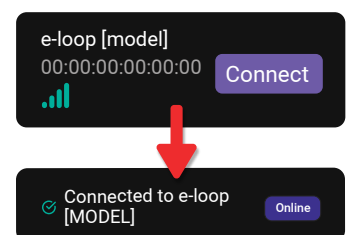


Changing Mode

The e-LOOP Light Industrial has 3 *modes*: Exit, Presence & Parking. These modes can be changed physically & via the e-CONNECT APP.

⚠ NOTE: DO NOT USE PRESENCE MODE AS A PERSONAL SAFETY FUNCTION, IT IS DESIGNED FOR OPERATION ONLY FOR USE WITH VEHICLES NOT PEDESTRIANS.


ENTERING MENU

1. **HOLD** Magnet in **MODE** recess on e-LOOP, until the **Both** LEDs will flash once; then LED indication of current mode will flash

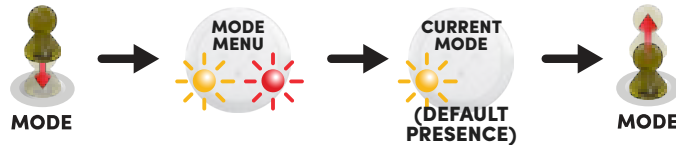

EXIT MODE

2. **HOLD** Magnet in **SET** recess on e-LOOP, until the **Red** LED starts **flashing**; this indicates **EXIT MODE**.

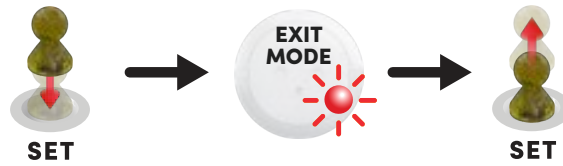


PARKING MODE

3. **HOLD** Magnet in **MODE** recess on e-LOOP, until the **Yellow** LED illuminates **Solid**; this indicates **PARKING**




PRESENCE MODE

4. **HOLD** Magnet in **CODE** recess on e-LOOP, until the **Yellow** LED illuminates **Solid**; this indicates **PRESENCE MODE**.

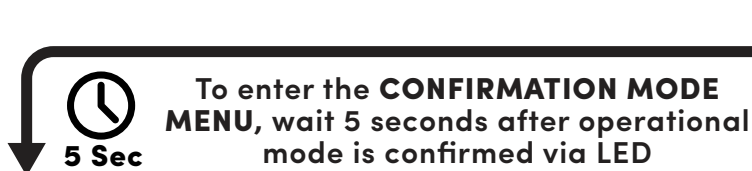


CONFIRMATION MENU

1. Once in the Confirmation Menu, the **Red** LED will illuminate **Solid**. Indicating that Confirmation is **NOT** enabled.
2. To **Enable** Confirmation Mode, Tap magnet on to the **CODE** recess. **Both** the **Yellow & Red** LEDs will illuminate solid. Indicating Confirmation mode is enabled.

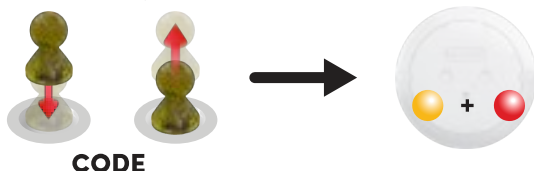

3. Once desired setting is selected, wait 5 Seconds and the Confirmation Menu will be exited automatically. Both LEDs will flash 3 times to indicate this

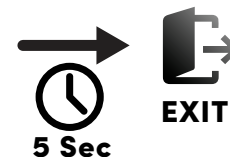

To **EXIT** MENU Wait 10 Seconds



Changing Mode With e-CONNECT App

NOTE: For Connection Instructions Refer to Page 4


Step 1

Scroll down to the Loop Settings menu.

Select the dropdown menu within the Loop Settings section.

Change to mode of choice: Exit, Presence (Default) or Parking.


Once selected, press the X to close the dropdown menu.

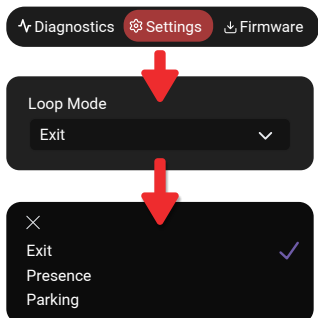

Step 2

Once you have selected the operational mode of your choice, press "Save Loop Settings"


After successfully saving, press "Disconnect Device" to return loop to regular operation.

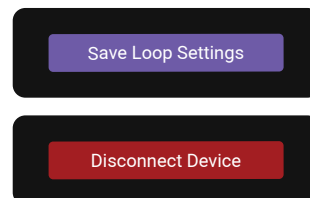

Confirmation Mode

To turn on Confirmation Mode, Scroll down to the Radar Settings menu.

 Tap the switch next to the "Confirmation Mode" label to toggle On/Off.



Resetting e-LOOP to Factory Defaults

To reset the e-LOOP to factory defaults, Hold the Magnet on the CODE recess for 10 seconds until the Yellow LED flashes 3 times.

