


# QUICK START GUIDE

## ONE.2WB RADIO RECEIVER

433.92Mhz 2 Channel Radio Receiver

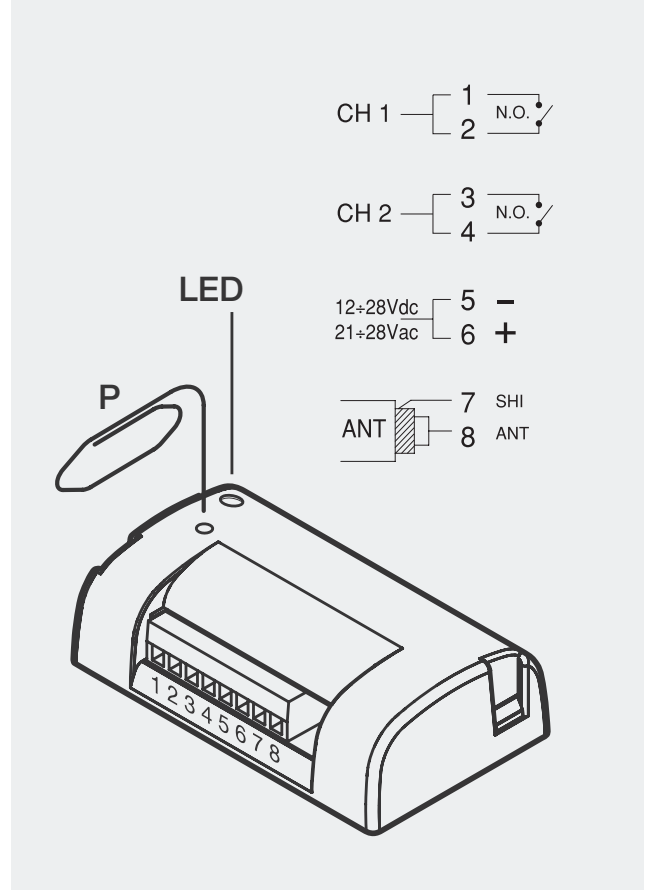

# 1.

### CODE CHANNEL 1 TO PULSE:

1. Press and release the P button once
2. The LED will flash RED, then turn off
3. The LED will then light up solid RED. Within 10 seconds, press the transmitter button. If you have more than one transmitter, you can press one after the other within the 10 seconds slot
4. Leave the receiver to time out, approx 10 seconds

# 2.

### CODE CHANNEL 2 TO PULSE:

1. Press and release the P button twice
2. The LED will flash GREEN, then turn off
3. The LED will then light up solid GREEN. Within 10 seconds, press the transmitter button. If you have more than one transmitter, you can press one after the other within the 10 seconds slot
4. Leave the receiver to time out approx 10 seconds

# 3.

### CODE CHANNEL 1 TO LATCH:

1. Press and release P button 4 times
2. LED will flash RED 5 times followed by one quick RED pulse
3. Press and hold P button for at least 3 seconds, upon release you will see two RED flashes
4. Press and hold P button for at least 3 seconds, upon release you will see three RED flashes
5. Press P button momentarily, receiver will now latch relay one on radio command

# 4.

### CODE CHANNEL 2 TO LATCH:

1. Press and release P button 5 times
2. LED will flash GREEN 5 times followed by one quick GREEN pulse
3. Press and hold P button for at least 3 seconds, upon release you will see two GREEN flashes
4. Press and hold P button for at least 3 seconds, upon release you will see three GREEN flashes
5. Press P button momentarily, receiver will now latch relay two on radio command

