




24 V



D814283 0AR00_04 30-05-23

QUADRO COMANDO
CONTROL PANEL
CENTRALE DE COMMANDE
SELBSTÜBERWACHENDE STEUERUNG
CUADRO DE MANDOS
BEDIENINGSPANEEL

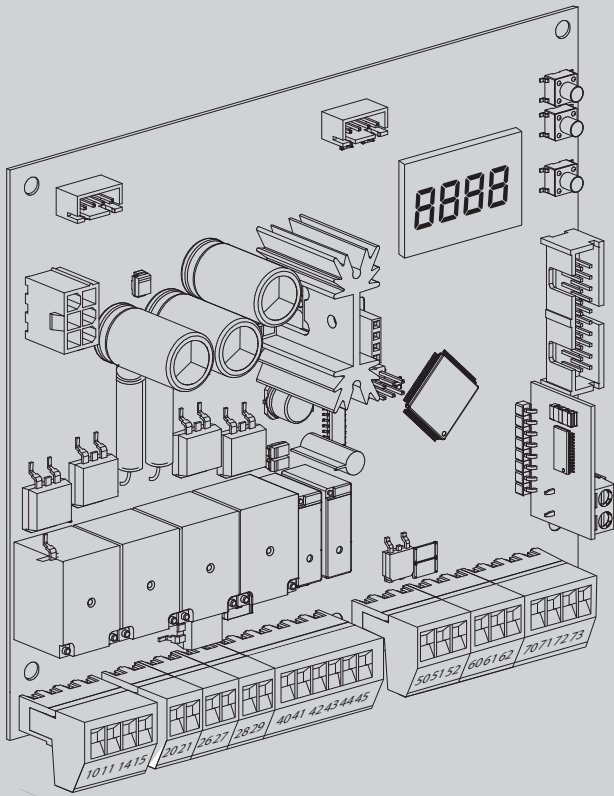

ISTRUZIONI DI INSTALLAZIONE
INSTALLATION MANUAL
INSTRUCTIONS D'INSTALLATION
MONTAGEANLEITUNG
INSTRUCCIONES DE INSTALACION
INSTALLATIEVOORSCHRIFTEN

THALIA BT A80



AZIENDA CON
SISTEMA DI GESTIONE
CERTIFICATO DA DNV GL
= ISO 9001 =
= ISO 14001 =




U-Security

Attenzione! Leggere attentamente le "Avvertenze" all'interno! **Caution!** Read "Warnings" inside carefully! **Attention!** Veuillez lire attentivement les Avertissements qui se trouvent à l'intérieur! **Achtung!** Bitte lesen Sie aufmerksam die „Hinweise“ im Inneren! **¡Atención!** Leer atentamente las "Advertencias" en el interior! **Let op!** Lees de "Waarschuwingen" tigre aan de binnenkant zorgvuldig!

INSTALLAZIONE VELOCE - QUICK INSTALLATION - INSTALLATION RAPIDE SCHNELLINSTALLATION - INSTALACIÓN RÁPIDA - SNELLE INSTALLATIE

PREDISPOSIZIONE TUBI - TUBE ARRANGEMENT PRÉDISPOSITION DES TUYAUX - VORBEREITUNG DER LEITUNGEN DISPOSICIÓN DE TUBOS - VOORBEREIDING LEIDINGEN

A

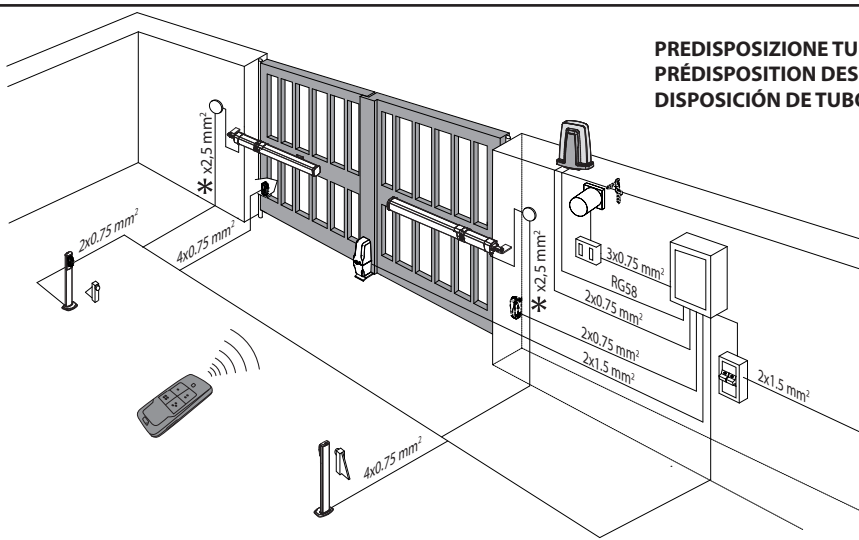


* Vedere specifica motore
See motor specifications
Consultez les caractéristiques du moteur
Siehe Motordaten
Véase especificaciones motor
Zie motorspecificatie

* Connettore scheda memoria estraibile
removable memory card connector
connecteur de carte mémoire amovible
Entfernbarer Speicherkartenanschluss
conector de la tarjeta de memoria extraíble
stekker uitneembare geheugenkaart

* Connettore scheda espansione IO
IO expansion card connector
Connecteur de carte d'extension IO
Steckverbinder der I/O-Erweiterungskarte
Conector tarjeta de expansión IO
Stekker IO-uitbreidingskaart

Antenna - Antenne
Antena - Antenne

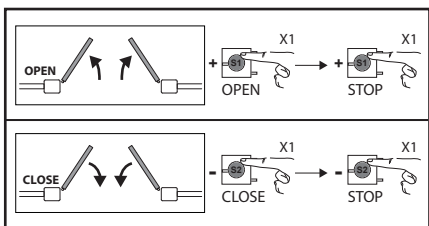


B

Display + tasti programmazione,
Display plus programming keys,
Afficheur et touches de programmation,
Display und Programmierungstasten,
Pantalla más botones de programación,
Display/meerdere toetsen programmeur.

* Connettore 1 scheda opzionale
Connector 1 for optional board
Connecteur 1 carte facultative
Steckverbinder 1 Zusatzkarte
Conector 1 de la tarjeta opcional
Connector 1 optionele kaart

* Connettore 2 scheda opzionale
Connector 2 for optional board
Connecteur 2 carte facultative
Steckverbinder 2 Zusatzkarte
Conector 2 de la tarjeta opcional
Connector 2 optionele kaart

* Connettore alimentazione
Power supply connector
Connecteur d'alimentation
Netzanschluss
Conector de alimentación
Stroomaansluiting

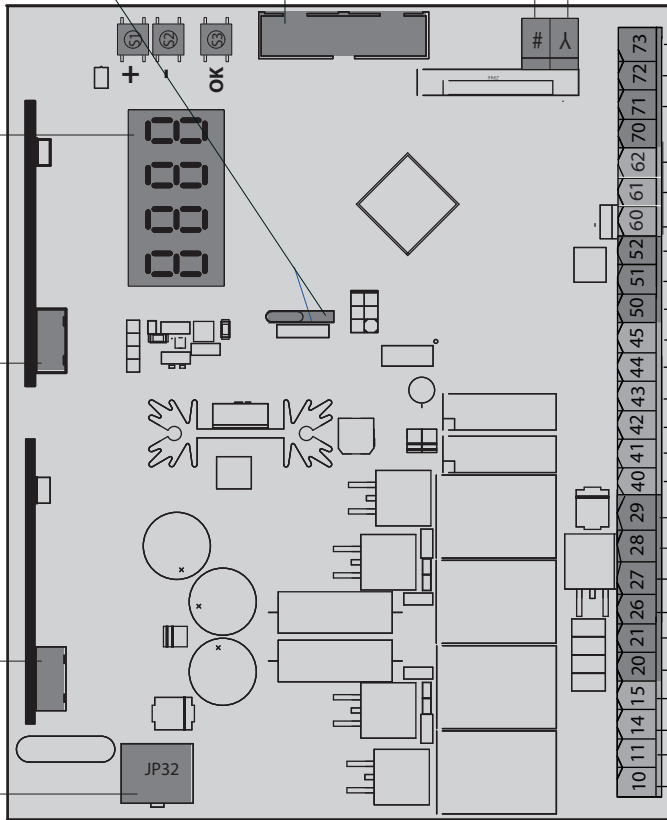

SAFE 2 NC
SAFE 1 NC
STOP NC
COM NO
IC 2 NO
IC 1 NO
COM NO
24 Vsafe+
24V +
24V -
SWO2 / ENC2B
SWC2 / ENC2A
SWO 1 / SW 2 / ENC1B
SWC 1 / SW 1 / ENC1A
+ REF SWE
- REF SWE

Sicurezze
Safety devices
Sécurité
Sicherheitsvorrichtungen
Dispositivos de seguridad
Veiligheden
Comandi / Commands
Commandes/Bedienelemente
Mandos/ Commando's
Alimentazione accessori
Accessories power supply
Alimentation des accessoires
Stromversorgung Zubehör
Alimentación accesorios
Voeding accessoires
Ingressi finecorsa/encoder
Encoder/limit switch inputs
Entrées des fins de course / encodeur
Eingänge Anschlag/Encoder
Entradas finales de carrera
Encoder/ingangen


AUX

Motore / Motor / moteur
Motor / Eindaanslag/Encoder




*
Togliere alimentazione prima di inserire o rimuovere le schede estraibili.
Disconnect the power supply before inserting or removing extractable cards.
Couper l'alimentation avant d'insérer ou de retirer des cartes amovibles.
Trennen Sie die Stromversorgung vor dem Einführen oder Entfernen der Erweiterungskarten.
Cortar la alimentación antes de insertar o extraer las tarjetas.
Schakel de stroom uit alvorens de uitneembare kaarten te plaatsen of te verwijderen.

1

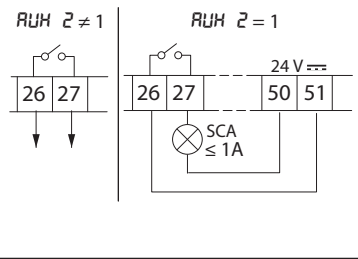


Connettore scheda espansione IO
IO expansion card connector
Connecteur de carte d'extension IO
Steckverbinder der I/O-Erweiterungskarte
Conector tarjeta de expansión IO
Stekker IO-uitbreidingskaart


2

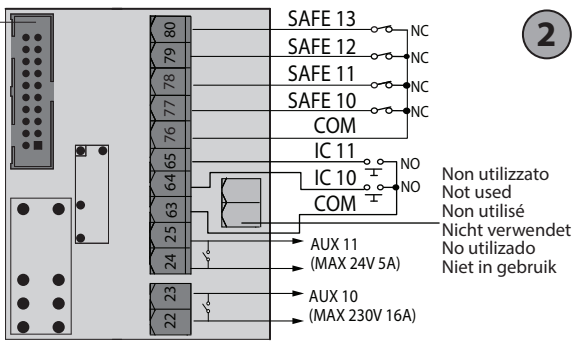

Non utilizzato
Not used
Non utilisé
Nicht verwendet
No utilizado
Niet in gebruik

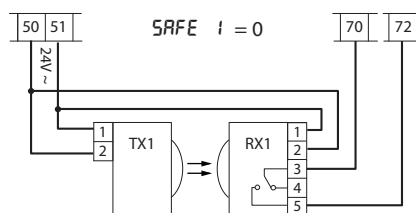C

Fotocellule non verificate (Check ogni 6 mesi)
 Photocells not checked (Check every 6 months)
 Photocellules non vérifiées (contrôle tous les 6 mois)
 Fotozellen nicht überprüft (alle 6 Monate überprüfen)
 Fotocélulas no controladas (Control cada 6 meses)
 Fotocellen niet gecontroleerd (Check elke 6 maanden)

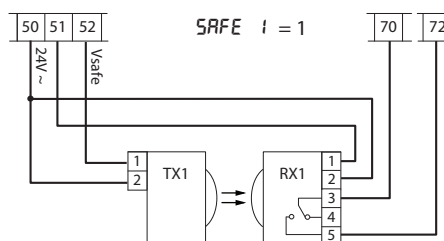D

Fotocellula verificata
 Photocell checked
 Photocellule vérifiée
 Fozelle überprüft
 Fotocélula controlada
 Fotocel gecontroleerd

ITALIANO**E' NECESSARIO SEGUIRE QUESTA SEQUENZA DI REGOLAZIONI:**

- 1 - Regolazione dei finecorsa
- 2 - Autoset
- 3 - Programmazione radiocomando
- 4 - Eventuali regolazioni dei parametri / logiche

Dopo ogni modifica della posizione dei finecorsa e' necessario eseguire un nuovo autoset.

Dopo ogni modifica del tipo motore e' necessario eseguire un nuovo autoset.

Se si utilizza il menu semplificato:

- Nel caso di motori GIUNO ULTRA BT A 20 - GIUNO ULTRA BT A 50 - E5 BT A18 - E5 BT A12 la fase 1 (regolazione finecorsa) e' compresa nel menu semplificato.
- Negli altri motori la fase 1 (regolazione finecorsa) va eseguita prima di attivare il menu semplificato.

ENGLISH**IT IS NECESSARY TO FOLLOW THIS SEQUENCE OF ADJUSTMENTS:**

- 1 - Adjusting the limit switches
- 2 - Autoset
- 3 - Programming remote controls
- 4 - Setting of parameters/logic, where necessary

After each adjustment of the end stop position a new autoset is required.
 After each modification of the motor type, a new autoset must be carried out

If the simplified menu is used:

- In GIUNO ULTRA BT A 20 - GIUNO ULTRA BT A 50 - E5 BT A18 - E5 BT A12 motors: phase 1 (end stop adjustment) is included in the simplified menu.
- In other motors: phase 1 (end stop adjustment) must be carried out before activating the simplified menu

FRANÇAIS**VOUS DEVEZ OBLIGATOIREMENT SUIVRE CETTE SÉQUENCE DE RÉGLAGES:**

- 1 - Réglage des fins de course
- 2 - Réglage automatique (autoset)
- 3 - Programmation de la radiocommande
- 4 - Réglages éventuels des paramètres / logiques

Chaque fois que vous modifiez la position des fins de course vous devez procéder à un nouveau autoset.
 Cha

Si vous utilisez le menu simplifié:

- Avec les moteurs GIUNO ULTRA BT A 20 - GIUNO ULTRA BT A 50 - E5 BT A18 - E5 BT A12 la phase 1 (réglage fins de course) est comprise dans le menu simplifié.
- Avec les autres moteurs vous devez accomplir la phase 1 (réglage fins de course) avant d'activer le menu simplifié.

DEUTSCH**DIESE SEQUENZ DER EINSTELLUNGEN MUSS BEFOLGT WERDEN:**

- 1 - Einstellung der endschalter
- 2 - Autoset
- 3 - Programmierung fernbedienung
- 4 - Eventuelle einstellungen der parameter / logiken

Nach jeder änderung der position der endschalter musse in neuer autoset ausgeführt werden.
 Nach jeder änderung des motortyps muss ein neuer autoset ausgeführt werden.

wenn das vereinfachte menü benutzt wird:

- Bei den motoren GIUNO ULTRA BT A 20 - GIUNO ULTRA BT A 50 - E5 BT A18 - E5 BT A12 ist die phase 1 (einstellung endschalter) im vereinfachten menü enthalten.
- Bei den anderen motoren wird die phase 1 (einstellung endschalter) ausgeführt, bevor das vereinfachte menü aktiviert wird.

ESPAÑOL**ES NECESARIO SEGUIR ESTA SECUENCIA DE AJUSTES:**

- 1 - Regulación de los finales de carrera
- 2 - Autoset
- 3 - Programación de radiomando
- 4 - Eventuales regulaciones de los parámetros / lógicas

Después de cambiar la posición de los interruptores de tope es necesario realizar un nuevo autoset.

Después de cambiar el tipo de motor es necesario realizar un nuevo autoset.

Si se utiliza el menú simplificado:

- En caso de motores GIUNO ULTRA BT A 20 - GIUNO ULTRA BT A 50 - E5 BT A18 - E5 BT A12 la fase 1 (ajuste de interruptor de tope) está comprendida en el menú simplificado.
- En los otros motores la fase 1 (ajuste de interruptor de tope) se debe realizar antes de activar el menú simplificado.

NEDERLANDS**VERRICHT DE VOLGENDE REGULINGEN:**


- 1 - Regeling van de eindaanslagen
- 2 - Autoset
- 3 - Programmering afstandsbediening
- 4 - Eventuele regelingen van de parameters / logica's

Verricht na elke wijziging van de positie van de eindaanslagen een nieuwe autoset.
 Dna elke wijziging van het motortype moet een nieuwe autoset worden verricht.

Als het vereenvoudigde menu wordt gebruikt:

- In het geval van de motoren GIUNO ULTRA BT A 20 - GIUNO ULTRA BT A 50 - E5 BT A18 - E5 BT A12 is de fase 1 (regeling eindaanslag) opgenomen in het vereenvoudigde menu.
- In alle andere motoren moet de fase 1 (regeling eindaanslag) worden verricht alvorens het vereenvoudigde menu te activeren.






COMPATIBILITÀ MOTORI MOTOR COMPATIBILITY COMPATIBILITÉ DES MOTEURS KOMPATIBILITÄT DER MOTOREN COMPATIBILIDAD DE LOS MOTORES COMPATIBILITEIT VAN MOTOREN

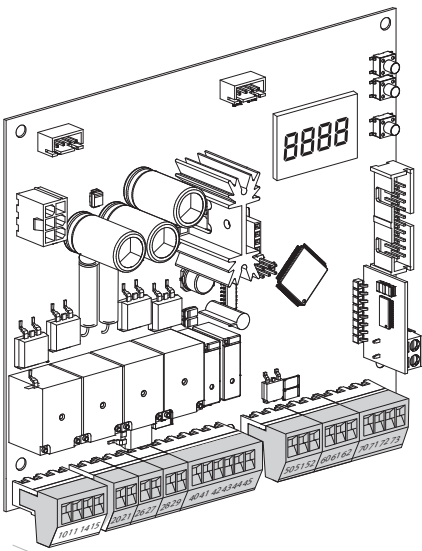 <p>THALIA BT A80</p>	ELI 250 BT	✗
	LUX BT	✗
	LUX G BT	✗
	IGEA BT	✓ > 01/03/2022 *
	SUB BT	✓
	PHOBOS BT A 25/40	✓
	PHOBOS BT B 25/40	✓
	PHOBOS N BT	✓
	KUSTOS BT A 25/40	✓
	KUSTOS BT B 25/40	✓
	GIUNO ULTRA BT A 20	✓
	GIUNO ULTRA BT A 50	✓
	VIRGO SMART BT A	✓
	E5 BT A18	✓
	E5 BT A12	✓
	ELI BT A40 + FCE	✓ > 01/04/2022 *
	ELI BT A40	✓ > 01/04/2022 *
ELI BT A35 V + FCE	✓ > 01/04/2022 *	
ELI BT A 35 V	✓ > 01/04/2022 *	
PHOBOS VELOCE BT B35	✓	

*

motore compatibile solo se prodotto dopo questa data
engine only compatible if produced after this date
moteur compatible uniquement s'il est produit après cette date
kompatibler Motor nur dann, wenn er nach diesem Datum hergestellt wurde
motor compatible solo si ha sido fabricado después de esta fecha
motor alleen compatibel als na deze datum geproduceerd

IGEA BT

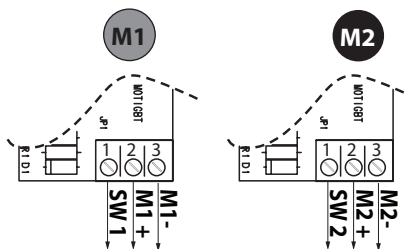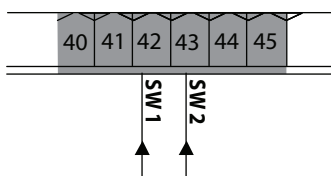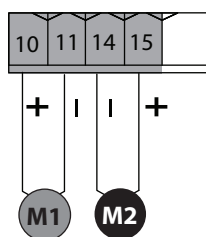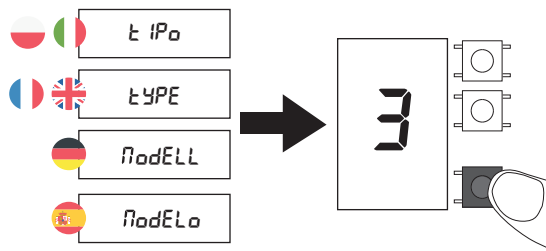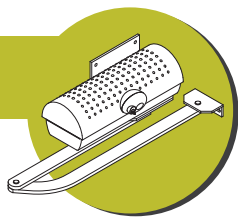

	IGEA BT
Potenza massima - Maximum power - Puissance maximum Max. Leistung Potencia máxima - Maximum vermogen	70W
Ciclo massimo - Maximum cycle - Cycle maximum Max. Zyklus - Ciclo máximo - Maximale cyclus	ciclo continuo - continuous cycle - cycle continu Dauerzyklus - ciclo continuo - continue cyclus



ATTENZIONE: La scheda Thalia BT A80 è compatibile solo con motori IGEA prodotti dopo il 01/03/2022. I modelli precedenti al 01/03/2022 NON SONO COMPATIBILI CON la scheda Thalia BT A80°.


WARNING: The Thalia BT A80 board is only compatible with IGEA motors manufactured after 01/03/2022. Models prior to 01/03/2022 ARE NOT COMPATIBLE WITH the Thalia BT A80° board.

ATTENTION : La carte Thalia BT A80 est uniquement compatible avec les moteurs IGEA produits après le 01/03/2022. Les modèles antérieurs au 01/03/2022 NE SONT PAS COMPATIBLES AVEC la carte Thalia BT A80°.





ACHTUNG: Die Thalia BT A80 Platine ist nur mit IGEA-Motoren kompatibel, die nach dem 01.03.2022 hergestellt wurden. Modelle vor dem 01.03.2022 sind NICHT KOMPATIBEL mit der Thalia BT A80 Platine°.

ATENCIÓN: La tarjeta Thalia BT A80 es compatible solo con motores IGEA fabricados después del 01/03/2022. Los modelos anteriores al 01/03/2022 NO SON COMPATIBLES CON la tarjeta Thalia BT A80°.

LET OP: De kaart Thalia BT A80 is alleen compatibel met IGEA-motoren die na 01/03/2022 zijn geproduceerd. Modellen vóór 01/03/2022 ZIJN NIET COMPATIBEL met de kaart Thalia BT A80°.

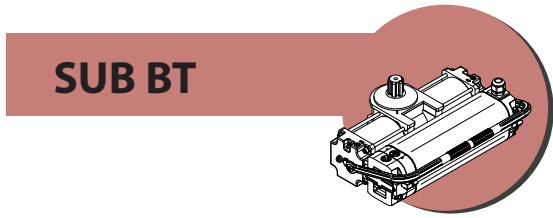


- t IPo
- tYPE
- ModELL
- ModELo

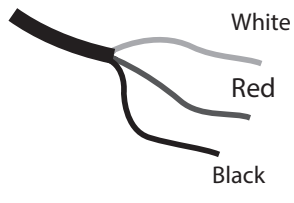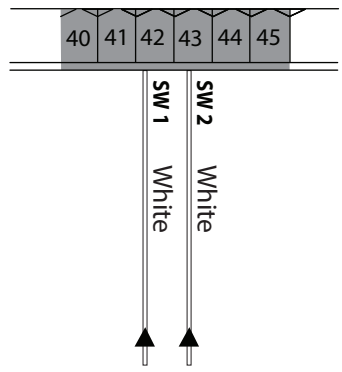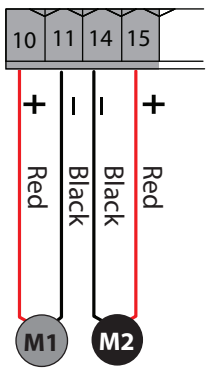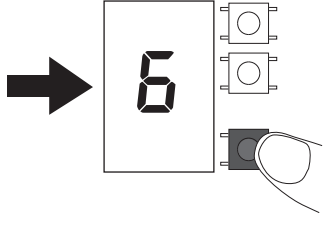


Red	Black	White
Rosso	Nero	Bianco
Rouge	Noir	Blanc
Rot	Nero	Weiß
Rojo	Negro	Blanco
Rood	Zwart	Wit

	SUB BT
Potenza massima - Maximum power - Puissance maximum Max. Leistung Potencia máxima - Maximum vermogen	90W
Ciclo massimo - Maximum cycle - Cycle maximum Max. Zyklus - Ciclo máximo - Maximale cyclus	40 cicli/h - 40 cycles/h - 40 cycles/h 40 Zyklen/Std - 40 ciclos/h - 40 cycli/u


PHOBOS BT A 25/40

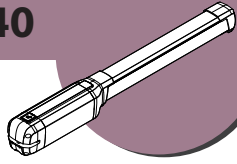


PHOBOS BT B 25/40

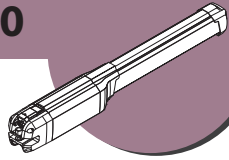







PHOBOS N BT

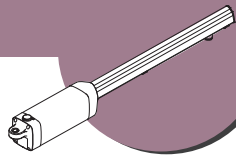

KUSTOS BT A 25/40



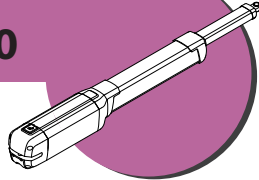


KUSTOS BT B 25/40

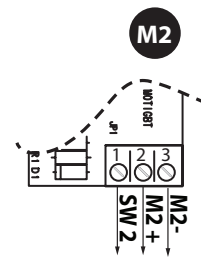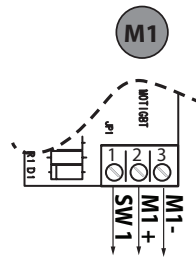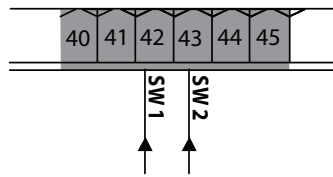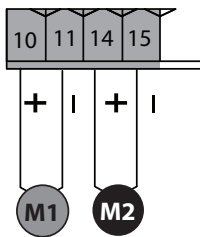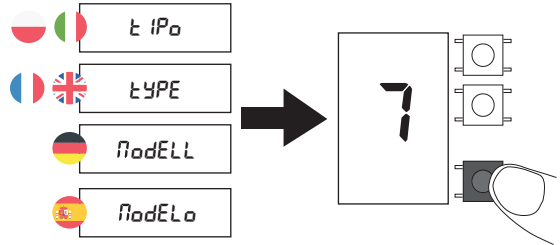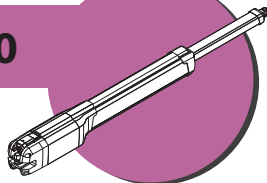





	PHOBOS BT A PHOBOS BT B PHOBOS N BT	KUSTOS BT A KUSTOS BT B
Potenza massima - Maximum power - Puissance maximum Max. Leistung Potencia máxima - Maximum vermogen	40W	40W
Ciclo massimo - Maximum cycle - Cycle maximum Max. Zyklus - Ciclo máximo - Maximale cyclus	30 cicli/h - 30 cycles/h - 30 cycles/h 30 Zyklen/Std - 30 ciclos/h -30 cycli/u	30 cicli/h - 30 cycles/h - 30 cycles/h 30 Zyklen/Std - 30 ciclos/h -30 cycli/u

GIUNO ULTRA

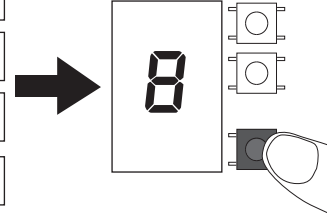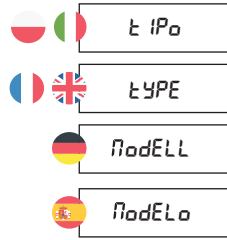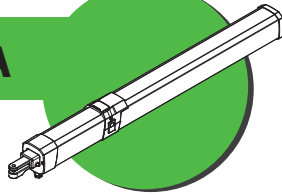


E

D814283 0AR00_04

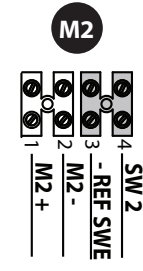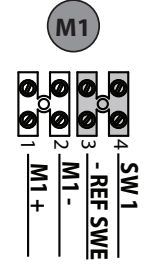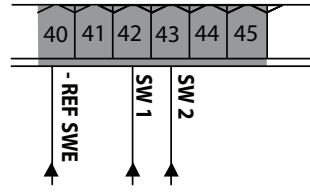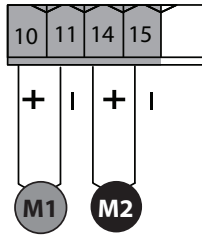


	GIUNO ULTRA BT A 20 GIUNO ULTRA BT A 50
Potenza massima - Maximum power - Puisseance maximum Max. Leistung - Potencia máxima - Maximum vermogen	90W
Ciclo massimo - Maximum cycle - Cycle maximum Max. Zyklus - Ciclo máximo - Maximale cyclus	30 cicli/h - 30 cycles/h - 30 cycles/h 30 Zyklen/Std - 30 ciclos/h - 30 cycli/u


VIRGO SMART BT A SLAVE

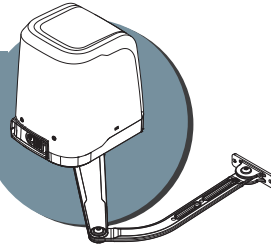

- tiPo*
- tYPE*
- ModELL*
- ModELo*

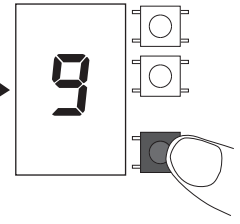



E

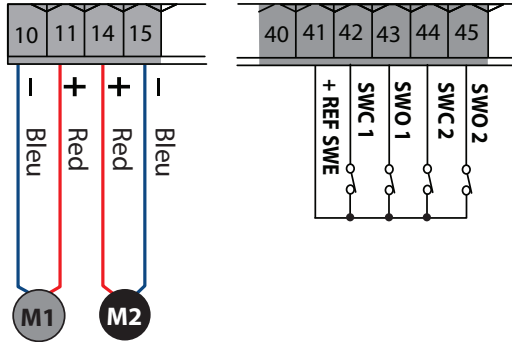


INSTALLATION ALTERNATIVE

SIMPLIFIED MENU

- d Ir*
- r ichtUnG*
- d IrEcc*




Red	Bleu
Rosso	Blu
Rouge	Bleu
Rot	Blau
Rojo	Azul
Rood	Azul

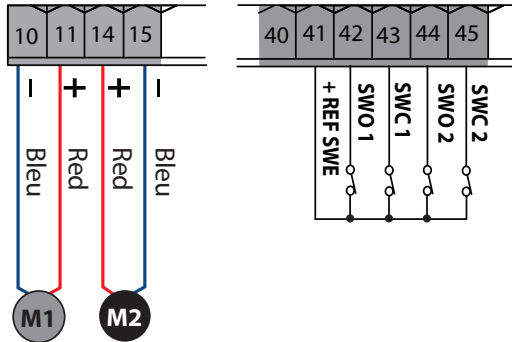


INSTALLATION ALTERNATIVE

SIMPLIFIED MENU


- d Ir*
- r ichtUnG*
- d IrEcc*



VIRGO SMART BT A SLAVE

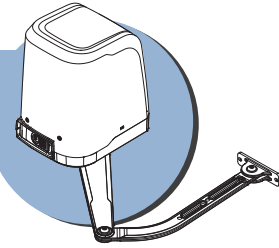




- tiPo*
- tYPE*
- ModELL*
- ModELo*

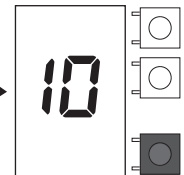

Con finecorsa ad 1 filo
With 1 wire limit switch
Avec fin de course à 1 fil
Mit 1-Kabel-Endschalter
Con final de carrera de 1 cable
Met eindaanslag met 1 draad








BUY

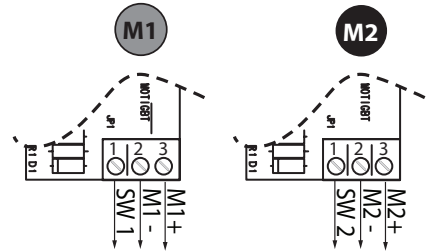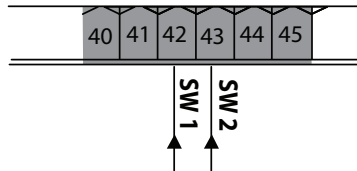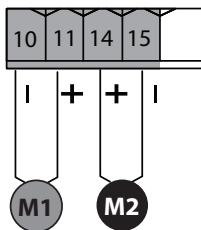

VIRGO SMART BT A

Potenza massima - Maximum power - Puissance maximum Max. Leistung Potencia máxima - Maximum vermogen	110W
Ciclo massimo - Maximum cycle - Cycle maximum Max. Zyklus - Ciclo máximo - Maximale cyclus	30 cicli/h - 30 cycles/h - 30 cycles/h 30 Zyklen/Std - 30 ciclos/h - 30 cycli/u






E5 BT A18

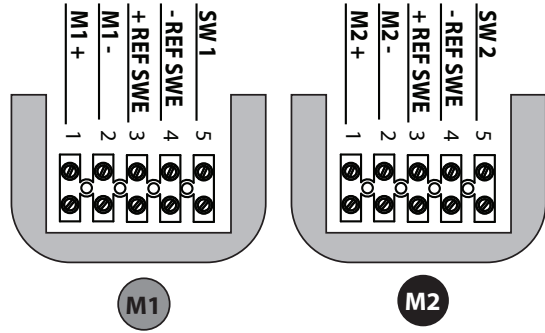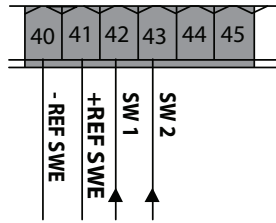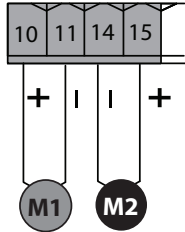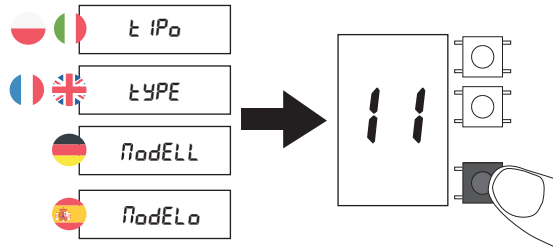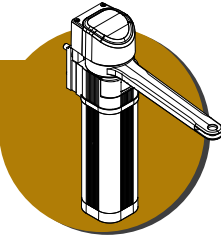

E5 BT A18	
Potenza massima - Maximum power - Puissance maximum Max. Leistung Potencia máxima - Maximum vermogen	100W
Ciclo massimo - Maximum cycle - Cycle maximum Max. Zyklus - Ciclo máximo - Maximale cyclus	20 cicli/h - 20 cycles/h - 20 cycles/h 20 Zyklen/Std - 20 ciclos/h - 20 cycli/u
Lunghezza cavo massima - Maximum cable length Longueur maximal du câble - Maximale Kabellänge Longitud máxima del cable - Max. lengte kabel	30m

E

E5 BT A12

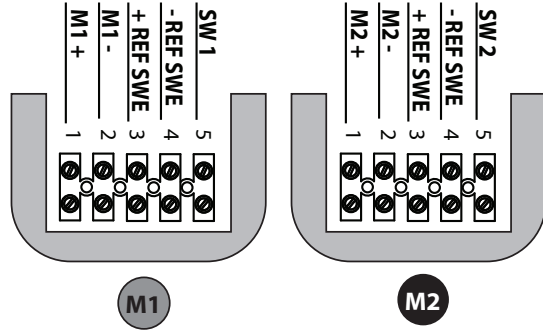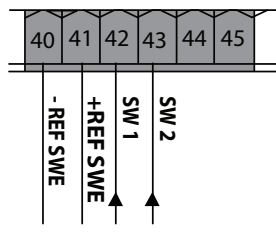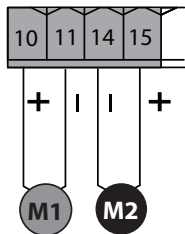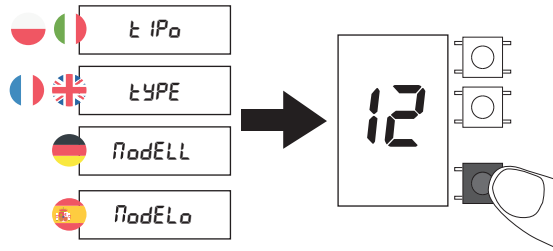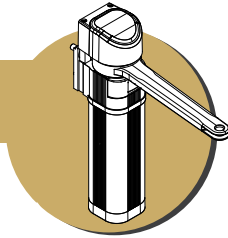

E5 BT A12	
Potenza massima - Maximum power - Puissance maximum Max. Leistung Potencia máxima - Maximum vermogen	100W
Ciclo massimo - Maximum cycle - Cycle maximum Max. Zyklus - Ciclo máximo - Maximale cyclus	100 cicli/h - 100 cycles/h - 100 cycles/h 100 Zyklen/Std - 100 ciclos/h - 100 cycli/u
Lunghezza cavo massima - Maximum cable length Longueur maximal du câble - Maximale Kabellänge Longitud máxima del cable - Max. lengte kabel	30m

Nei cancelli pedonali, regolare la velocità in modo tale da limitare l'energia dell'anta entro un valore massimo di 1,69 Joule (come previsto dalla norma EN16005). Utilizzare la tabella per determinare i tempi di chiusura minimi tra 90° e 10°.

ON pedestrian gates, adjust the speed so as to limit the energy of the leaf within a maximum value of 1.69 Joule (as required by the EN16005 regulation). Use the table to determine the minimum closing times between 90° and 10°.

Régler la vitesse des portails pour piétons de manière à limiter l'énergie du vantail dans une valeur maximale de 1,69 Joule (comme prévu par la norme EN16005). Utiliser le tableau pour déterminer les temps de fermeture minimaux entre 90° et 10°.

In den Fußgängertoren die Geschwindigkeit so einstellen, dass die Energie des Torflügels auf einen maximalen Wert von 1,69 Joule begrenzt ist (gemäß der Bestimmung EN16005).

Anhand der Tabelle die Mindestschließzeiten zwischen 90° und 10° festlegen.

En las cancelas peatonales, regular la velocidad en modo de limitar la energía de la hoja dentro de un valor máximo de 1,69 Joule (tal como se prevé en la norma EN16005). Utilizar la tabla para determinar los tiempos de cierre mínimos entre 90° y 10°.

Bij poorten voor voetgangers moet de snelheid zodanig geregeld worden dat de energie van de poortvleugel wordt begrensd tot een maximum waarde van 1,69 Joule (zoals voorzien door de norm EN16005).

Gebruik de tabel om de minimum sluitingstijden te bepalen tussen 90° en 10°.

La fase di accostamento (da 10° alla posizione di finecorsa) deve avvenire in almeno 1,5s.

Esempio: se l'anta pesa 80 kg ed è larga 1000mm regolare la velocità di manovra da 90° e 10° in almeno 4,0s.

Per valori intermedi utilizzare il valore più grande: se l'anta pesa 75 kg considerare il valore di 80kg, se l'anta è 1100mm utilizzare il valore di 1200m.

IMPORTANT: il funzionamento a bassa energia non è considerato una misura di protezione adeguata se l'anta è utilizzata da anziani, infermi, disabili.

In questo caso prevedere misure di sicurezza supplementari in conformità alle disposizioni legislative vigenti e alla propria valutazione dei rischi in loco.

The approaching phase (from 10° to the limit switch position) must take place in at least 1.5 s.

Example: if the leaf weighs 80 kg and has a width of 1000 mm, adjust the manoeuvre speed from 90° and 10° in at least 4.0 s.

For intermediate values, use the higher value: if the leaf weighs 75 kg consider a value of 80 kg, if its width is 1100 mm use a value of 1200 mm.

IMPORTANT: Low-energy operation is not considered a proper safety measure if the leaf is used by elderly, invalid, disabled people.

In this case, provide additional safety measures, according to the provisions of the legislation in force and your local on-site risk assessment.

La phase d'approche (de 10° à la position de fin de course) doit se produire dans au moins 1,5 s.

Exemple: si le vantail pèse 80 kg et qu'il a une largeur de 1 000 mm, régler la vitesse de manoeuvre de 90° et 10° dans au moins 4,0 s.

Pour des valeurs intermédiaires, utiliser la valeur la plus grande: si le vantail pèse 75 kg, considérer la valeur de 80 kg, si le vantail est de 1 100 mm, utiliser la valeur de 1 200 m.

IMPORTANT: el funcionamiento a baja energía no se considera una medida de protección adecuada si la hoja es utilizada por ancianos enfermos, personas minusválidas.

Dans ce cas, prévoir des mesures de sécurité supplémentaires, conformément aux dispositions de la législation en vigueur et à votre évaluation locale des risques sur site.

Die Annäherungsphase (von 10° bis zur Endschalterposition) muss in mindestens 1,5 s erfolgen.

Beispiel: Wenn der Torflügel 80 kg wiegt und 1000mm breit ist, die Manövergeschwindigkeit von 90° und 10° in mindestens 4,0s einstellen.

Bei Zwischenwerten, den höheren Wert verwenden: Wenn der Torflügel 75 kg wiegt, den Wert 80kg berücksichtigen, wenn der Torflügel 1100mm breit ist, den Wert 1200m verwenden.

WICHTIG: Der Betrieb bei niedriger Energie ist keine geeignete Schutzmaßnahme, wenn der Torflügel von älteren oder kranken Menschen und Behinderten.

In diesem Fall zusätzliche Sicherheitsmaßnahmen, gemäß den Bestimmungen der geltenden Gesetzgebung und Ihrer lokalen Risikobewertung vor Ort, vornehmen.

La fase de aproximación (de 10° a la posición de final de carrera) debe llevarse a cabo en al menos 1,5s.

Ejemplo: si la hoja pesa 80 kg y tiene 1000 mm de ancho, regular la velocidad de maniobra de 90° y 10° en al menos 4,0s.

Para los valores intermedios, utilizar el valor más grande: si la hoja pesa 75 kg, considerar un valor de 80 kg; si la hoja es de 1 100 mm, utilizar un valor de 1200 m.

IMPORTANT: el funcionamiento a baja energía no se considera una medida de protección adecuada si la hoja es utilizada por ancianos enfermos, personas minusválidas.

En este caso, proporcione medidas de seguridad adicionales, de acuerdo con las disposiciones de la legislación vigente y su evaluación local de riesgos in situ.

De naderingsfase (van 10° tot de positie van de eindschakelaar) moet in minstens 1,5 seconde plaatsvinden.

Voorbeeld: als de poortvleugel 80 kg weegt en 1000mm breed is, moet de snelheid van het manoeuvre van 90° en 10° geregeld worden in minstens 4,0s.

Voor tussenliggende waarden moet de grootste waarde beschouwd worden: als de poortvleugel 75 kg weegt, moet de waarde 80kg beschouwd worden en als de poortvleugel 1100mm breed is, moet de waarde 1200mm gebruikt worden.

BELANGRIJK: de werking aan lage energie wordt niet als een geschikte beschermingsmaatregel beschouwd als de poortvleugel wordt gebruikt door ouderen, mindervaliden, hulpbehoevenden.

In dit geval moeten extra veiligheidsmaatregelen getroffen worden in overeenstemming met de geldende wetgeving en uw eigen risicobeoordeling ter plaatse.




Tabella tempi minimi di manovra dell'anta Table with the leaf manoeuvre minimum times Tableau de temps minimaux de manoeuvre du vantail Tabelle der Mindestzeiten für das Bewegen des Torflügels Tabla de tiempos mínimos de maniobra de la hoja Tabel minimum manoeuretijden poortvleugel					
Larghezza dell'anta (mm) Leaf width (mm) Largeur du vantail (mm) Breite des Torflügels (mm) Ancho de la hoja (mm) Breedte poortvleugel (mm)	Peso dell'anta (kg) / Leaf weight (kg) Poids du vantail (kg) / Gewicht des Torflügels (kg) Peso de la hoja (kg) / Gewicht poortvleugel (kg)				
	50	60	70	80	90
750 mm	3,0 s	3,0 s	3,0 s	3,0 s	3,5 s
850 mm	3,0 s	3,0 s	3,5 s	3,5 s	4,0 s
1000 mm	3,5 s	3,5 s	4,0 s	4,0 s	4,5 s
1200 mm	4,0 s	4,5 s	4,5 s	5,0 s	5,5 s

ELI BT A40 + FCE

Solo con kit finecorsa
 Only with limit switch kit
 Uniquement avec le kit fin de course
 Nur mit Endschalter-Kit
 Sólo con kit final de carrera
 Alleen met kit eindaanslagen





BUY

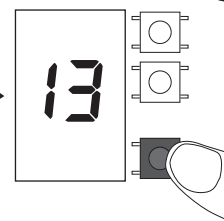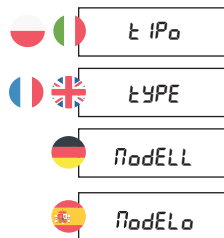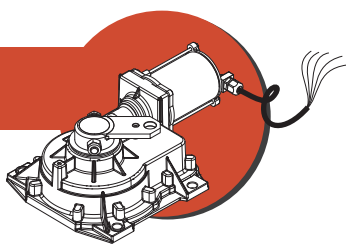

E




D814283 0AR00_04

Red	Bleu
Rosso	Blu
Rouge	Bleu
Rot	Blau
Rojo	Azul
Rood	Blauw

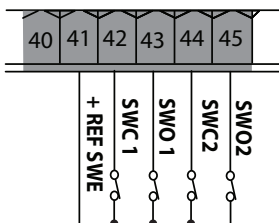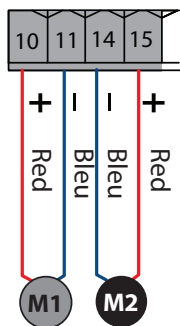


INSTALLATION ALTERNATIVE

SIMPLIFIED MENU

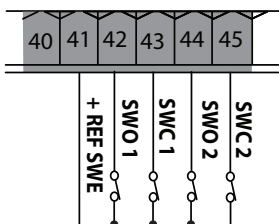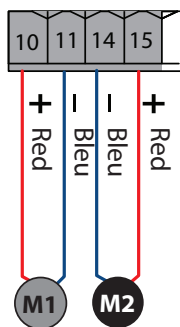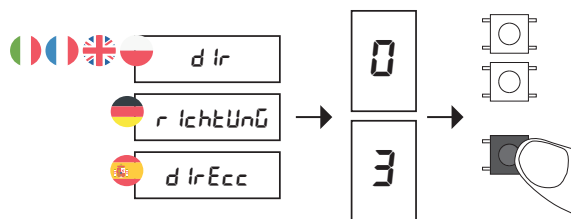

INSTALLATION ALTERNATIVE

SIMPLIFIED MENU

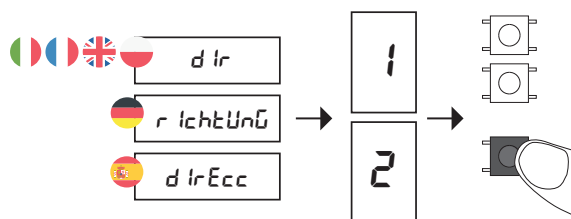

ELI BT A40 + FCE	
Potenza massima - Maximum power - Puissance maximum Max. Leistung Potencia máxima - Maximum vermogen	180W
Ciclo massimo - Maximum cycle - Cycle maximum Max. Zyklus - Ciclo máximo - Maximale cyclus	ciclo continuo - continuous cycle - cycle continu Dauerzyklus - ciclo continuo - continue cyclus

ATTENZIONE: La scheda Thalia BT A80 è compatibile solo con motori prodotti dopo il 01/04/2022. La compatibilità della scheda con il motore può essere verificata, oltre che dalla data di produzione, dal colore dei cablaggi : i motori con cavi ROSSO-BLU sono COMPATIBILI. I modelli precedenti al 01/04/2022 con i cavi del motore ROSSO-NERO NON SONO COMPATIBILI CON la scheda Thalia BT A80.

WARNING: The Thalia BT A80 board is only compatible with motors manufactured after 01/04/2022. The compatibility of the board with the motor can be checked both by the date of manufacture and by the colour of the wiring harnesses: Motors with RED-BLUE cables are COMPATIBLE. Models prior to 01/04/2022 with RED-BLACK motor cables ARE NOT COMPATIBLE WITH the Thalia BT A80 board.

ATTENTION : La carte Thalia BT A80 est uniquement compatible avec les moteurs fabriqués après le 01/04/2022. La compatibilité de la carte avec le moteur peut être vérifiée, ainsi qu'à partir de la date de fabrication, par la couleur des câblages : les moteurs avec câbles ROUGE-BLEU sont COMPATIBLES. Les modèles antérieurs au 01/04/2022 avec les câbles du moteur ROUGE-NOIR NE SONT PAS COMPATIBLES AVEC la carte Thalia BT A80.




ACHTUNG: Die Thalia BT A80 Platine ist nur mit Motoren kompatibel, die nach dem 01.04.2022 hergestellt wurden. Die Kompatibilität der Platine mit dem Motor kann nicht nur durch das Herstellungsdatums, sondern auch anhand der Farbe der Verkabelung überprüft werden: Motoren mit ROT-BLAUEN Kabeln sind KOMPATIBEL. Modelle vor dem 01.04.2022 mit ROT-SCHWARZEN Motorkabeln sind NICHT KOMPATIBEL mit der Thalia BT A80 Platine.

ATENCIÓN: La tarjeta Thalia BT A80 es compatible solo con motores IGEA fabricados después del 01/04/2022. La compatibilidad de la tarjeta con el motor puede verificarse no solo por la fecha de fabricación, sino también por el color del cableado: los motores con cables ROJO-AZUL son COMPATIBLES. Los modelos anteriores al 01/04/2022 con los cables del motor ROJO-NEGRO NO SON COMPATIBLES CON la tarjeta Thalia BT A80.


LET OP: De kaart Thalia BT A80 is alleen compatibel met motoren die na 01/04/2022 zijn geproduceerd. De compatibiliteit van de kaart met de motor kan worden gecontroleerd aan de hand van de fabricagedatum, maar ook aan de hand van de kleur van de bedrading : motoren met ROOD-BLAUWE kabels zijn COMPATIBEL. Modellen van vóór 01/04/2022 met ROOD-ZWARTE motorkabels ZIJN NIET COMPATIBEL met de kaart Thalia BT A80.



ELI BT A40

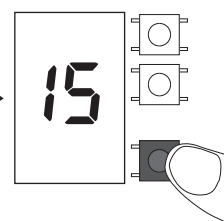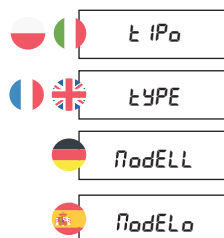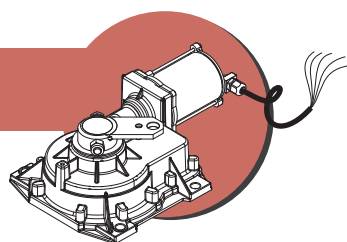

E

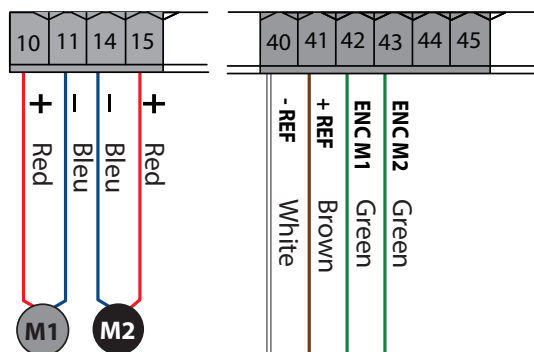

Red	Bleu	White	Brown	Green
Rosso	Blu	Bianco	Marrone	Verde
Rouge	Bleu	Blanc	Marron	Vert
Rot	Blau	Wei	Braun	Grn
Rojo	Azul	Blanco	Maron	Verde
Rood	Blauw	Wit	Bruin	Groen

ELI BT A40	
Potenza massima - Maximum power - Puissance maximum Max. Leistung Potencia mxima - Maximum vermogen	180W
Ciclo massimo - Maximum cycle - Cycle maximum Max. Zyklus - Ciclo mximo - Maximale cyclus	ciclo continuo - continuous cycle - cycle continu Dauerzyklus - ciclo continuo - continue cyclus

ATTENZIONE: La scheda Thalia BT A80 è compatibile solo con motori prodotti dopo il 01/04/2022. La compatibilità della scheda con il motore può essere verificata, oltre che dalla data di produzione, dal colore dei cablaggi: i motori con cavi ROSSO-BLU sono COMPATIBILI. I modelli precedenti al 01/04/2022 con i cavi del motore ROSSO-NERO NON SONO COMPATIBILI CON la scheda Thalia BT A80.

WARNING: The Thalia BT A80 board is only compatible with motors manufactured after 01/04/2022. The compatibility of the board with the motor can be checked both by the date of manufacture and by the colour of the wiring harnesses: Motors with RED-BLUE cables are COMPATIBLE. Models prior to 01/04/2022 with RED-BLACK motor cables ARE NOT COMPATIBLE WITH the Thalia BT A80 board.

ATTENTION : La carte Thalia BT A80 est uniquement compatible avec les moteurs fabriqués après le 01/04/2022. La compatibilité de la carte avec le moteur peut être vérifiée, ainsi qu'à partir de la date de fabrication, par la couleur des câblages: les moteurs avec câbles ROUGE-BLEU sont COMPATIBLES. Les modèles antérieurs au 01/04/2022 avec les câbles du moteur ROUGE-NOIR NE SONT PAS COMPATIBLES AVEC la carte Thalia BT A80.



ACHTUNG: Die Thalia BT A80 Platine ist nur mit Motoren kompatibel, die nach dem 01.04.2022 hergestellt wurden. Die Kompatibilität der Platine mit dem Motor kann nicht nur durch das Herstellungsdatum, sondern auch anhand der Farbe der Verkabelung überprüft werden: Motoren mit ROT-BLAUEN Kabeln sind KOMPATIBEL. Modelle vor dem 01.04.2022 mit ROT-SCHWARZEN Motorkabeln sind NICHT KOMPATIBEL mit der Thalia BT A80 Platine.

ATENCIÓN: La tarjeta Thalia BT A80 es compatible solo con motores IGEA fabricados después del 01/04/2022. La compatibilidad de la tarjeta con el motor puede verificarse no solo por la fecha de fabricación, sino también por el color del cableado: los motores con cables ROJO-AZUL son COMPATIBLES. Los modelos anteriores al 01/04/2022 con los cables del motor ROJO-NEGRO NO SON COMPATIBLES CON la tarjeta Thalia BT A80.

LET OP: De kaart Thalia BT A80 is alleen compatibel met motoren die na 01/04/2022 zijn geproduceerd. De compatibiliteit van de kaart met de motor kan worden gecontroleerd aan de hand van de fabricagedatum, maar ook aan de hand van de kleur van de bedrading: motoren met ROOD-BLAUWE kabels zijn COMPATIBEL. Modellen van vr 01/04/2022 met ROOD-ZWARTE motorkabels ZIJN NIET COMPATIBEL met de kaart Thalia BT A80.




ELI BT A35 V + FCE

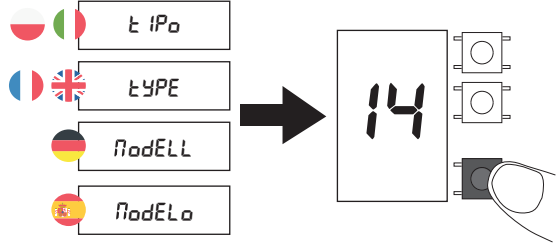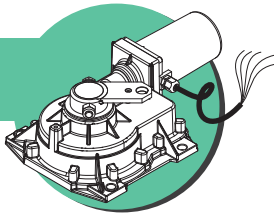

Solo con kit finecorsa
 Only with limit switch kit
 Uniquement avec le kit
 fin de course
 Nur mit Endschalter-Kit
 Sólo con kit final de carrera
 Alleen met kit eindaanslagen





Red	Bleu
Rosso	Blu
Rouge	Bleu
Rot	Blau
Rojo	Azul
Rood	Blauw

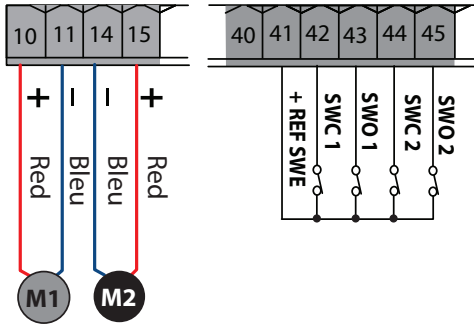


INSTALLATION ALTERNATIVE

SIMPLIFIED MENU

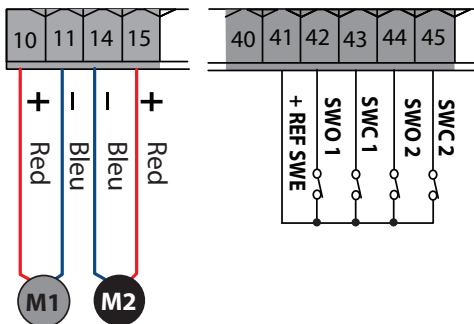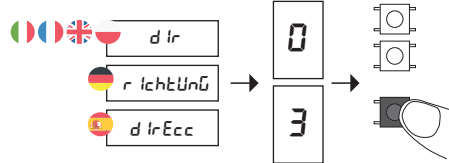

INSTALLATION ALTERNATIVE

SIMPLIFIED MENU

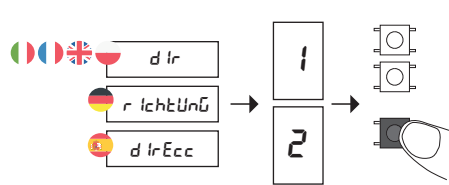

ELI BT A35 V + FCE

Potenza massima - Maximum power - Puissance maximum Max. Leistung Potencia máxima - Maximum vermogen	100W
Ciclo massimo - Maximum cycle - Cycle maximum Max. Zyklus - Ciclo máximo - Maximale cyclus	50 cicli/h - 50 cycles/h - 50 cycles/h 50 Zyklen/Std - 50 ciclos/h - 50 cycli/u

ATTENZIONE: La scheda Thalia BT A80 è compatibile solo con motori prodotti dopo il 01/04/2022. La compatibilità della scheda con il motore può essere verificata, oltre che dalla data di produzione, dal colore dei cablaggi : i motori con cavi ROSSO-BLU sono COMPATIBILI. I modelli precedenti al 01/04/2022 con i cavi del motore ROSSO-NERO NON SONO COMPATIBILI CON la scheda Thalia BT A80.

WARNING: The Thalia BT A80 board is only compatible with motors manufactured after 01/04/2022. The compatibility of the board with the motor can be checked both by the date of manufacture and by the colour of the wiring harnesses: Motors with RED-BLUE cables are COMPATIBLE. Models prior to 01/04/2022 with RED-BLACK motor cables ARE NOT COMPATIBLE WITH the Thalia BT A80 board.

ATTENTION : La carte Thalia BT A80 est uniquement compatible avec les moteurs fabriqués après le 01/04/2022. La compatibilité de la carte avec le moteur peut être vérifiée, ainsi qu'à partir de la date de fabrication, par la couleur des câblages : les moteurs avec câbles ROUGE-BLEU sont COMPATIBLES. Les modèles antérieurs au 01/04/2022 avec les câbles du moteur ROUGE-NOIR NE SONT PAS COMPATIBLES AVEC la carte Thalia BT A80.



ACHTUNG: Die Thalia BT A80 Platine ist nur mit Motoren kompatibel, die nach dem 01.04.2022 hergestellt wurden. Die Kompatibilität der Platine mit dem Motor kann nicht nur durch das Herstellungsdatums, sondern auch anhand der Farbe der Verkabelung überprüft werden: Motoren mit ROT-BLAUEN Kabeln sind KOMPATIBEL. Modelle vor dem 01.04.2022 mit ROT-SCHWARZEN Motorkabeln sind NICHT KOMPATIBEL mit der Thalia BT A80 Platine.

ATENCIÓN: La tarjeta Thalia BT A80 es compatible solo con motores IGEA fabricados después del 01/04/2022. La compatibilidad de la tarjeta con el motor puede verificarse no solo por la fecha de fabricación, sino también por el color del cableado: los motores con cables ROJO-AZUL son COMPATIBLES. Los modelos anteriores al 01/04/2022 con los cables del motor ROJO-NEGRO NO SON COMPATIBLES CON la tarjeta Thalia BT A80.


LET OP: De kaart Thalia BT A80 is alleen compatibel met motoren die na 01/04/2022 zijn geproduceerd. De compatibiliteit van de kaart met de motor kan worden gecontroleerd aan de hand van de fabricagedatum, maar ook aan de hand van de kleur van de bedrading : motoren met ROOD-BLAUWE kabels zijn COMPATIBEL. Modellen van vóór 01/04/2022 met ROOD-ZWARTE motorkabels ZIJN NIET COMPATIBEL met de kaart Thalia BT A80.



ELI BT A35 V

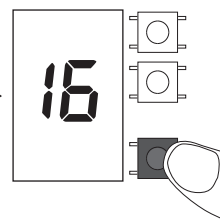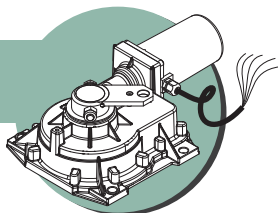

E

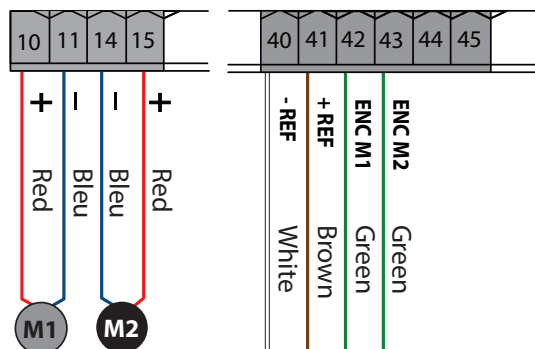

Red	Bleu	White	Brown	Green
Rosso	Blu	Bianco	Marrone	Verde
Rouge	Bleu	Blanc	Marron	Vert
Rot	Blau	Weiß	Braun	Grün
Rojo	Azul	Blanco	Maron	Verde
Rood	Blauw	Wit	Bruin	Groen

ELI BT A35 V	
Potenza massima - Maximum power - Puissance maximum Max. Leistung - Potencia máxima - Maximum vermogen	100W
Ciclo massimo - Maximum cycle - Cycle maximum Max. Zyklus - Ciclo máximo - Maximale cyclus	50 cicli/h - 50 cycles/h - 50 cycles/h 50 Zyklen/Std - 50 ciclos/h - 50 cycli/u

ATTENZIONE: La scheda Thalia BT A80 è compatibile solo con motori prodotti dopo il 01/04/2022. La compatibilità della scheda con il motore può essere verificata, oltre che dalla data di produzione, dal colore dei cablaggi: i motori con cavi ROSSO-BLU sono COMPATIBILI. I modelli precedenti al 01/04/2022 con i cavi del motore ROSSO-NERO NON SONO COMPATIBILI CON la scheda Thalia BT A80.

WARNING: The Thalia BT A80 board is only compatible with motors manufactured after 01/04/2022. The compatibility of the board with the motor can be checked both by the date of manufacture and by the colour of the wiring harnesses: Motors with RED-BLUE cables are COMPATIBLE. Models prior to 01/04/2022 with RED-BLACK motor cables ARE NOT COMPATIBLE WITH the Thalia BT A80 board.

ATTENTION : La carte Thalia BT A80 est uniquement compatible avec les moteurs fabriqués après le 01/04/2022. La compatibilité de la carte avec le moteur peut être vérifiée, ainsi qu'à partir de la date de fabrication, par la couleur des câblages: les moteurs avec câbles ROUGE-BLEU sont COMPATIBLES. Les modèles antérieurs au 01/04/2022 avec les câbles du moteur ROUGE-NOIR NE SONT PAS COMPATIBLES AVEC la carte Thalia BT A80.







ACHTUNG: Die Thalia BT A80 Platine ist nur mit Motoren kompatibel, die nach dem 01.04.2022 hergestellt wurden. Die Kompatibilität der Platine mit dem Motor kann nicht nur durch das Herstellungsdatums, sondern auch anhand der Farbe der Verkabelung überprüft werden: Motoren mit ROT-BLAUEN Kabeln sind KOMPATIBEL. Modelle vor dem 01.04.2022 mit ROT-SCHWARZEN Motorkabeln sind NICHT KOMPATIBEL mit der Thalia BT A80 Platine.

ATENCIÓN: La tarjeta Thalia BT A80 es compatible solo con motores IGEA fabricados después del 01/04/2022. La compatibilidad de la tarjeta con el motor puede verificarse no solo por la fecha de fabricación, sino también por el color del cableado: los motores con cables ROJO-AZUL son COMPATIBLES. Los modelos anteriores al 01/04/2022 con los cables del motor ROJO-NEGRO NO SON COMPATIBLES CON la tarjeta Thalia BT A80.

LET OP: De kaart Thalia BT A80 is alleen compatibel met motoren die na 01/04/2022 zijn geproduceerd. De compatibiliteit van de kaart met de motor kan worden gecontroleerd aan de hand van de fabricagedatum, maar ook aan de hand van de kleur van de bedrading: motoren met ROOD-BLAUWE kabels zijn COMPATIBEL. Modellen van vóór 01/04/2022 met ROOD-ZWARTE motorkabels ZIJN NIET COMPATIBEL met de kaart Thalia BT A80.




PHOBOS VELOCE BT B35

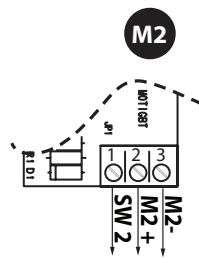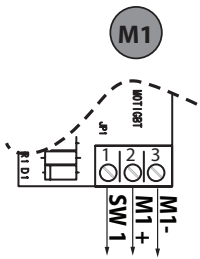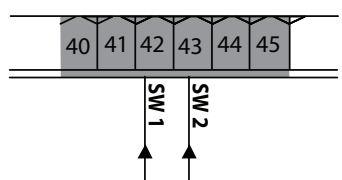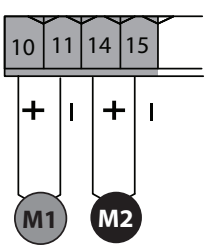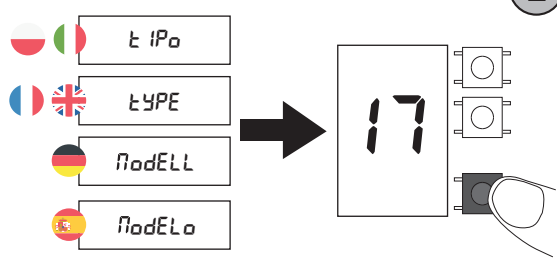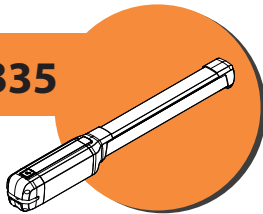

PHOBOS VELOCE BT B35	
Potenza massima - Maximum power - Puissance maximum Max. Leistung Potencia máxima - Maximum vermogen	60W
Ciclo massimo - Maximum cycle - Cycle maximum Max. Zyklus - Ciclo máximo - Maximale cyclus	25 cicli/h - 25 cycles/h - 25 cycles/h 25 Zyklen/Std - 25 ciclos/h - 25 cycli/u



ALTERNATIVE DI INSTALLAZIONE - INSTALLATION ALTERNATIVES
 ALTERNATIVES D'INSTALLATION - INSTALLATIONSALTERNATIVEN
 ALTERNATIVAS DE INSTALACIÓN - ALTERNATIEVEN VOOR INSTALLATIE

**MENÙ SEMPLIFICATO - SIMPLIFIED MENU - MENU SIMPLIFIÉ
 VEREINFACHTES MENÜ - MENÙ SEMPLIFICADO - VEREENVOUDIGD MENU**

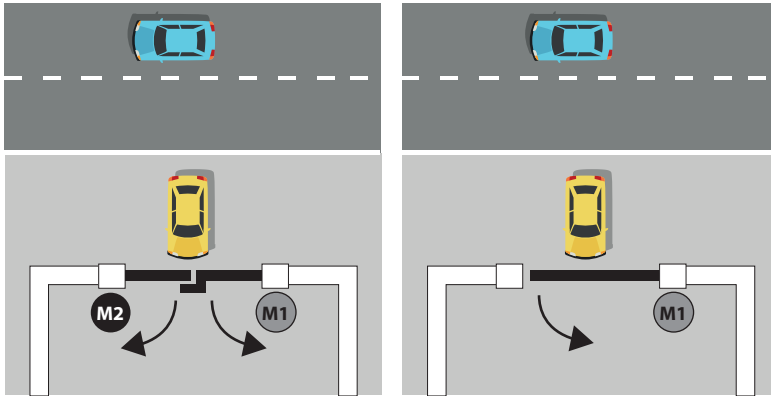



E0

SIMPLIFIED MENU

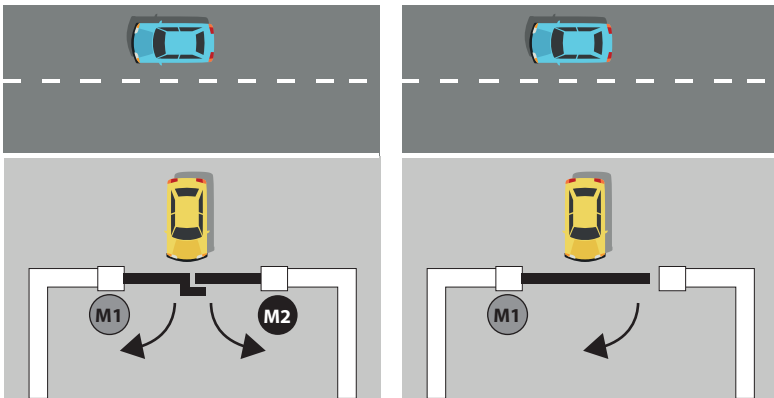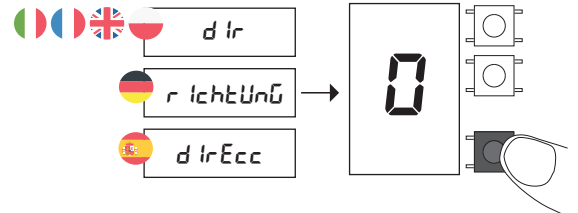



E1

SIMPLIFIED MENU

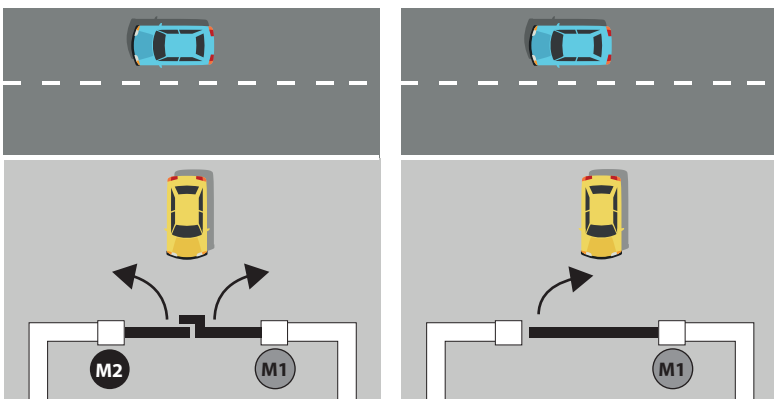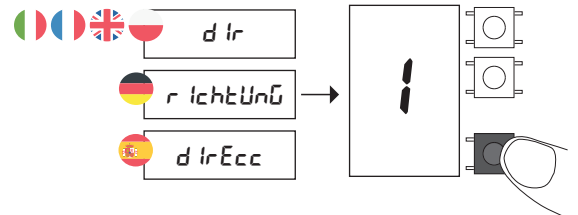


E2

SIMPLIFIED MENU

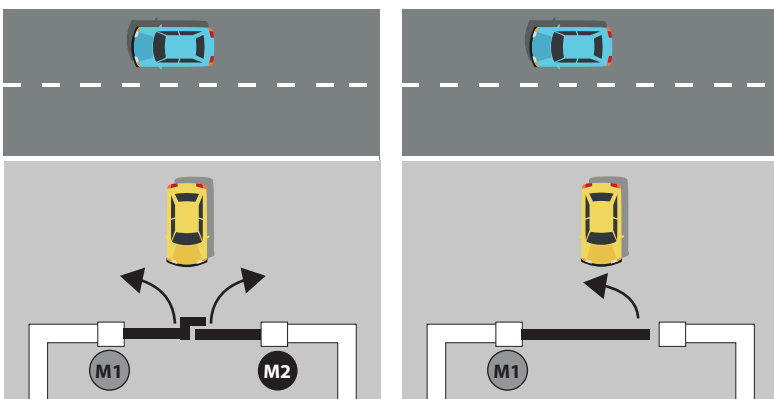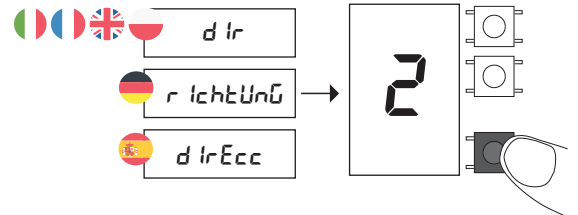


E3

SIMPLIFIED MENU

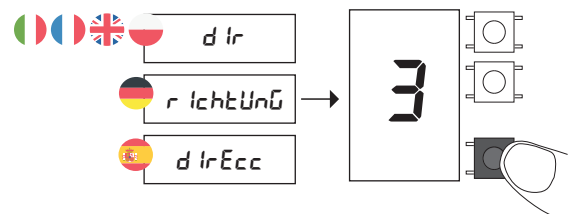


SOLO MOTORI CON QUADRO INTEGRATO - ONLY MOTORS WITH BUILT-IN SWITCHBOARD
UNIQUEMENT MOTEURS AVEC PANNEAU INTÉGRÉ - NUR MOTOREN MIT INTEGRIERTEM SCHALTGERÄT
SOLO MOTORES CON CUADRO INTEGRADO - ALLEEN MOTOREN MET INGEBOUWD SCHAKELMATERIAAL


E4

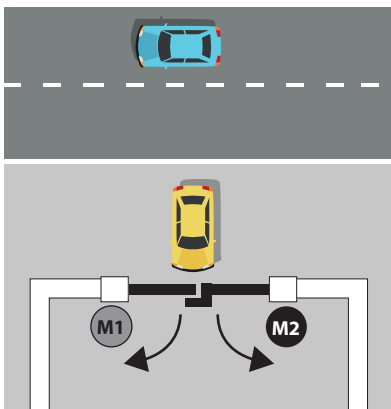


SIMPLIFIED MENU

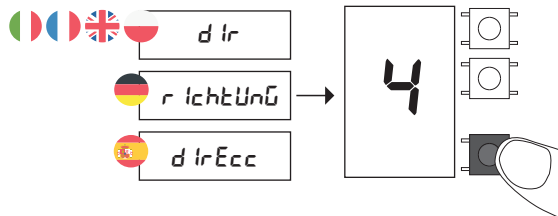


E5

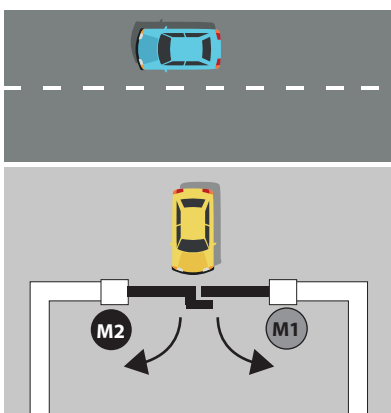


SIMPLIFIED MENU

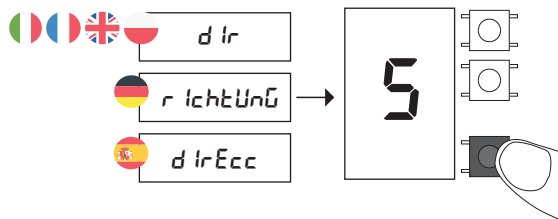


E6

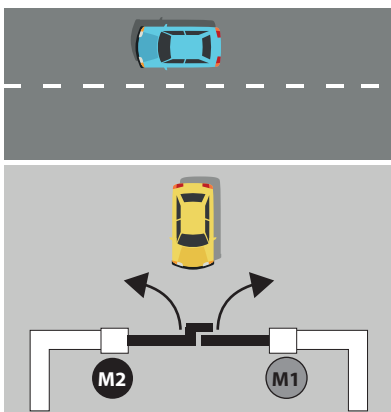


SIMPLIFIED MENU

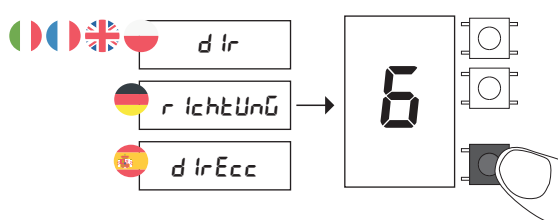


E7

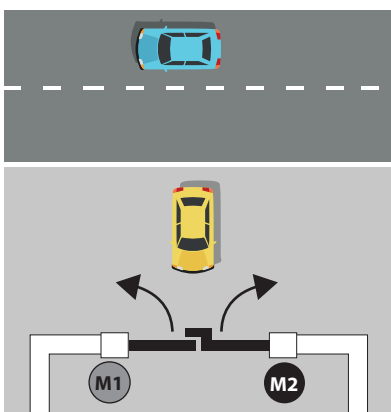

SIMPLIFIED MENU

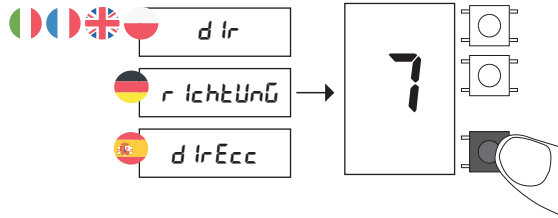

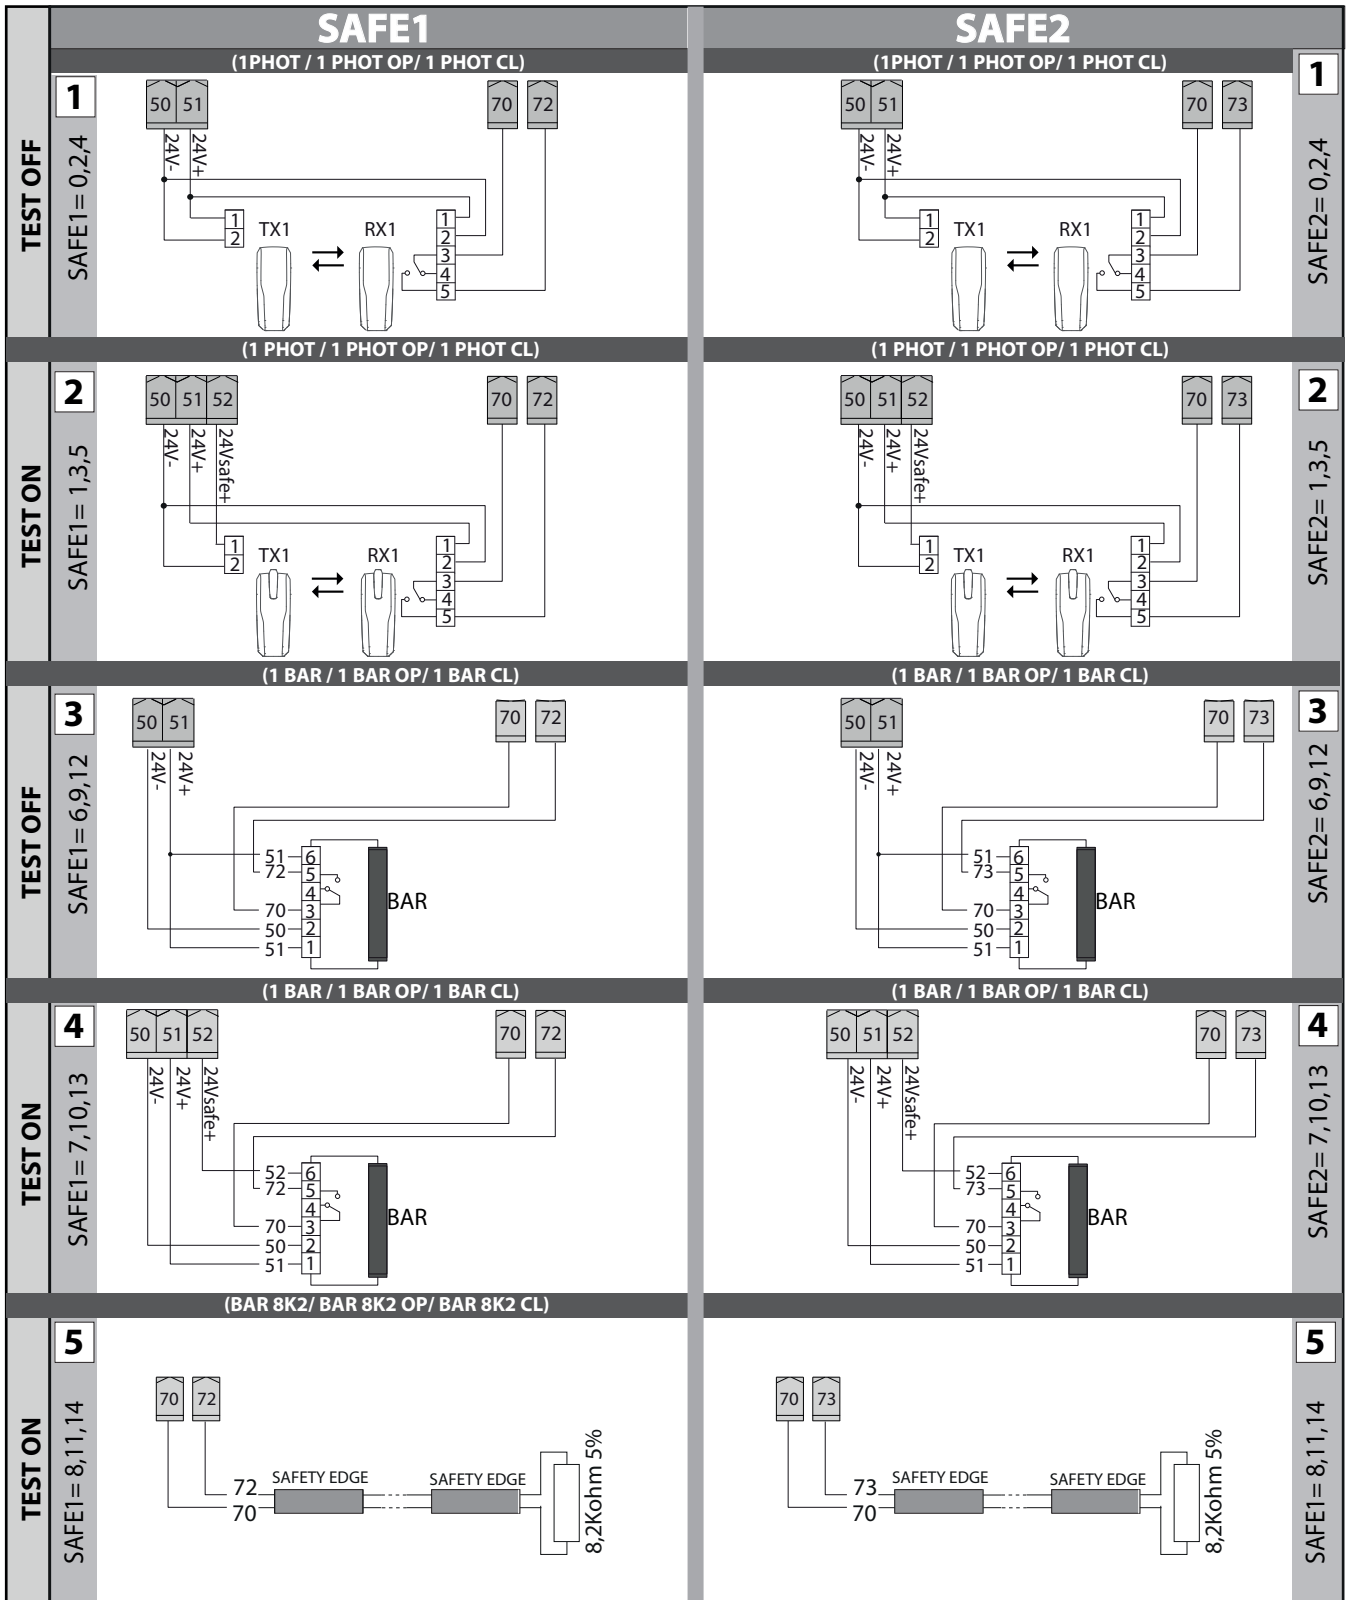


SAFE10 - SAFE11

F

SOLO CON SCHEDA DI ESPANSIONE - ONLY WITH AN EXPANSION CARD
 UNIQUEMENT AVEC CARTE D'EXTENSION - NUR MIT ERWEITERUNGSKARTE
 SOLO CON TARJETA DE EXPANSIÓN - ALLEEN MET UITBREIDINGSKAART


D814283 0AR00_04

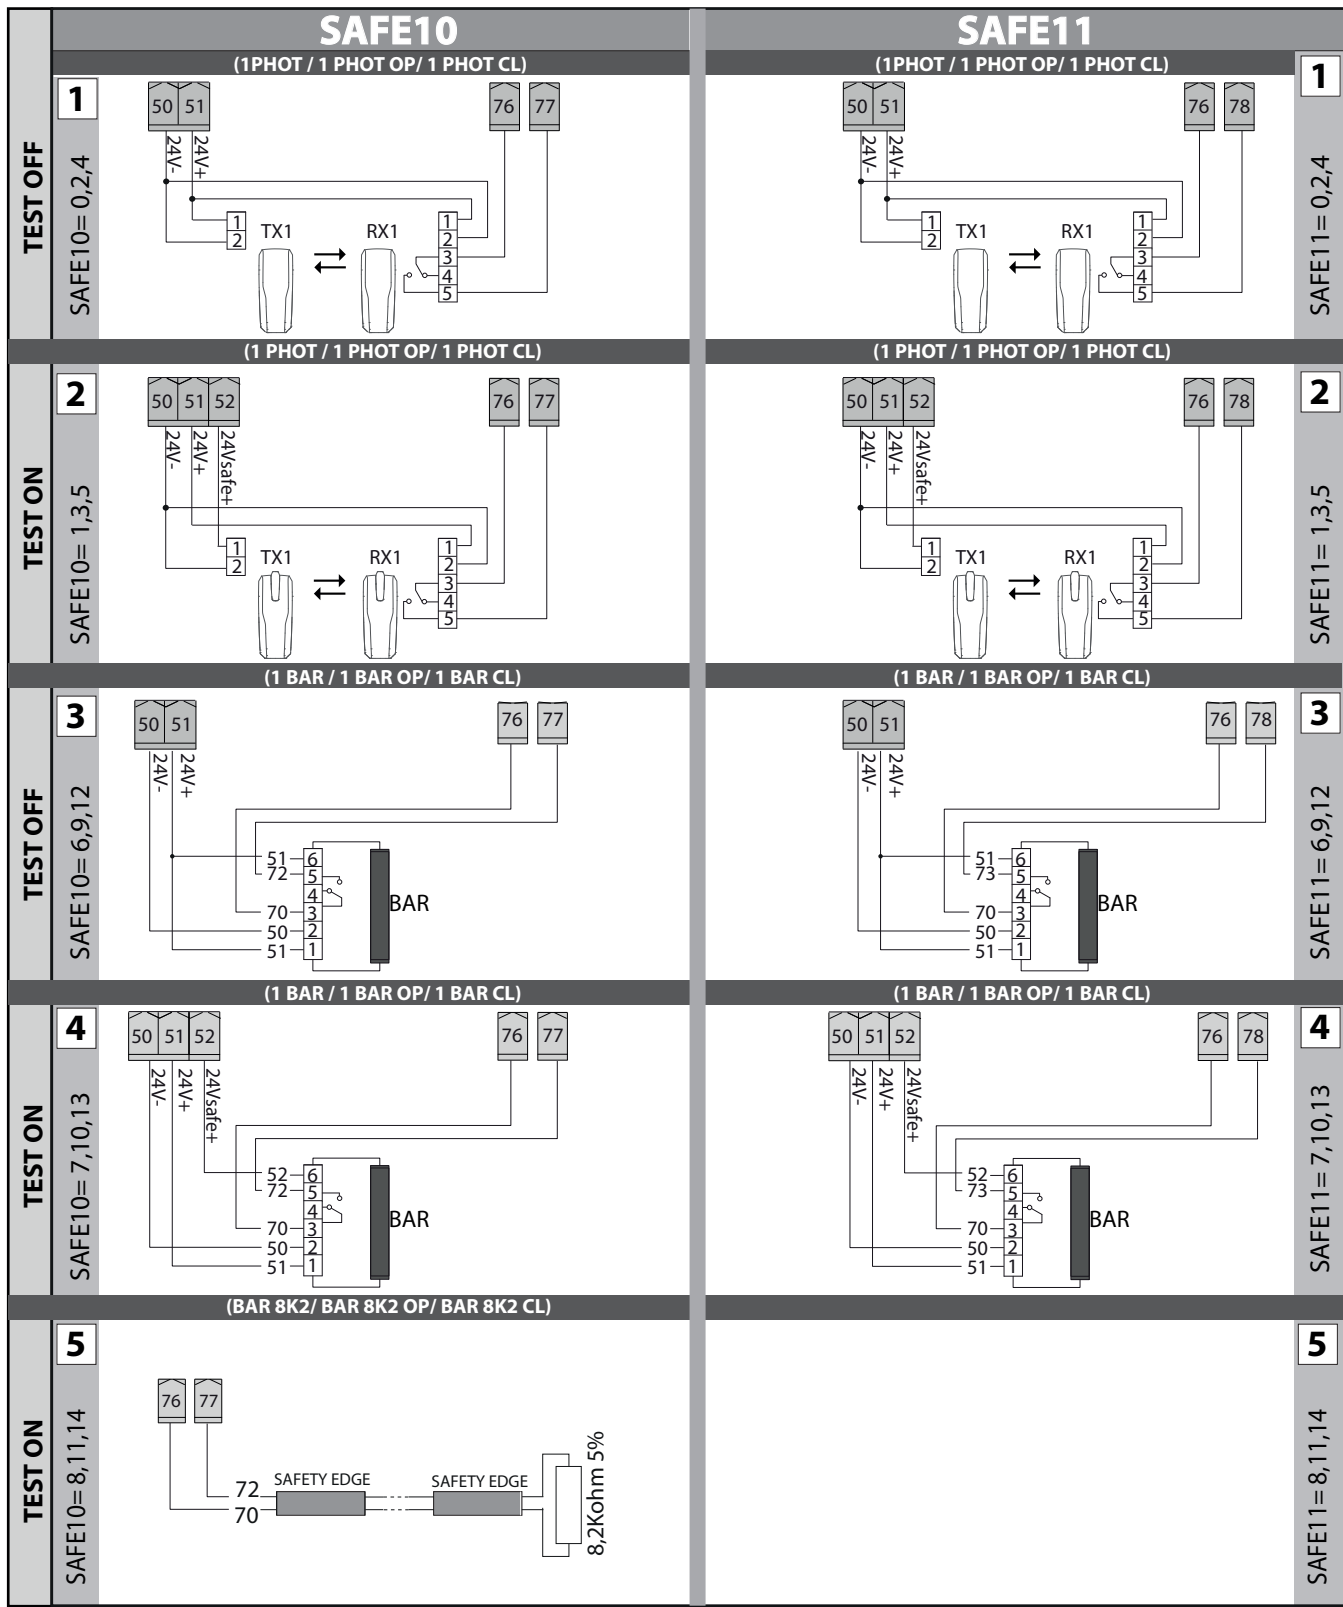


SAFE12 - SAFE13

F

SOLO CON SCHEDA DI ESPANSIONE - ONLY WITH AN EXPANSION CARD
 UNIQUEMENT AVEC CARTE D'EXTENSION - NUR MIT ERWEITERUNGSKARTE
 SOLO CON TARJETA DE EXPANSIÓN - ALLEEN MET UITBREIDINGSKAART

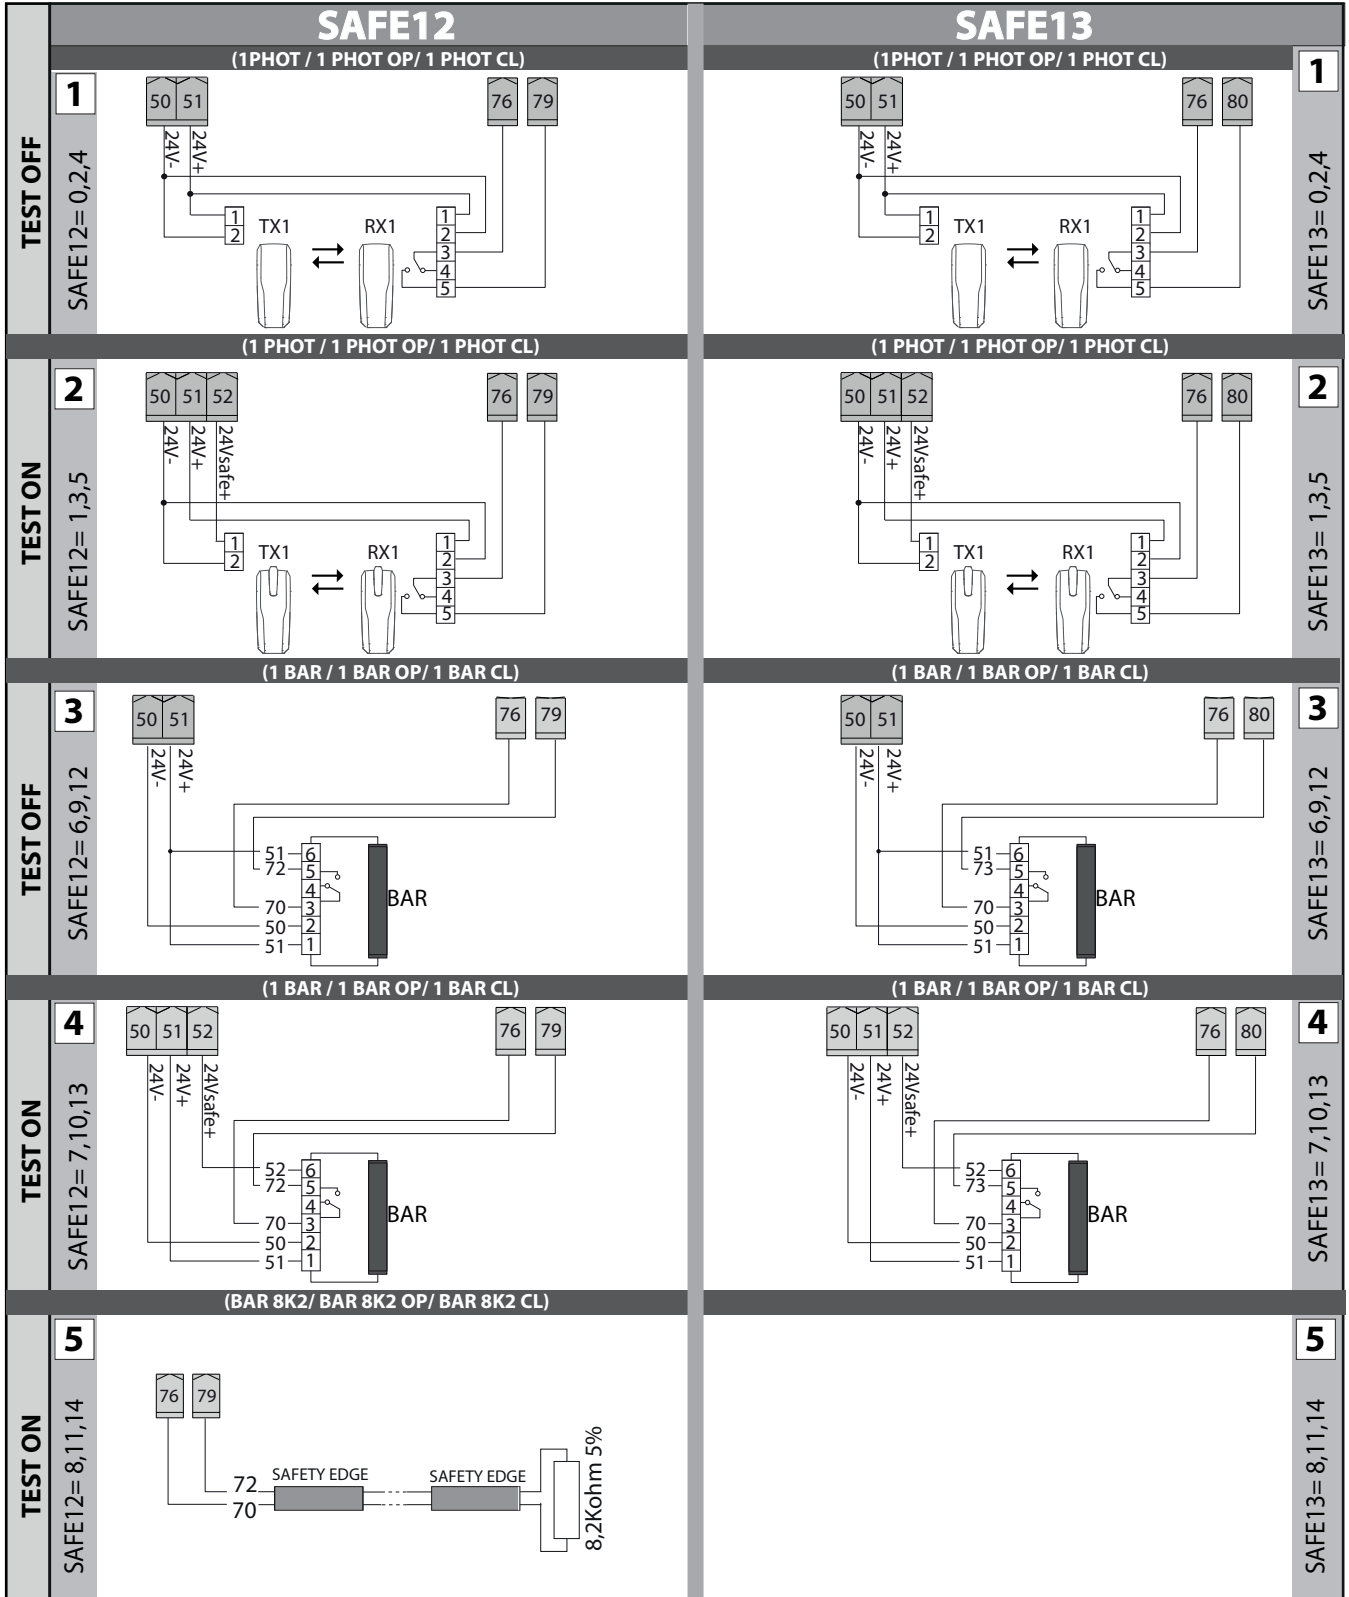

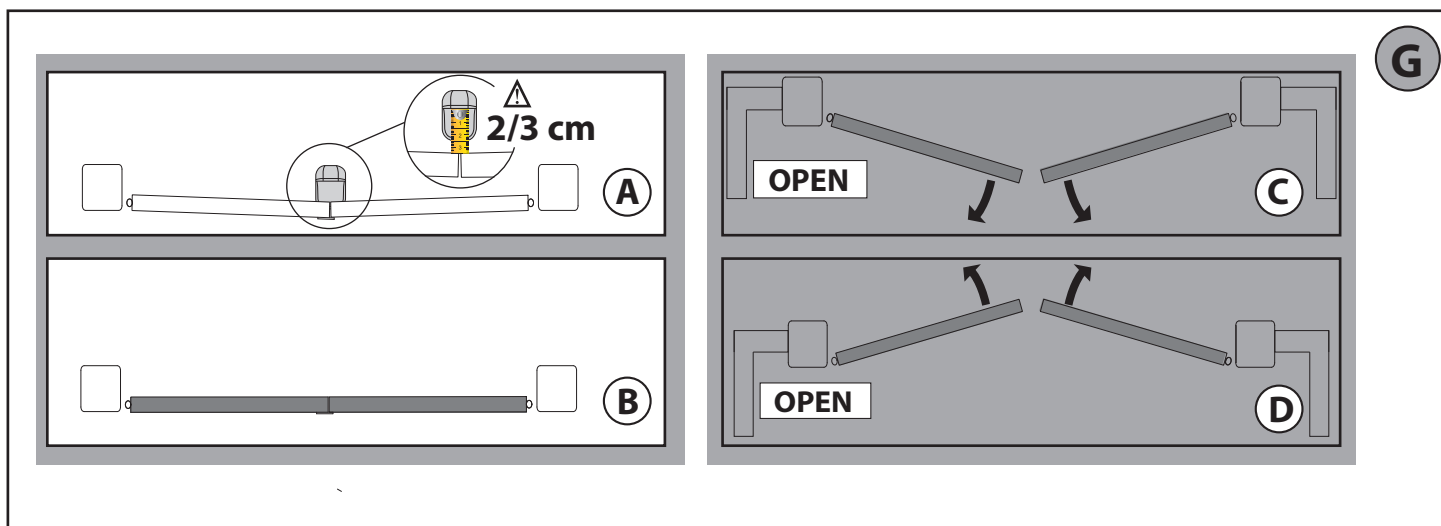

! **RIPRISTINO DELLE IMPOSTAZIONI DI FABBRICA**
ATTENZIONE riporta la centrale ai valori preimpostati da fabbrica e vengono cancellati tutti i radiocomandi in memoria.
ATTENZIONE! Un'errata impostazione può creare danni a persone, animali o cose.

RESTORING FACTORY SETTINGS

WARNING: this operation will restore the control unit's factory settings and all transmitters stored in its memory will be deleted.
WARNING! Incorrect settings can result in damage to property and injury to people and animals.

RÉTABLISSEMENT DES CONFIGURATIONS D'USINE

ATTENTION ramène la centrale aux valeurs préconfigurées en usine et toutes les radiocommandes mémorisées sont effacées.
ATTENTION ! Toute erreur de configuration peut causer des préjudices aux personnes, aux animaux et aux biens.

WIDERHERSTELLUNG DER WERKSEINSTELLUNG


ACHTUNG: Das Steuergerät wird auf die Werkseinstellung zurückgestellt und alle abgespeicherten Fernbedienungen werden gelöscht.
ACHTUNG! Ein falsche Einstellung kann zur Verletzung von Personen oder Tieren sowie zu Sachschäden führen.

RESTAURACIÓN DE LAS CONFIGURACIONES DE FÁBRICA

ATENCIÓN lleva la central a los valores preconfigurados de fábrica y se borran todos los radiomandos en la memoria.
¡ATENCIÓN! Una configuración incorrecta, puede ocasionar daños a personas, animales o cosas.


DE FABRIEKSINSTELLINGEN HERSTELLEN

LET OP U herstelt de waarden die door de fabriek zijn ingesteld. De afstandsbedieningen in het geheugen worden gewist.
LET OP! Een verkeerde instelling kan leiden tot schade aan personen, dieren of voorwerpen.

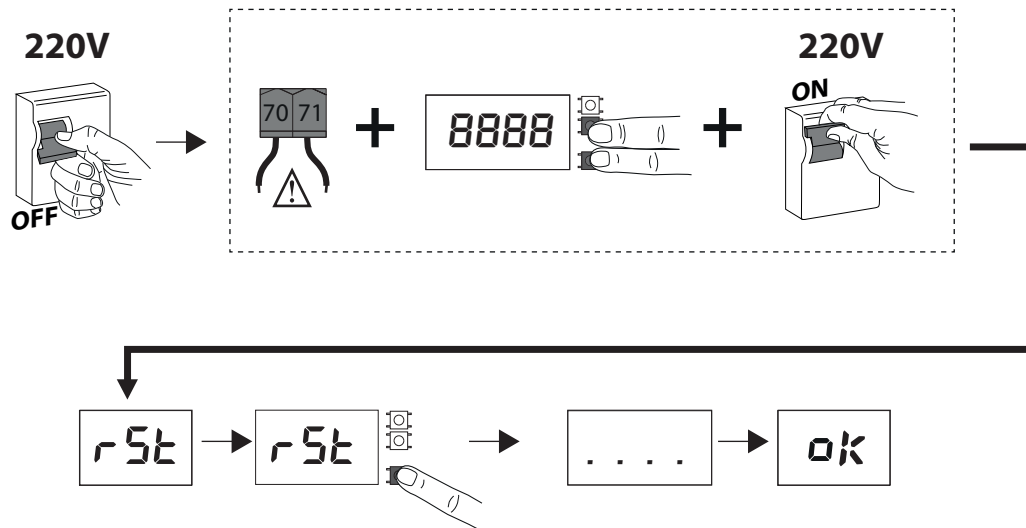

ENGLISH

SIMPLIFIED MENU

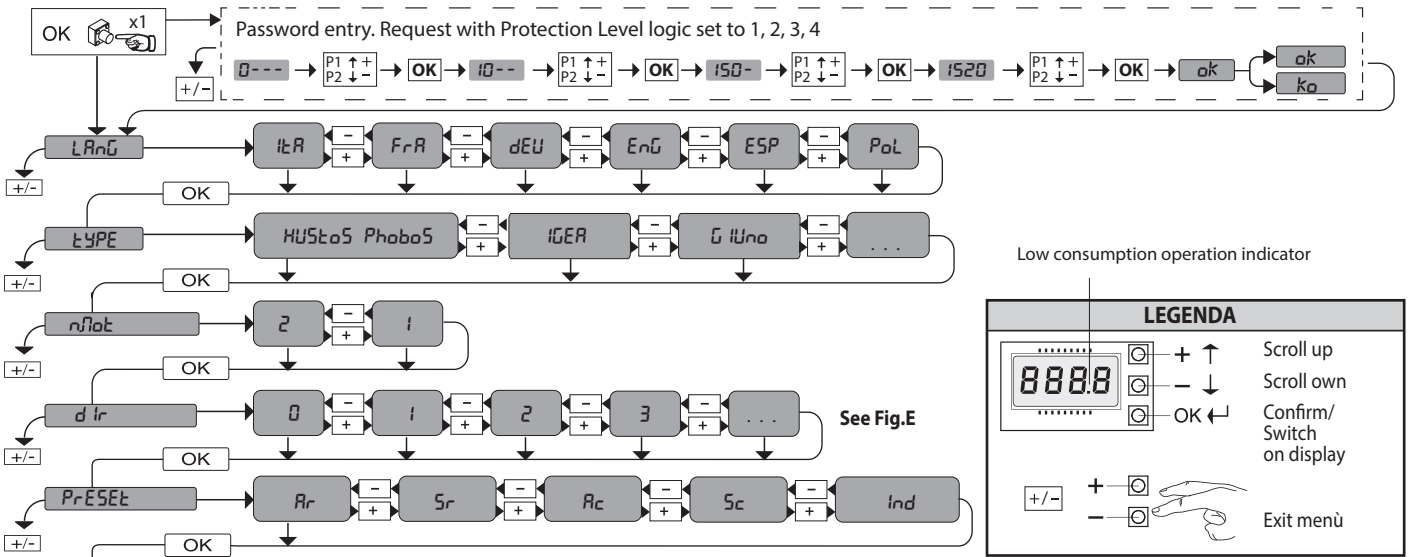



Low consumption operation indicator

LEGENDA


⬆	+ ↑	Scroll up
⬇	- ↓	Scroll own
⏹	OK ↵	Confirm/ Switch on display
+/-	+ ⊖	Exit menù
-/+	- ⊕	

PRESET	DEFAULT	Rr	Sr	Rc	Sc	Ind
PARAMETERS						
LOGIC						
TCA	0	1	0	1	0	0
Step-by-step movement	0	1	0	1	0	0
Pre-alarm	0	0	0	3	3	0
Deadman	0	0	0	0	0	1
Block pulses during opening	0	0	0	1	1	0

Rr: automatic operation, residential
 Sr: semiautomatic operation, residential
 Rc: automatic operation, commercial
 Sc: semiautomatic operation, commercial
 Ind: dead man operation

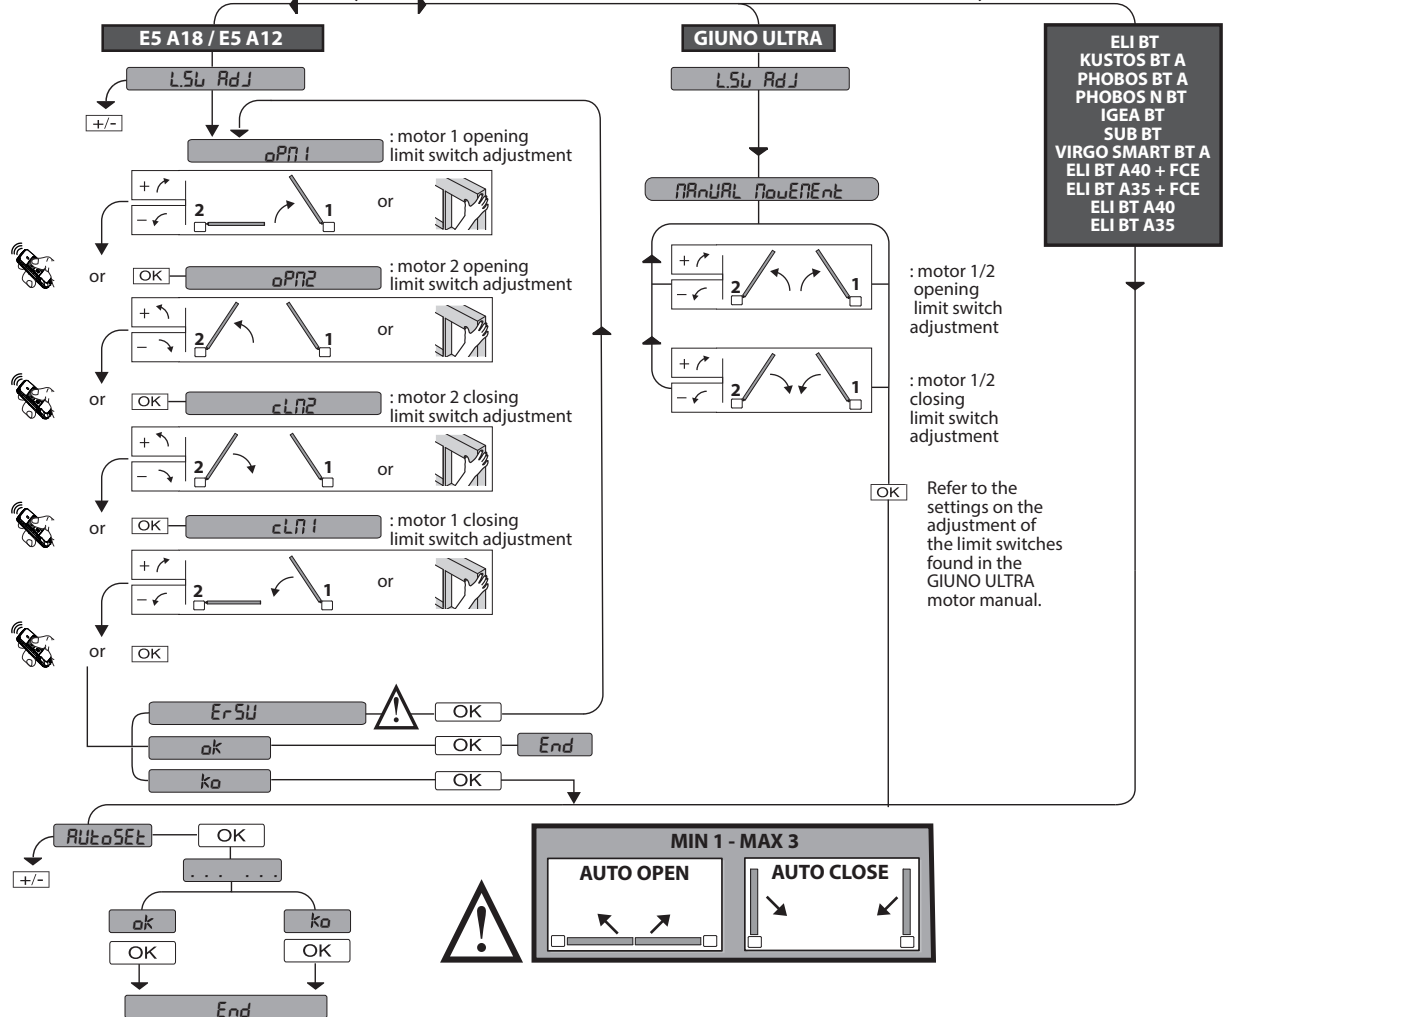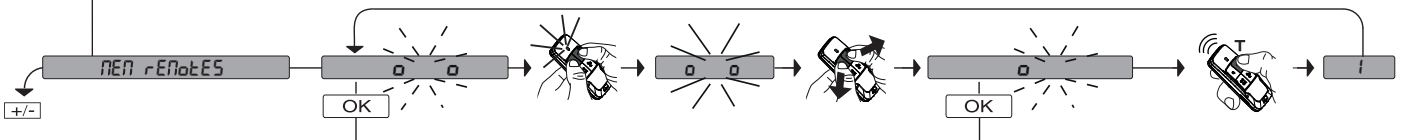

ACCESS MENUS FIG. 1

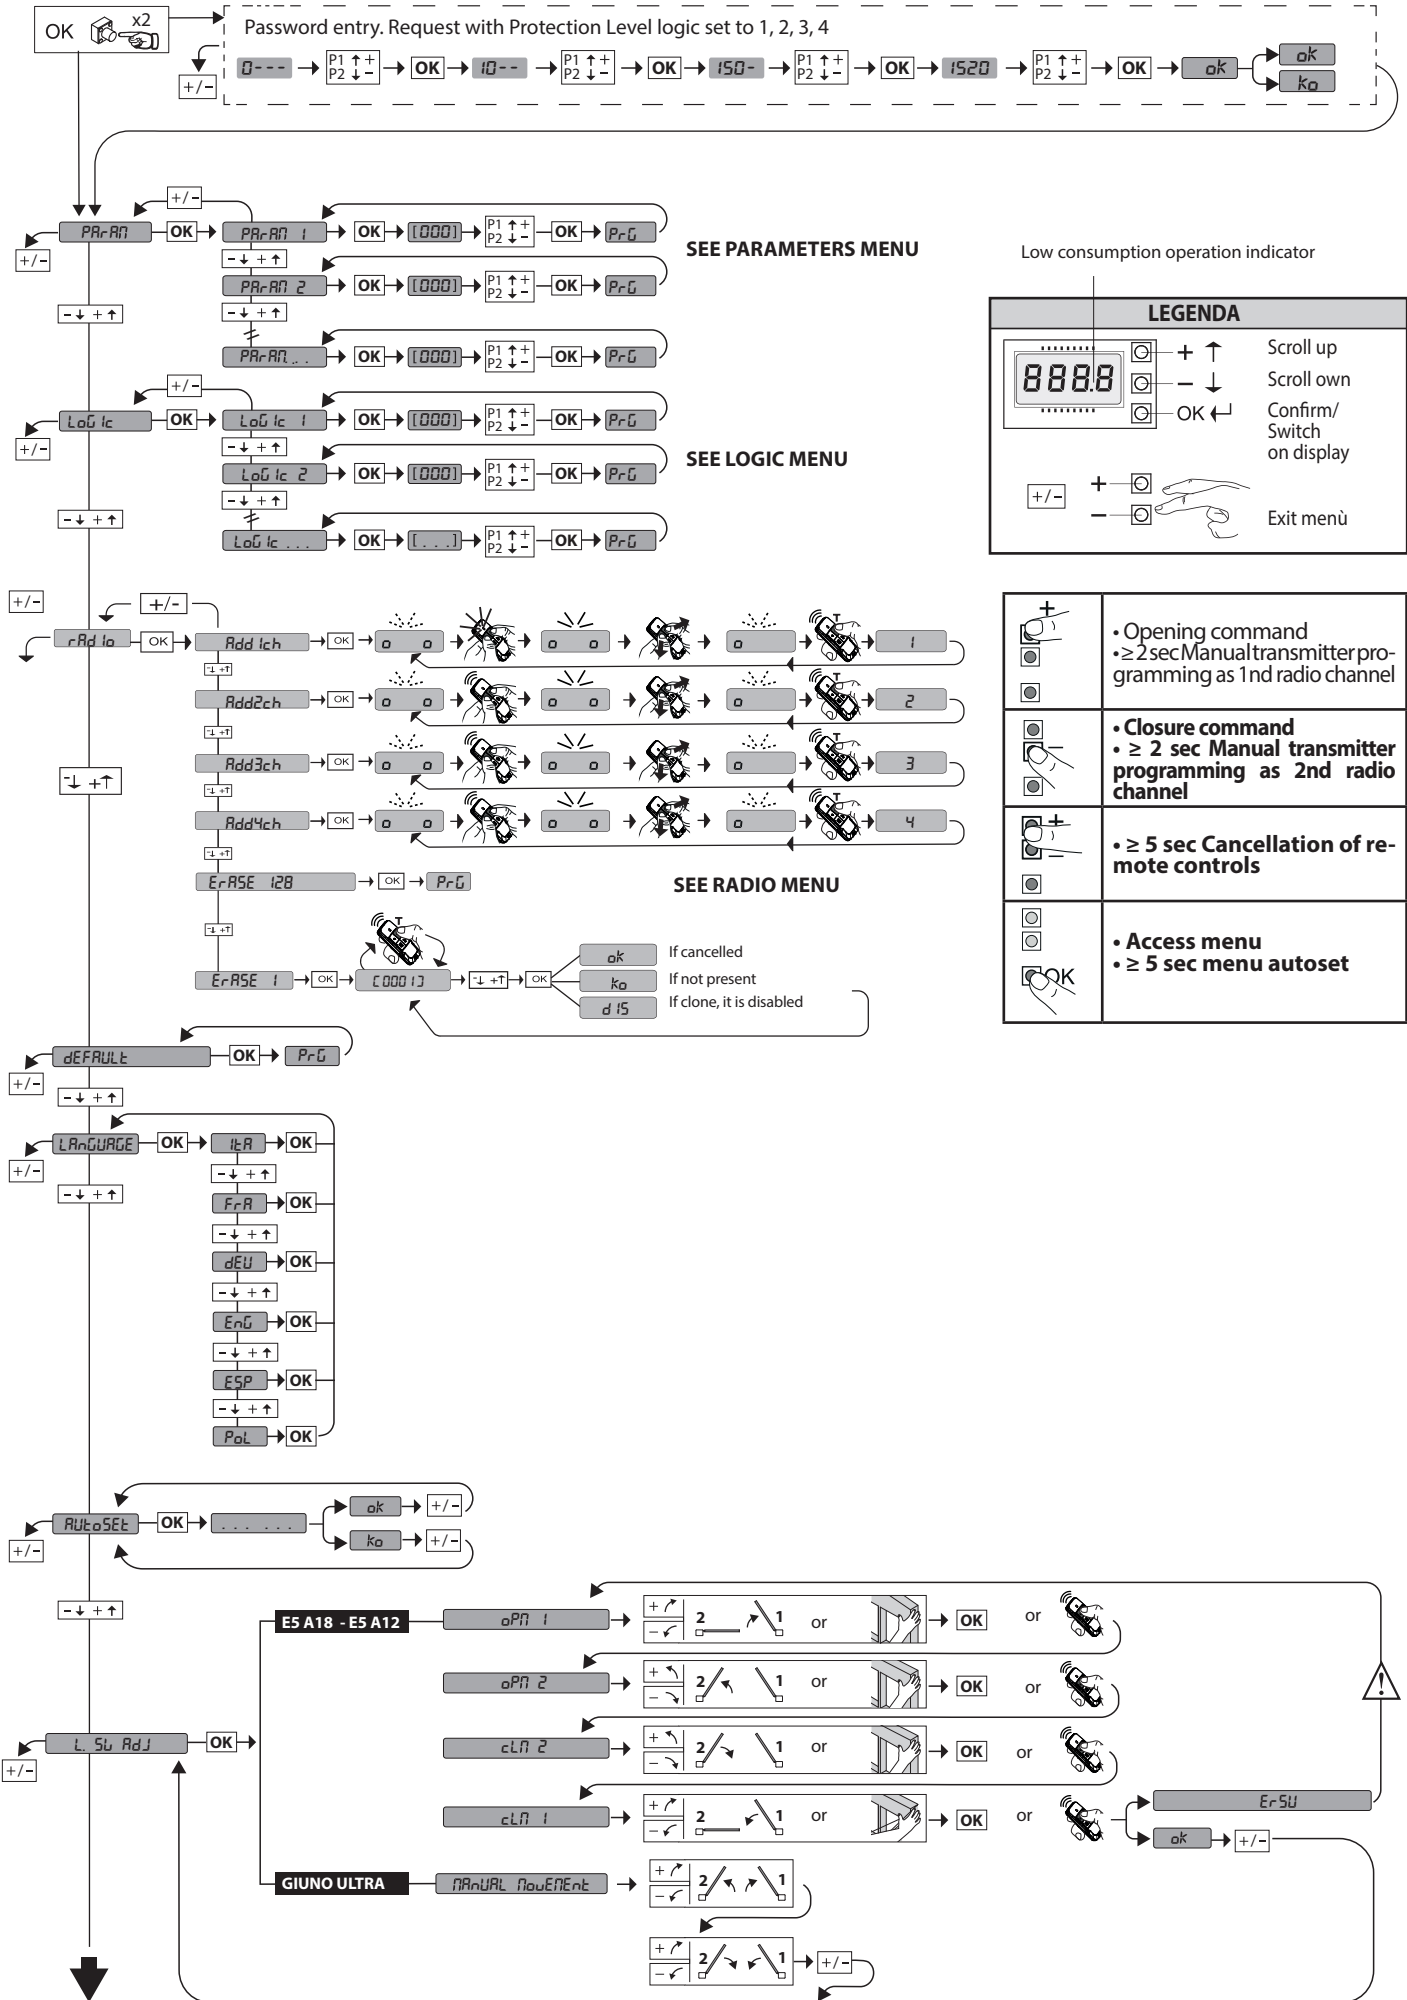



Low consumption operation indicator

LEGENDA	
	Scroll up
	Scroll own
	Confirm/ Switch on display
	Exit menù

	• Opening command • ≥ 2 sec Manual transmitter programming as 1nd radio channel
	• Closure command • ≥ 2 sec Manual transmitter programming as 2nd radio channel
	• ≥ 5 sec Cancellation of remote controls
	• Access menu • ≥ 5 sec menu autose

ACCESS MENU FIG. 1

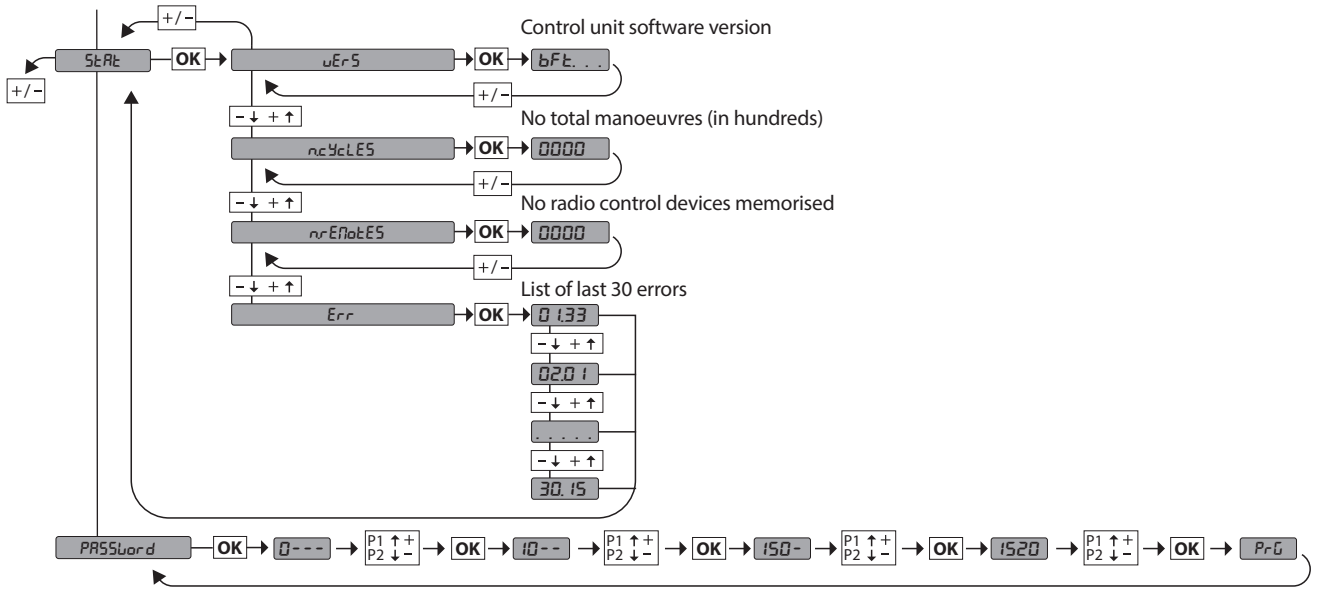

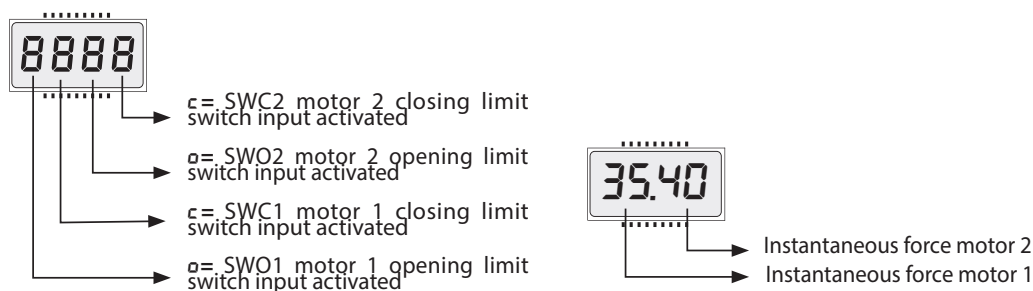

DIAGNOSTICS

Diagnosics code	DESCRIPTION	NOTES
StRE	START E external start input activated	
StRI	START I internal start input activated	
oPEN	OPEN input activated	
cLS	CLOSE input activated	
PEd	PED pedestrian input activated	
tIME	TIMER input activated	
StoP	STOP input activated	
Phot	Activation of PHOT photocell input or, if configured as verified photocell, Activation of the associated FAULT input	
PhoP	Activation of PHOT OP opening photocell input or, if configured as active verified photocell only when opening, Activation of the associated FAULT input	
PhcL	Activation of PHOT CL closing photocell input or, if configured as active verified photocell only when closing, Activation of the associated FAULT input	
bAR	Activation of BAR safety edge input or, if configured as verified safety edge, Activation of the associated FAULT input	
bARo	Activation of BAR safety edge input with ACTIVE reversal ONLY WHILE OPENING, or, if configured as verified safety edge active only while opening, Activation of the associated FAULT input	
bARc	Activation of BAR safety edge input with ACTIVE reversal ONLY WHILE CLOSING, or, if configured as verified safety edge active only while closing, Activation of the associated FAULT input	
SEt	The board is standing by to perform a complete opening-closing cycle uninterrupted by intermediate stops in order to acquire the torque required for movement. WARNING! Obstacle detection not active	
Er01	Photocell test failed	Check photocell connection and/or logic settings
Er02	Safety edge test failed	Check safety edge connection and/or logic settings
Er03	Opening photocell test failed	Check photocell connection and/or parameter/logic setting
Er04	Closing photocell test failed	Check photocell connection and/or parameter/logic setting
Er06	8k2 safety edge test failed	Check safety edge connection and/or parameter/logic settings
Er07	Opening safety edge test failed	Check safety edge connection and/or parameter/logic settings
Er08	Closing safety edge test failed	Check safety edge connection and/or parameter/logic settings
Er1H*	Board hardware test error	- Check connections to motor - Hardware problems with board (contact technical assistance)
Er2H*	Encoder error	- Motor or encoder signal power cables inverted/disconnected or incorrect programming (see Fig. E) - Actuator movement is too slow or stopped with respect to programmed operation.
Er3H*	Reverse due to obstacle - Amperostop	Check for obstacles in path
Er4H*	Thermal cutout	Allow automated device to cool
Er5H*	Communication error with remote devices	Check connection with serial-connected accessory devices and/or expansion boards
Er72	Consistency error of the control unit's parameters (Logics and Parameters)	Pressing OK the detected settings are confirmed. The board will keep on working with the detected settings. ⚠ The board settings must be checked (Parameters and Logics)
Er73	D-track parameter error	Pressing OK, the board will keep on working with D-track as a default. ⚠ An autotest is required
Er83	EEPROM memory error	Check that the memory card has been inserted correctly, try turning the card off and on again. If the problem persists, contact technical assistance.
Er8H - Er9H	Internal system supervision control error.	Try switching the board off and back on again. If the problem persists, contact the technical assistance department.
ErF2	Power supply overload	
ErF3	Error in the configuration of the logics (SAFE inputs, motor type)	Check that the SAFE logic or motor type configuration is correct.
ErF9	Solenoid lock output overload	- Check lock connections - Unsuitable lock
Er5L	Error during limit switch adjustment Only for E5 BT A18 / E5 BT A12	Motor or encoder signal power cables inverted/disconnected or incorrect programming. (See Fig. E)

*H= 0, 1, ..., 9, A, B, C, D, E, F

1) GENERAL INFORMATION

The **THALIA BT A80** control panel is supplied by the manufacturer with standard settings. Any variation must be set using the built-in on-screen programmer.

Its main features are:

- Control of 1 or 2 24V BT motors
Note: 2 motors of the same type must be used.
- Electronic torque control with obstacle detection
- Limit switch control inputs based on motor selected
- Separate inputs for safety devices
- Built-in radio receiver rolling code.

The board has a terminal strip of the removable kind to make maintenance or replacement easier. It comes with a series of prewired jumpers to make the installer's job on site easier.

The jumpers concern terminals: 70-71, 70-72, 70-73. If the above-mentioned terminals are being used, remove the relevant jumpers.

2) TESTING

The **THALIA BT A80** panel controls (checks) the start relays and safety devices (photocells) before performing each opening and closing cycle.

If there is a malfunction, make sure that the connected devices are working properly and check the wiring.

3) TUBE ARRANGEMENT Fig. A

4) TERMINAL BOARD WIRING Fig. B

WARNINGS - When performing wiring and installation, refer to the standards in force and, whatever the case, apply good practice principles.

Wires carrying different voltages must be kept physically separate from each other, or they must be suitably insulated with at least 1mm of additional insulation.

Wires must be secured with additional fastening near the terminals, using devices such as cable clamps.

All connecting cables must be kept far enough away from the dissipater.

WARNING! For connection to the mains power supply, use a multicore cable with a cross-sectional area of at least 2x1.5mm² of the kind provided for by the regulations in force. To connect the motors, use a cable with a cross-sectional area of at least 1.5mm² of the kind provided for by the regulations in force. The cable must be type H05RN-F at least.

5) TECHNICAL SPECIFICATIONS

Power supply	220-230V 50/60 Hz
Power	200W
Operating temperature range	-20 / +60°C
Thermal overload protection	Software
IP	45
Accessories power supply	24V --- (≤ 0.5 A)
AUX 1	NO 24V ---powered contact (≤ 1A)
AUX 2	NO contact (24V ≈ / ≤ 1A)
Max.n° of transmitters that can be memorized	128
	2048 (only with expansion kit)

Usable transmitter versions:
All ROLLING CODE transmitters compatible with



	Terminal	Definition	Description
Power supply	L	LINE	Single-phase power supply 220-230V 50/60 Hz
	N	NEUTRAL	
Motor	10	MOT1 +	Connection motor 1. Time lag during closing. Check connections shown in Fig.E
	11	MOT1 -	
	14	MOT2 +	Connection motor 2. Time lag during opening. Check connections shown in Fig.E
	15	MOT2 -	
Aux	20	AUX 1-POWERED CONTACT 24V --- (≤ 1A)	AUX1 configurable output - Default setting FLASHING LIGHT. 2ND RADIO CHANNEL/ SCA GATE OPEN LIGHT/ COURTESY LIGHT command/ ZONE LIGHT command/ STAIR LIGHT/ GATE OPEN ALARM/ FLASHING LIGHT/ SOLENOID LATCH/ MAGNETIC LOCK/ MAINTENANCE/ FLASHING LIGHT AND MAINTENANCE. Refer to "AUX output configuration" table.
	21		
	26	AUX 2 - FREE CONTACT (N.O.) (24V ≈ / ≤ 1A)	AUX 2 configurable output - Default setting 2ND RADIO CHANNEL Output. 2ND RADIO CHANNEL/ SCA GATE OPEN LIGHT/ COURTESY LIGHT command/ ZONE LIGHT command/ STAIR LIGHT/ GATE OPEN ALARM/ FLASHING LIGHT/ SOLENOID LATCH/ MAGNETIC LOCK. Refer to "AUX output configuration" table.
	27		
	28	LOCK 12/24V ---	Lock type Logic = 0 - 12V --- snap action electric lock output (max 30W). Pulse activated output on each opening.
	29		Lock type Logic = 1 - 12V --- magnet electric lock output (max 15W). Output Activated with gate closed.
Lock type Logic = 2 - 24V --- snap action electric lock output (max 30W). Pulse activated output on each opening.			
Lock type Logic = 3 - 24V --- magnet electric lock output (max 15W). Output Activated with gate closed.			
		Lock type Logic = 4 - Traction lock: active throughout the manoeuvre. Max.: 1 A for 1S, 0.2 A for the rest of the manoeuvre.	
Limit switch for ELI 250 BT VIRGO SMART BT A ELI BT A35 V + FCE ELI BT A40 + FCE 5 wires	41	+ REF SWE	Limit switch common
	42	SWC 1	Motor 1 closing limit switch SWC1 (N.C.).
	43	SWO 1	Motor 1 opening limit switch SWO1 (N.C.).
	44	SWC 2	
	45	SWO 2	Motor 2 opening limit switch SWO2 (N.C.).
Limit switch for PHOBOS N BT IGEA BT SUB BT PHOBOS BT A KUSTOS BT A VIRGO SMART BT A 3 wires	42	SW 1	Limit switch control motor 1. For actuators with single-wire limit switch control.
	43	SW 2	Limit switch control motor 2. For actuators with single-wire limit switch control.
Limit switch for GIUNO ULTRA BT A20 GIUNO ULTRA BT A50 E5 BT A18 E5 BT A12	40	- REF SWE	Limit switch common
	42	SW 1	Limit switch control motor 1.
	43	SW 2	Limit switch control motor 2.
Limit switch for ELI BT A35 ELI BT A40	40	- REF SWE	Encoder power supply, white cable
	41	+ REF SWE	Encoder power supply, brown cable
	42	ENC M1	Engine 1 encoder signal, green cable
	43	ENC M2	Engine 2 encoder signal, green cable

INSTALLATION MANUAL

	Terminal	Definition	Description
Accessories power supply	50	24V-	Accessories power supply output.
	51	24V+	
	52	24 Vsafe+	Tested safety device power supply output (photocell transmitter and safety edge transmitter). Output active only during operating cycle.
Commands	60	Common	IC 1 and IC 2 inputs common
	61	IC 1	Configurable command input 1 (N.O.) - Default START E. START E / START I / OPEN / CLOSE / PED / TIMER / TIMER PED Refer to the "Command input configuration" table.
	62	IC 2	Configurable command input 2 (N.O.) - Default PED. START E / START I / OPEN / CLOSE / PED / TIMER / TIMER PED Refer to the "Command input configuration" table.
Safety devices	70	Common	STOP, SAFE 1 and SAFE 2 inputs common
	71	STOP	The command stops movement. (N.C.) If not used, leave jumper inserted.
	72	SAFE 1	Configurable safety input 1 (N.C.) - Default PHOT. PHOT / PHOT TEST / PHOT OP / PHOT OP TEST / PHOT CL / PHOT CL TEST / BAR / BAR TEST / BAR 8K2 / BAR OP / BAR OP TEST / BAR 8K2 OP / BAR CL / BAR CL TEST / BAR 8K2 CL Refer to the "Safety input configuration" table.
	73	SAFE 2	Configurable safety input 2 (N.C.) - Default PHOT. PHOT / PHOT TEST / PHOT OP / PHOT OP TEST / PHOT CL / PHOT CL TEST / BAR / BAR TEST / BAR 8K2 / BAR OP / BAR OP TEST / BAR 8K2 OP / BAR CL / BAR CL TEST / BAR 8K2 CL Refer to the "Safety input configuration" table.
Antenna	Y	ANTENNA	Antenna input.
	#	SHIELD	Use an antenna tuned to 433MHz. Use RG58 coax cable to connect the Antenna and Receiver. Metal bodies close to the antenna can interfere with radio reception. If the transmitter's range is limited, move the antenna to a more suitable position.

AUX output configuration

Aux logic = 0 - MONOSTABLE RADIO CHANNEL output. The contact remains closed for 1s when the radio channel is activated.
Aux logic= 1 - SCA GATE OPEN LIGHT output. Contact stays closed during opening and with leaf open, intermittent during closing, open with leaf closed.
Aux logic= 2 - COURTESY LIGHT control output. The contact remains closed for the time set at t_{L} t_{Lh}
Aux logic= 3 - ZONE LIGHT command output. Contact stays closed for the full duration of operation.
Aux logic= 4 - STAIR LIGHT output. Contact stays closed for 1 second at start of operation.
Aux logic= 5 - GATE OPEN ALARM output. Contact stays closed if the leaf stays open for double the set TCA time.
Aux logic= 6 - FLASHING LIGHT output. Contact stays closed while leaves are operating.
Aux logic= 7 - Not used
Aux logic= 8 - Not used
Aux logic= 9 - MAINTENANCE output. Contact stays closed once the value set for the Maintenance parameter is reached, to report that maintenance is required.
Aux logic= 10 - FLASHING LIGHT AND MAINTENANCE output. Contact stays closed while leaves are operating. If the value set for the Maintenance parameter is reached, once the gate has finished moving and the leaf is closed, the contact closes for 10 sec. and opens for 5 sec. 4 times to report that maintenance is required.
Aux Logic= 11 - Not used
Aux Logic= 12 - Not used
Aux Logic = 13 - CLOSED GATE STATUS output. The contact remains closed when the gate is closed.
AUX logic = 14 - BISTABLE RADIO CHANNEL output. The contact changes status (open-closed) when the radio channel is activated
AUX Logic = 15 - TIMED RADIO CHANNEL output. The contact remains closed for a programmable time when the Radio channel is activated (t_{UR} t_{UR}). If the key is pressed again DURING this time, the time count restarts
Aux logic = 16 - OPEN GATE STATUS output. The contact remains closed when the gate is open.

Command input configuration

IC logic= 0 - Input configured as Start E. Operation according to S_{TEP} - b_{Y} - S_{TEP} $\Pi_{ouE}f_{inE}$ logic. External start for traffic light control.
IC logic= 1 - Input configured as Start I. Operation according to S_{TEP} - b_{Y} - S_{TEP} $\Pi_{ouE}f_{inE}$ logic. Internal start for traffic light control.
IC logic= 2 - Input configured as Open. The command causes the leaves to open. If the input stays closed, the leaves stay open until the contact is opened. When the contact is open, the automated device closes following the TCA time, where activated.
IC logic= 3 - Input configured as Closed. The command causes the leaves to close.
IC logic= 4 - Input configured as Ped. The command causes the leaf to open to the pedestrian (partial) opening position. Operation according to S_{TEP} - b_{Y} - S_{TEP} $\Pi_{ouE}f_{inE}$ logic
IC logic= 5 - Input configured as Timer. Operation same as open except closing is guaranteed even after a mains power outage.
IC logic= 6 - Input configured as Timer Ped. The command causes the leaf to open to the pedestrian (partial) opening position. If the input stays closed, the leaf stays open until the contact is opened. If the input stays closed and a Start E, Start I or Open command is activated, a complete opening-closing cycle is performed before returning to the pedestrian opening position. Closing is guaranteed even after a mains power outage.

Safety input configuration

SAFE logic= 0 - Input configured as Phot (photocell) non tested (*). (fig.F, ref.1). Enables connection of devices not equipped with supplementary test contacts. When beam is broken, photocells are active during both opening and closing. When beam is broken during closing, movement is reversed only once the photocell is cleared. If not used, leave jumper inserted.
SAFE logic= 1 - Input configured as Phot test (tested photocell). (fig.F, ref.2). Switches photocell testing on at start of operation. When beam is broken, photocells are active during both opening and closing. When beam is broken during closing, movement is reversed only once the photocell is cleared.
SAFE logic= 2 - Input configured as Phot op (photocell active during opening only) non tested (*). (fig.F, ref.1). Enables connection of devices not equipped with supplementary test contacts. In the event beam is broken, photocell operation is disabled during closing. During opening, stops motion for as long as the photocell beam stays broken. If not used, leave jumper inserted.
SAFE logic= 3 - Input configured as Phot op test (tested photocell active during opening only) (fig.F, ref.2). Switches photocell testing on at start of operation. In the event beam is broken, photocell operation is disabled during closing. During opening, stops motion for as long as the photocell beam stays broken.

SAFE logic= 4 - Input configured as Phot cl (photocell active during closing only) non tested (*). (fig.F, ref.1). Enables connection of devices not equipped with supplementary test contacts. In the event beam is broken, photocell operation is disabled during opening. During closing, movement is reversed immediately. If not used, leave jumper inserted.
SAFE logic= 5 - Input configured as Phot cl test (tested photocell active during closing only (fig.F, ref.2). Switches photocell testing on at start of operation. In the event beam is broken, photocell operation is disabled during opening. During closing, movement is reversed immediately.
SAFE logic= 6 - Input configured as Bar (safety edge) non tested (*). (fig.F, ref.3). Enables connection of devices not equipped with supplementary test contacts. The command reverses movement for 2 sec.. If not used, leave jumper inserted.
SAFE logic= 7 - Input configured as Bar (tested safety edge (fig.F, ref.4). Switches safety edge testing on at start of operation. The command reverses movement for 2 sec.
SAFE logic= 8 - Input configured as Bar 8k2 (fig.F, ref.5). Input for resistive edge 8K2. The command reverses movement for 2 sec.
SAFE logic=9 Input configured as Bar op, safety edge with active inversion only while opening, if activated while closing, the automation stops (STOP) (Fig. F, ref. 3). Allows connecting devices not fitted with supplementary test contact. The operation while opening causes the movement to be reversed for 2 seconds, the operation while closing causes the automation to stop. If not used, leave jumper inserted.
SAFE logic=10 Input configured as Bar op test, safety edge checked with active inversion only while opening, if activated while closing, the automation stops (STOP) (Fig. F, ref. 4). Activates testing safety edges when starting operation. The operation while opening causes the movement to be reversed for 2 seconds, the operation while closing causes the automation to stop.
SAFE logic=11 Input configured as Bar 8k2 op, 8k2 safety edge with active inversion only while opening, if activated while closing, the automation stops (STOP) (Fig. F, ref. 5). The operation while opening causes the movement to be reversed for 2 seconds, the operation while closing causes the automation to stop.
SAFE logic=12 Input configured as Bar cl, safety edge with active inversion only while closing, if activated while opening, the automation stops (STOP) (Fig. F, ref. 3). Allows connecting devices not fitted with supplementary test contact. The operation while closing causes the movement to be reversed for 2 seconds, the operation while opening causes the automation to stop. If not used, leave jumper inserted.
SAFE logic=13 Input configured as Bar cl test, safety edge checked with active inversion only while closing, if activated while opening, the automation stops (STOP) (Fig. F, ref. 4). Activates testing safety edges when starting operation. The operation while closing causes the movement to be reversed for 2 seconds, the operation while opening causes the automation to stop.
SAFE logic=14 Input configured as Bar 8k2 cl, safety edge with active inversion only while closing, if activated while opening, the automation stops (STOP) (Fig. F, ref. 5). The operation while closing causes the movement to be reversed for 2 seconds, the operation while opening causes the automation to stop.

(*) If "D" type devices are installed (as defined by EN12453), connect in unverified mode, foresee mandatory maintenance at least every six months.

Radio channel control configuration
CH logic= 0 - Control configured as Start E. Operation according to 5εEP-bY-5εEP ΠαυΕΠηε logic. External start for traffic light control.
CH logic= 1 - Control configured as Start I. Operation according to 5εEP-bY-5εEP ΠαυΕΠηε logic. Internal start for traffic light control.
CH logic= 2 - Control configured as Open. The command causes the leaves to open.
CH logic= 3 - Control configured as Closed. The command causes the leaves to close.
CH logic= 4 - Control configured as Ped. The command causes the leaf to open to the pedestrian (partial) opening position. Operation according to 5εEP-bY-5εEP ΠαυΕΠηε logic.
Logica CH= 5- Control configured as STOP. The command performs a STOP
CH logic= 6 - Control configured as AUX1. (**) The control activates the AUX1 output
CH logic= 7 - Not used
CH logic = 8- Radio command configured as AUX11 (**). The command activates the AUX11 output (only with expansion card)
CH logic= 9 - Control configured as AUX2. (**) The control activates the AUX2 output
CH logic= 10 - Control configured as EXPO1. (**) The control activates the EXPO1 output
CH logic= 11 - Control configured as EXPO2. (**) The control activates the EXPO2 output
CH logic = 12- Command set up as COURTESY LIGHT The command enables the light with bi-stable logic. At least one auxiliary output must be set as a courtesy light.

() Active only if the output is configured as Monostable Radio Channel, Courtesy Light, Zone Light, Stair Light, Bistable Radio Channel or Timed Radio Channel.**

6) MOTOR WIRING Fig. E

7) SAFETY DEVICES

7.1) TESTED DEVICES Fig. F

7.2) CONNECTION OF 1 PAIR OF NON-CHECKED PHOTOCELLS FIG.C

7.3) CONNECTION OF 1 PAIR OF CHECKED PHOTOCELLS FIG. D

8) CALLING UP MENUS: FIG. 1

8.1) PARAMETERS MENU (ΡΡr Ρη) (PARAMETERS TABLE "A")

8.2) LOGIC MENU (L οϋ ιc) (LOGIC TABLE "B")

8.3) RADIO MENU (r Ρd ιo) (RADIO TABLE "C")

8.4) DEFAULT MENU (dΕFRυLε)

Restores the controller's DEFAULT factory settings. Following this reset, you will need to run the AUTOSET function again.

8.5) LANGUAGE MENU (L ΡηϋURGE)

Used to set the programmer's language on the display.

8.6) AUTOSET MENU (ΡυLε ο5Εε)

- Launch an autosest operation by going to the relevant menu.
- As soon as you press the OK button, the "....." message is displayed and the control unit commands the device to perform a full cycle (opening followed by closing), during which the minimum torque value required to move the leaf is set automatically. The number of cycles required for the autosest function can range from 1 to 3. During this stage, it is important to avoid breaking the photocells' beams and not to use the START and STOP commands or the display. Once this operation is complete, the control unit will have automatically set the optimum torque values. Check them and, where necessary, edit them as described in the programming section.

⚠ WARNING!! Check that the force of impact measured at the points provided for by standard EN 12445 is lower than the value laid down by standard EN 12453.

⚠ Impact forces can be reduced by using deformable edges.

⚠ Warning!! While the autosest function is running, the obstacle detection function is not active. Consequently, the installer must monitor the automated system's movements and keep people and property out of range of the automated system.

SOLENOID LOCK

⚠ WARNING: In the case of leaves longer than 3m, it is essential to install a solenoid lock.

8.7) INSTALLATION TEST PROCEDURE

1. Run the AUTOSET cycle (*)
2. Check the impact forces: if they fall within the limits (**) skip to point 10 of the procedure, otherwise
3. Where necessary, adjust the speed and sensitivity (force) parameters: see parameters table.
4. Check the impact forces again: if they fall within the limits (**) skip to point 10 of the procedure, otherwise
5. Apply a shock absorber profile
6. Check the impact forces again: if they fall within the limits (**) skip to point 10 of the procedure, otherwise
7. Apply pressure-sensitive or electro-sensitive protective devices (such as a safety edge) (**)
8. Check the impact forces again: if they fall within the limits (**) skip to point 10 of the procedure, otherwise
9. Allow the drive to move only in "Deadman" mode
10. Make sure all devices designed to detect obstacles within the system's operating range are working properly

(*) Before running the autosest function, make sure you have performed all the assembly and make-safe operations correctly, as set out in the installation warnings in the drive's manual.

(**) Based on the risk analysis, you may find it necessary to apply sensitive protective devices anyway

8.8) LIMIT STOP ADJUSTMENT MENU (L 5υ Ρd J)

Used to adjust the limit stops for motors equipped with encoder; moreover, for motors equipped with independent limit stop wiring harness allows the correct positioning of the leaf for the subsequent limit stop adjustment. For motors not specified, the menu is not active and the message "unavailable" is shown

on the display

NOTE: these manoeuvres are performed in person preset mode, at slow speed, without the intervention of the safety devices.

8.8.1) GIUNO ULTRA BT A20, GIUNO ULTRA BT A50

Using the „+/-“ buttons on the display, bring the leaf in the desired position. To adjust the limit stops, refer to the settings for limit stop adjustment provided in the GIUNO ULTRA motor manual.

8.8.2) E5 BT A12, E5 BT A18

Using the „+/-“ buttons on the display, bring the leaf in the position indicated by the display (opening or closing). Once the desired position is reached, confirm the position by pressing the OK button. For E5 motors, the leaf can be manually positioned close to the limit stops by pushing the gate; then move the gate using the „+/-“ button until it is against the mechanical stopper. To confirm the position, or use the OK button or the radio control (previously stored).

8.9) STATISTICS MENU

Used to view the version of the board, the total number of operations (in hundreds), the number of transmitters memorized and the last 30 errors (the first 2 digits indicate the position, the last 2 give the error code). Error 01 is the most recent. A blinking error indicates the first error after the last maintenance.

8.10) PASSWORD MENU

Used to set a password for the board's wireless programming via the U-link network.

With "PROTECTION LEVEL" logic set to 1,2,3,4, the password is required to access the programming menus. After 10 consecutive failed attempts to log in, you will need to wait 3 minutes before trying again. During this

time, whenever an attempt is made to log in, the display will read "BLOC". The default password is 1234.

9) CLOSING LIMIT SWITCH PRESSURE Fig. G Ref. A-B OPENING DIRECTION Fig. E

10) U-LINK OPTIONAL MODULES

Refer to the U-link instructions for the modules.

The use of some models causes lowered radio capacity. Adjust the system using an appropriate antenna tuned to 433MHz.

WARNING! Incorrect settings can result in damage to property and injury to people and animals.





WARNING: Check that the force of impact measured at the points provided for by standard EN 12445 is lower than the value laid down by standard EN 12453.



Impact forces can be reduced by using deformable edges.

For best results, it is advisable to run the autosest function with the motors idle (i.e. not overheated by a considerable number of consecutive operations).

TABLE "A" - PARAMETERS MENU - (PRR-RF)

Parameter	min.	max.	Default	Personal	Definition	Description
oPEn dELAY t INE	0	10	3		Motor 2 opening delay time [s]	Motor 2 opening delay time with respect to motor 1.
cLS dELAY t INE	0	25	6		Motor 1 closing delay time [s]	Motor 1 closing delay time with respect to motor 2. NOTE: if the time is set to maximum, before starting, engine 1 waits for the complete shut down of engine 2.
t cR	0	120	10		Automatic closing time [s]	Waiting time before automatic closing.
PEd t cR	0	120	0		Automatic closure time from pedestrian manoeuvre [s]	Waiting time before automatic closure after a pedestrian manoeuvre, ONLY if different from 0. If the parameter is set to 0, the waiting time after a pedestrian manoeuvre is the same as the non-pedestrian manoeuvre.
t rF. LGht cLr. t	1	180	40		Time-to-clear traffic light zone [s]	Time-to-clear for the zone run through by traffic controlled by the traffic light.
t. L LGht	30	300	90		Lighting time of the courtesy light [s]	Lighting duration of the courtesy light [s]
oUTPUt t INE	1	240	10		Activation time of the timed output [s]	Timed radio channel output activation time in seconds
oP. d ISt. SlOwD	0	100	10		Slow-down distance during opening [%]	Slow-down distance for motor(s) during opening, given as a percentage of total travel. WARNING: Once the parameter has been edited, a complete uninterrupted opening-closing cycle is required. WARNING: when the display reads "SET", obstacle detection is not active. ATTENTION: with actuators with integrated locks, the permanently active slowdown to a value higher than 5 is mandatory. WARNING: in GIUNO, the slow-down distance is set with the sliding sensors ATTENTION: for the ELI BT A35 engine type, the slowing cannot be excluded; values below 10% will be considered to be 10%.
cL. d ISt. SlOwD	0	100	10		Slow-down distance during closing [%]	Slow-down distance for motor(s) during closing, given as a percentage of total travel. WARNING: Once the parameter has been edited, a complete uninterrupted opening-closing cycle is required. WARNING: when the display reads "SET", obstacle detection is not active. ATTENTION: with actuators with integrated locks, the permanently active slowdown to a value higher than 5 is mandatory. WARNING: in GIUNO, the slow-down distance is set with the sliding sensors ATTENTION: for the ELI BT A35 engine type, the slowing cannot be excluded; values below 10% will be considered to be 10%.
d ISt. dEcEL	0	100	15		Deceleration distance [%]	Deceleration distance (switch from running speed to slow-down speed) for motor(s) both during opening and during closing, given as a percentage of total travel. WARNING: Once the parameter has been edited, a complete uninterrupted opening-closing cycle is required. WARNING: when the display reads "SET", obstacle detection is not active.
PEd oPEn INt	10	100	100		Partial opening M1 [%]	Partial opening distance as a percentage of total opening following activation of PED pedestrian command.
oP. ForcE	1	100	50		Leaf force during opening [%]	Force exerted by leaf/leaves during opening. This is the percentage of force delivered, beyond the force stored during the autosest cycle (and subsequently updated), before an obstacle alarm is generated. The parameter is set automatically by the autosest function.  WARNING: It affects impact force directly: make sure that current safety requirements are met with the set value (*). Install anti-crush safety devices where necessary (**).
cLS. ForcE	1	100	50		Leaf force during closing [%]	Force exerted by leaf/leaves during closing. This is the percentage of force delivered, beyond the force stored during the autosest cycle (and subsequently updated), before an obstacle alarm is generated. The parameter is set automatically by the autosest function.  WARNING: It affects impact force directly: make sure that current safety requirements are met with the set value (*). Install anti-crush safety devices where necessary (**).

INSTALLATION MANUAL

D814283 0AR00_04

Parameter	min.	max.	Default	Personal	Definition	Description
Slc Pressure Force	0	100	100		Leaf pressure force on the closure limit-switch [%]	The force exerted by the leaf during the pressure on the closure limit-switch.
oP SPEED	15	100	100		Opening speed [%]	Percentage of maximum speed that can be reached by motor(s) during opening. WARNING: Once the parameter has been edited, a complete uninterrupted opening-closing cycle is required. WARNING: when the display reads "SET", obstacle detection is not active.
cL SPEED	15	100	100		Closing speed [%]	Percentage of maximum speed that can be reached by motor(s) during closing. WARNING: Once the parameter has been edited, a complete uninterrupted opening-closing cycle is required. WARNING: when the display reads "SET", obstacle detection is not active.
Slow SPEED	15	100	25		Slow-down speed [%]	Opening and closing speed of motor(s) during slow-down stage, given as a percentage of maximum running speed. WARNING: Once the parameter has been edited, a complete uninterrupted opening-closing cycle is required. WARNING: When the display reads ""SET", obstacle detection is not active. ATTENTION: for motor type ELI BT A35 it is not possible to exclude the deceleration; values greater than 50% will be considered at 50%.
Maintenance	0	250	0		Programming number of operations for maintenance threshold [in hundreds]	Allows you to set a number of operations after which the need for Maintenance will be reported on the AUX output configured as Maintenance or Flashing Light and Maintenance .




(*) In the European Union, apply standard EN 12453 for force limitations, and standard EN 12445 for measuring method.

(**) Impact forces can be reduced by using deformable edges.

TABLE "B" - LOGIC MENU - (Logic)

Logic	Definition	Default	Cross out setting used	Optional extras		
Motor type	Motor type (Set the type of motor connected to the board).	0	0	Motors not active		
			1	NOT MANAGED		
			2	NOT MANAGED		
			3	IGEA BT		
			4	NOT MANAGED		
			5	NOT MANAGED		
			6	SUB BT		
			7	KUSTOS BT A - PHOBOS BT A - PHOBOS N BT		
			8	GIUNO ULTRA BT A 20 - GIUNO ULTRA BT A50		
			9	VIRGO SMART BT A - 5 wires		
			10	VIRGO SMART BT A - 3 wires		
			11	E5 BT A18		
			12	E5 BT A12		
			13	ELI BT A40 + FCE		
			14	ELI BT A35 V + FCE		
			15	ELI BT A40		
			16	ELI BT A35		
17	PHOBOS VELOCE BT B35					
TCA	Automatic Closing Time	0	0	Logic not enabled		
			1	Switches automatic closing on		
			2	It activates automatic closure also after a reversal due to an obstacle when closing. In case of a reversal during opening, it retries opening after 2 seconds; if it finds an obstacle during opening 4 consecutive times, it closes. Configuration can only be activated with the E5 BT A12 motor (motor type 12). The logic can only be used with pedestrian doors the energy of which is limited to within 1.69J.		
PSAD	Power Down activation	1	0	Power Down DEACTIVATED, i.e. the power supply of the accessories is always present.		
			1	Power Down ACTIVE, i.e. the power supply of the accessories is deactivated with the gate stopped.		
ULink 1	Activates ULink Protocol	0	0	Both U-Link connectors support the new U-Link2.0 protocol.		
			1	Enabling of the U-Link protocol (previous version) on the optional card connector 1. The previous version of the U-Link protocol can be activated on connector 1.		
FAST CLS.	Fast closing	0	0	Logic not enabled		
			1	Closes 3 seconds after the photocells are cleared before waiting for the set TCA to elapse.		
battery config	Battery config.	0	0	No operative change.		
			1	Total opening and waiting for the power to come back on.		
			2	Partial opening based on the "partial opening" parameter, and waiting for the power to come back on.		
			3	Total closure and waiting for the power to come back on.		
STEP-BY-STEP movement	Step-by-step movement	0	0	Inputs configured as Start E, Start I, Ped operate with 4-step logic.		
			1	Inputs configured as Start E, Start I, Ped operate with 3-step logic. Pulse during closing reverses movement.		
			2	Inputs configured as Start E, Start I, Ped operate with 2-step logic. Movement reverses with each pulse.		
			step-by-step mov.			
				2 STEP	3 STEP	4 STEP
			CLOSED	OPENS	OPENS	OPENS
DURING CLOSING			STOPS			
OPEN		CLOSES	CLOSES			
DURING OPENING	CLOSES	STOP + TCA	STOP + TCA			
AFTER STOP	OPENS	OPENS	OPENS			

INSTALLATION MANUAL

Logic	Definition	Default	Cross out setting used	Optional extras
<i>PrE-ALARM</i>	Pre-alarm	0	0	The flashing light comes on at the same time as the motor(s) starts.
			1-10	The pre-alarm function is activated: The flashing light comes on before the motor(s) starts. The value of the parameter indicates the duration of the pre-flashing in seconds.
<i>hold-to-run</i>	Deadman	0	0	Pulse operation.
			1	Deadman mode. Input 61 is configured as OPEN UP. Input 62 is configured as CLOSE UP. Operation continues as long as the OPEN UP or CLOSE UP keys are held down.  WARNING: safety devices are not enabled.
			2	Emergency Deadman mode. Usually pulse operation. If the board fails the safety device tests (photocell or safety edge, Er0x) 3 times in a row, the device is switched to Deadman mode, which will stay active until the OPEN UP or CLOSE UP keys are released. Input 61 is configured as OPEN UP. Input 62 is configured as CLOSE UP.  WARNING: with the device set to Emergency Deadman mode, safety devices are not enabled.
			3	Dead-man function during closing. The input 61 is configured as OPEN UP. The input 62 is configured as CLOSE UP. The opening manoeuvre occurs automatically, the closing manoeuvre continues until the control button (CLOSE) is pressed.  WARNING: safety devices are not active during the closure.
<i>oPEn Ibl</i>	Block pulses during opening	0	0	Pulse from inputs configured as Start E, Start I, Ped has effect during opening.
			1	Pulse from inputs configured as Start E, Start I, Ped has no effect during opening.
<i>tCA Ibl</i>	Block pulses during TCA	0	0	Pulse from inputs configured as Start E, Start I, Ped has effect during TCA pause.
			1	Pulse from inputs configured as Start E, Start I, Ped has no effect during TCA pause.
<i>clOSE Ibl</i>	Block pulses during closing	0	0	Pulse from inputs configured as Start E, Start I, Ped has effect during closing.
			1	Pulse from inputs configured as Start E, Start I, Ped has no effect during closing.
<i>rAN bLoU c. oP</i>	Hammer during opening	0	0	Logic not enabled
			1	Before opening completely, the gate pushes for approx. 2 seconds as it closes. This allows the solenoid lock to be released more easily. IMPORTANT - Do not use this function if suitable mechanical stops are not in place.
<i>rAN bLoU c. cl</i>	Hammer during closing	0	0	Logic not enabled
			1	Before closing completely, the gate pushes for approx. 2 seconds as it opens. This allows the solenoid lock to be released more easily. IMPORTANT - Do not use this function if suitable mechanical stops are not in place.
<i>bLoc PErS ISt</i>	Stop maintenance	0	0	Logic not enabled
			1	If motors stay idle in fully open or fully closed position for more than one hour, they are switched on in the direction of the stop for approx. 3 seconds. This operation is performed every hour. NB: In hydraulic motors, this function serves to compensate a possible reduction in the volume of oil due to a drop in temperature during extended pauses, such as during the night, or due to internal leakage. IMPORTANT - Do not use this function if suitable mechanical stops are not in place.
<i>PrESS Sbc</i>	Closing limit switch pressure	0	0	Movement is stopped only when the closing limit switch trips: in this case, the tripping of the closing limit switch must be adjusted accurately (Fig.G Ref.B).
			1	Use when there is a mechanical stop in closed position. This function allows leaves to press against the mechanical stop without the Amperostop sensor interpreting this as an obstacle. Thus the rod continues its stroke for a few seconds after meeting the closing limit switch or as far as the mechanical stop. In this way, the leaves come to rest perfectly against the stop by allowing the closing limit switches to trip slightly earlier (Fig.G Ref.A).
<i>Ice</i>	Ice feature	0	0	The Amperostop safety trip threshold stays at the same set value.
			1	The controller automatically adjusts the obstacle alarm trip threshold at each start up. Check that the force of impact measured at the points provided for by standard EN 12445 is lower than the value laid down by standard EN 12453. If in doubt, use auxiliary safety devices. This feature is useful when dealing with installations running at low temperatures. WARNING: once this feature has been activated, you will need to perform an autotest opening and closing cycle.
<i>Not. on</i>	Number of active motors	2	1	Only motor 1 active (1 leaf).
			2	Both motors are activated (2 leaves).
<i>INSTALLATION ALTERNATIVE</i>	Installation alternative	0	0	See Fig.E0
			1	See Fig.E1
			2	See Fig.E2
			3	See Fig.E3
			4	See Fig.E4
			5	See Fig.E5
			6	See Fig.E6
7	See Fig.E7			
<i>SAFE</i>	Configuration of safety input SAFE 1. 72	0	0	Input configured as Phot (photocell).
			1	Input configured as Phot test (tested photocell).
			2	Input configured as Phot op (photocell active during opening only).
			3	Input configured as Phot op test (tested photocell active during opening only).

INSTALLATION MANUAL

D814283 0AR00_04

Logic		Definition	Default	Cross out setting used	Optional extras				
2 SAFE		Configuration of safety input SAFE 2. 74	6	4	Input configured as Phot cl (photocell active during closing only).				
				5	Input configured as Phot cl test (tested photocell active during closing only).				
				6	Input configured as Bar, safety edge.				
				7	Input configured as Bar, tested safety edge.				
				8	Input configured as Bar 8k2. (Inactive on SAFE 2,11,13).				
				9	Input configured as Bar OP, safety edge with inversion active only while opening. If while closing, the movement stops.				
Only with an expansion card. If you do not use the expansion card, leave the default setting (15)	10 SAFE	Configuration of safety input SAFE 10. 77	15	10	Input configured as Bar OP TEST, safety edge tested with inversion active only while opening. If while closing, the movement stops.				
	11 SAFE	Configuration of safety input SAFE 11. 78	15	11	Input configured as Bar OP 8k2, safety edge with inversion active only while opening. If while closing, the movement stops. (Inactive on SAFE 2,11,13).				
	12 SAFE	Configuration of safety input SAFE 12. 79	15	12	Input configured as Bar CL, safety edge with inversion active only while closing. If while opening, the movement stops.				
	13 SAFE	Configuration of safety input SAFE 13. 80	15	13	Input configured as Bar CL TEST, safety edge tested with inversion active only while closing. If while opening, the movement stops.				
				14	Input configured as Bar CL 8k2, safety edge with inversion active only while closing. If while opening, the movement stops. (Inactive onSAFE 2,11,13).				
				15	Input configured as deactivated. To be used without the expansion card. (Not active on Safe 1,2).				
1 IC		Configuration of command input IC 1. 61	0	0	Input configured as Start E.				
				1	Input configured as Start I.				
				2	Input configured as Open.				
				3	Input configured as Close.				
2 IC		Configuration of command input IC 2. 62	4	4	Input configured as Ped.				
				5	Input configured as Timer.				
Only with an expansion card	10 IC	Configuration of command input IC 10. 64	2	6	Input configured as Timer Pedestrian.				
	11 IC	Configuration of command input IC 11. 65	3						
1ch		Configuration of the 1st radio channel command	0	0	Radio control configured as START E.				
				1	Radio control configured as Start I.				
2ch		Configuration of the 2nd radio channel command	9	3	Radio control configured as Close				
				4	Radio control configured as Ped				
				5	Radio control configured as STOP				
3ch		Configuration of the 3rd radio channel command	2	6	Radio control configured as AUX1 **				
				7	Not used				
4ch		Configuration of the 4th radio channel command	5	8	Radio control configured as AUX11 ** (only with an expansion card)				
				9	Radio control configured as AUX2 **				
				10	Radio control configured as EXPO1 **				
				11	Radio control configured as EXPO2 **				
				12	Control configured as COURTESY LIGHT The command enables the light with bi-stable logic. At least one auxiliary output must be set as a courtesy light				
1AUX		Configuration of AUX 1 output. 20-21	6	0	Output configured as a monostable radio channel				
2AUX		Configuration of AUX 2 output. 26-27	0	1	Output configured as SCA, gate open light.				
				2	Output configured as Courtesy Light command.				
Only with an expansion card	10AUX	Configuration of AUX 10 output. 22-23	3	3	Output configured as Zone Light command.				
				4	Output configured as Stair Light				
				5	Output configured as Alarm				
				6	Output configured as Flashing light				
				7	Not used				
				8	Not used				
	11AUX	Configuration of AUX 11 output. 24-25	1	9	Output configured as Maintenance				
				10	Output configured as Flashing Light and Maintenance.				
				11	Not used				
				12	Not used				
				13	Output configured as closed Gate Status				
				14	Output configured as a Bistable radio channel				
				15	Output configured as a Timed radio channel				
				16	Output configured as open Gate Status				
				LockH		Lock type. 28-29	0	0	Output configured for 12V snap-action electric lock.
								1	Output configured for 12V magnet electric lock. Max.0.5A Power Down is not active with this setting
2	Output configured for 24V snap-action electric lock.								
3	Output configured for 24V magnet electric lock. Max.0.25A Power Down is not active with this setting								
4	Traction lock: active throughout the manoeuvre. Max.: 1 A for 1S, 0.2 A for the rest of the manoeuvre.								

INSTALLATION MANUAL


Logic	Definition	Default	Cross out setting used	Optional extras
<i>Prot. LEU</i>	Setting the protection level	0	0	<p>A - The password is not required to access the programming menus</p> <p>B - Enables wireless memorizing of transmitters.</p> <p>Operations in this mode are carried out near the control panel and do not require access:</p> <ul style="list-style-type: none"> - Press in sequence the hidden key and normal key (T1-T2-T3-T4) of a transmitter that has already been memorized in standard mode via the radio menu. - Press within 10 sec. the hidden key and normal key (T1-T2-T3-T4) of a transmitter to be memorized. The receiver exits programming mode after 10 sec.; you can use this time to enter other new transmitters by repeating the previous step. <p>C - Enables wireless automatic addition of replays.</p> <p>Enables programmed Replays to be added to the receiver's memory.</p> <p>D - The board's parameters can be edited via the U-link network</p>
			1	<p>A - You are prompted to enter the password to access the programming menus</p> <p>The default password is 1234.</p> <p>No change in behaviour of functions B - C - D from 0 logic setting</p>
			2	Not used
			3	<p>A - You are prompted to enter the password to access the programming menus</p> <p>The default password is 1234.</p> <p>B - Wireless memorizing of transmitters is disabled.</p> <p>C - Wireless automatic addition of Replays is disabled.</p> <p>Function C remains unchanged with respect to function 0</p>
			4	<p>A - You are prompted to enter the password to access the programming menus</p> <p>The default password is 1234.</p> <p>B - Wireless memorizing of transmitters is disabled.</p> <p>C - Wireless automatic addition of Replays is disabled.</p> <p>D - The option of editing the board's parameters via the U-link network is disabled.</p> <p>Transmitters are memorized only using the relevant Radio menu.</p>
<i>SEr iRL ModE</i>	Serial mode (Identifies how board is configured in a BFT network connection).	0	0	Standard SLAVE: board receives and communicates commands/diagnostics/etc.
			1	Standard MASTER: board sends activation commands (START, OPEN, CLOSE, PED, STOP) to other boards.
<i>AddrESS</i>	Address	0	[___]	Identifies board address from 0 to 119 in a local BFT network connection. (see U-LINK OPTIONAL MODULES section)
<i>PUSH Go</i>	Push&Go (Only for E5 BT A12)	0	0	Logic not active
			1	Manually pushing the stopped leaf toward the opening direction determines the automatic opening.
<i>1 EHP1</i>	Configuration of EXPI1 input on input-output expansion board. 1-2	1	0	Input configured as Start E command.
			1	Input configured as Start I command.
			2	Input configured as Open command.
			3	Input configured as Close command.
			4	Input configured as Ped command.
			5	Input configured as Timer command.
			6	Input configured as Timer Pedestrian command.
			7	Input configured as Phot (photocell) safety.
			8	Input configured as Phot op safety (photocell active during opening only).
			9	Input configured as Phot cl safety (photocell active during closing only).
			10	Input configured as Bar safety (safety edge).
			11	Input configured as safety Bar OP, safety edge with inversion active only while opening, if while closing the movement stops.
			12	Input configured as safety Bar CL, safety edge with inversion active only while closing, if while opening the movement stops.
			13	Input configured as Phot test safety, tested photocell. Input 3 (EXPI2) on input/output expansion board is switched automatically to safety device test input, EXPPFAULT1.
			14	Input configured as Phot op test safety, tested photocell active only while opening. Input 3 (EXPI2) on input/output expansion board is switched automatically to safety device test input, EXPPFAULT1.
			15	Input configured as Phot cl test safety, tested photocell active only while closing. Input 3 (EXPI2) on input/output expansion board is switched automatically to safety device test input, EXPPFAULT1.
			16	Input configured as Bar safety, tested safety edge. Input 3 (EXPI2) on input/output expansion board is switched automatically to safety device test input, EXPPFAULT1.
			17	Input configured as safety Bar OP test, safety edge with inversion active only while opening, if while closing the movement stops. Input 3 (EXPI2) on input/output expansion board is switched automatically to safety device test input, EXPPFAULT1.
			18	Input configured as safety Bar CL test, safety edge with inversion active only while closing, if while opening the movement stops. Input 3 (EXPI2) on input/output expansion board is switched automatically to safety device test input, EXPPFAULT1.
<i>2 EHP1</i>	Configuration of EXPI2 input on input-output expansion board. 1-3	0	0	Input configured as Start E command.
			1	Input configured as Start I command.
			2	Input configured as Open command.
			3	Input configured as Close command.
			4	Input configured as Ped command.
			5	Input configured as Timer command.
			6	Input configured as Timer Pedestrian command.
			7	Input configured as Phot (photocell) safety.
			8	Input configured as Phot op safety (photocell active during opening only).
			9	Input configured as Phot cl safety (photocell active during closing only).
			10	Input configured as Bar safety (safety edge).
			11	Input configured as safety Bar OP, safety edge with inversion active only while opening, if while closing the movement stops.
			12	Input configured as safety Bar CL, safety edge with inversion active only while closing, if while opening the movement stops.
<i>1 EHP0</i>	Configuration of EXPO1 output on input-output expansion board 4-5	11	0	Output configured as 2 nd Radio Channel.
			1	Output configured as SCA (gate open light).
			2	Output configured as Courtesy Light command.
			3	Output configured as Zone Light command.
			4	Output configured as Stair Light.

INSTALLATION MANUAL

D814283 0AR00_04

Logic	Definition	Default	Cross out setting used	Optional extras
2 EXP0	Configuration of EXPO2 output on input-output expansion board 6-7	11	5	Output configured as Alarm.
			6	Output configured as Flashing light.
			7	Output configured as Latch.
			8	Output configured as Magnetic lock.
			9	Output configured as Traffic Light control with TLB board.
			10	Output configured as Flashing Light and Maintenance.
			11	Output configured as Traffic Light control with TLB board.
			12	Not used
			13	Not used
			14	Output configured as closed Gate Status
			15	Output configured as Bistable Radio Channel
16	Output configured as timed Radio Channel			
TRAFFIC LIGHT PRE-FLASHING	Traffic light pre-flashing	0	0	Output configured as open Gate Status
			1	Red lights flash, for 3 seconds, at start of operation.
TRAFFIC LIGHT RED LAMP ALWAYS ON	Steadily lit red light	0	0	Red lights off when gate closed.
			1	Red lights on when gate closed.

TABLE "C" – RADIO MENU (radio)

Logic	Description
Add1ch	Add 1ch Key associates the desired key with the 1nd radio channel command.
Add2ch	Add 2ch Key associates the desired key with the 2nd radio channel command.
Add3ch	Add 3ch Key associates the desired key with the 3nd radio channel command.
Add4ch	Add 4ch Key associates the desired key with the 4nd radio channel command.
ERASE 128	Erase List  WARNING! Erases all memorized transmitters from the receiver's memory.
ERASE 1	Eliminates individual radio control Removes a radio control (if clone or replay is disabled) To select the radio control to be deleted, enter the position or press a button on the radio control to be deleted (the position is displayed)



www.bft-automation.com

BFT Spa

Via Lago di Vico, 44 **ITALY**
36015 Schio (VI)
T +39 0445 69 65 11
F +39 0445 69 65 22

SPAIN

BFT GROUP ITALIBERICA DE AUTOMATISMOS SL
Camí de Can Bassa, 6, 08401
Granollers, Barcelona, Spagna

FRANCE

AUTOMATISMES BFT FRANCE SAS
50 rue Jean Zay
69800 Saint-Priest, Francia

GERMANY

BFT ANTRIEBSSYSTEME GMBH
Faber-Castell-Straße 29, 90522
Oberasbach, Germania

UNITED KINGDOM

BFT AUTOMATION UK LTD
Unit C2-C3 The Embankment Business
Park, Vale Road Heaton Mersey Stockport
Cheshire SK4 3GL United Kingdom

BFT AUTOMATION (SOUTH) LTD
Enterprise House Murdock Road, Dorcan,
Swindon, England, SN3 5HY

PORTUGAL

BFT PORTUGAL SA
Urb. Pedrulha lote 9 - Apartado 8123,
3025-248 Coimbra Portugal

POLAND

BFT POLSKA SP ZOO
Marecka 49, 05-220 Zielonka, Polonia

IRELAND

BFT AUTOMATION IRELAND
Unit D3 City Link Business Park, Old Naas
Road, Dublin

CROATIA

BFT ADRIA DOO
Obrovac 39, 51218, Dražice, Croazia

CZECH REPUBLIC

BFT CZ SRO
Ustecka 533/9, 184 00 Praha 8,
Czech

TURKEY

BFT OTOMASYON KAPI
Şerifali Mahallesi, no, 34775
Ümraniye/İstanbul, Turchia

U.S.A.

BFT AMERICAS INC.
1200 S.W. 35th Avenue Suite B Boynton
Beach FL 33426

AUSTRALIA

BFT AUTOMATION AUSTRALIA PTY
29 Bentley St, Wetherill Park NSW
2164, Australia

EMIRATES

BFT MIDDLEEAST FZCO
FZS2 AA01 - PO BOX 262200, Jebel Ali Free
Zone South Zone 2, Dubai - United Arab

NEW ZEALAND

BFT AUTOMATION NEW ZEALAND
224/A Bush Road, Rosedale,
Auckland, New Zealand