


Control panel for 230 V gearmotors

FA02057-EN

CE

EAC

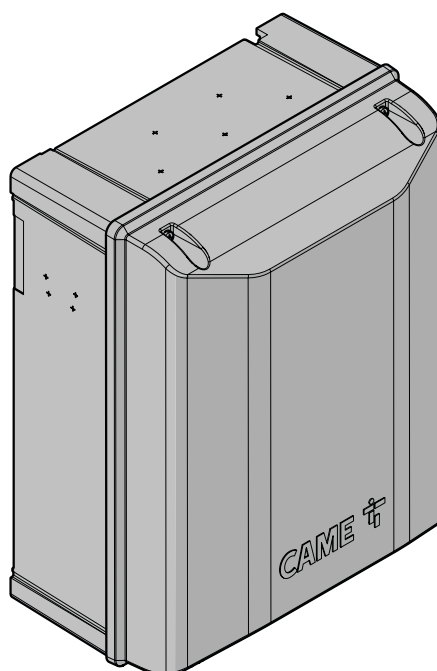

ZLX230P

INSTALLATION MANUAL

TABLE OF CONTENTS

GENERAL PRECAUTIONS FOR INSTALLERS	4
DISMANTLING AND DISPOSAL	5
PRODUCT DATA AND INFORMATION	5
Key	5
Description	5
Intended use.....	5
Technical data	6
Fuse table.....	6
Description of parts	7
Control panel.....	8
Optional accessories	9
Size	9
Cable types and minimum thicknesses	10
INSTALLATION	11
Fastening the control panel.....	11
DIN rail.....	11
Wall-mounted	12
ELECTRICAL CONNECTIONS	13
Passing the electrical cables.....	13
Fixing earth cable	13
Electronic board fastening and support.....	14
Mains connections.....	14
Power supply 230 V AC - 50/60 Hz.....	14
Connecting gearmotors for swing operators.....	15
Capacitor connection	15
Connecting accessories.....	16
Power supply output for accessories 24 V	16
Power supply output for accessories 230 V	16
CXN BUS connection*	16
Command and control devices.....	17
Signalling devices.....	17
Safety devices	18
DIR photocells	18
DXR / DLX photocells	18
DFWN sensitive edge	19
Electric lock or electromagnet.....	19
Connecting accessories with BUS CXN system*	20
Cabling	20
Cable types and minimum thicknesses.....	20
Maximum number of devices that can be connected, by type	20
BUS CXN device consumption.....	20
PROGRAMMING.....	21
Programming button functions and warning LEDs.....	21
Getting started.....	22
Diagrams showing leaf speed and slowdown	23
Functions menu.....	24
BUS (b1-b8) photocell functions.....	30
I/O BUS 1 (b11) module / I/O BUS 2 (b12) module functions*	31
BUS (b21-b28) key selector switch functions	32
BUS (b40) flashing beacon functions	32
Saving a new user	34

Removing registered users 35

Forgotten password 35

Factory reset 35

DISPLAY WARNINGS KEY..... 36

Error messages 36

SHORT CIRCUIT CHECK PROCEDURE..... 37

FINAL OPERATIONS 37

⚠ Important safety instructions.

⚠ Please follow all of these instructions. Improper installation may cause serious bodily harm.


⚠ Before continuing, please also read the general precautions for users.

Only use this product for its intended purpose. Any other use is hazardous. • The manufacturer cannot be held liable for any damage caused by improper, unreasonable or erroneous use. • This product has been designed to be assembled to partly completed machinery and/or equipment so as to build machinery as regulated by the Machinery Directive 2006/42/EC. • The final installation must comply with the Machinery Directive (2006/42/EC) and the European reference standards in force. • The manufacturer declines any liability for using non-original products, which would also void the warranty. • All operations indicated in this manual must be carried out exclusively by skilled and qualified personnel and in full compliance with the regulations in force. • The device must be installed, wired, connected and tested according to good professional practice, in compliance with the standards and laws in force. • Make sure the mains power supply is disconnected during all installation procedures. • All the components (e.g. actuators, photocells and sensitive edges) needed for the final installation to comply with the Machinery Directive (2006/42/EC) and with the reference harmonised technical standards are specified in the general CAME product catalogue or on the website www.came.com. • Check that the temperature ranges given are suitable for the installation site. • Make sure that no direct jets of water can wet the product at the installation site (sprinklers, water cleaners, etc.). • Make sure you have set up a suitable dual-pole cut-off device along the power supply that is compliant with the installation rules. It should completely cut off the power supply according to category III surcharge conditions. • Demarcate the entire site properly to prevent unauthorised personnel from entering, especially minors. • Use suitable protection to prevent any mechanical hazards due to persons loitering within the operating range of the operator. • The electrical cables must pass through special pipes, ducts and cable glands in order to guarantee adequate protection against mechanical damage. • The electrical cables must not touch any parts that may overheat during use (such as the motor and transformer). • Before installation, check that the guided part is in good mechanical condition, and that it opens and closes correctly. • The product cannot be used to automate any guided part that includes a pedestrian gate, unless it can only be enabled when the pedestrian gate is secured. • Make sure that nobody can become trapped between the guided and fixed parts, when the guided part is set in motion. If you are automating a pedestrian gate that moves horizontally, this can be achieved if the corresponding distance is less than 8 mm. However, the distances indicated below are sufficient to avoid trapping the corresponding body parts:

- fingers, more than 25 mm;
- feet, more than 50 mm;
- head, more than 300 mm;
- for the entire body, more than 500 mm.

If you cannot achieve these distances, you will need to take suitable safety precautions. • All fixed controls must be clearly visible after installation, in a position that allows the guided part to be directly visible, but far away from moving parts. In the case of a hold-to-run control, this must be installed at a minimum height of 1.5 m from the ground and must not be accessible to the public. • Where operated with a hold-to-run control, install a STOP button to disconnect the main power supply to the operator, to block movement of the guided part. • If not already present, apply a permanent tag that describes how to use the manual release mechanism close to it. • Make sure that the operator has been properly adjusted and that the safety and protection devices and the manual release are working properly. • Before handing over to the final user, check that the system complies with the harmonised standards and the essential requirements of the Machinery Directive (2006/42/EC). • Any residual risks must be indicated clearly with proper signage affixed in visible areas, and explained to end users. • Put the machine's ID plate in a visible place when the installation is complete. • If the power-supply cable is damaged, it must be immediately replaced by the manufacturer or by an authorised technical assistance centre, or in any case, by qualified staff, to prevent any risk. • Keep this manual inside the technical folder along with the manuals of all the other devices used for your automation system. • Make sure to hand over to the end user all the operating manuals of the products that make up the final machinery. • The product, in its original packaging supplied by the manufacturer, must only be transported in a closed environment (railway carriage, containers, closed vehicles). • If the product malfunctions, stop using it and contact customer services at <https://www.came.com/global/en/contact-us> or via the telephone number on the website. • The manufacture date is provided in the production batch printed on the product label. If necessary, contact us at <https://www.came.com/global/en/contact-us>. • The general conditions of sale are given in the official CAME price lists.

DISMANTLING AND DISPOSAL

 CAME S.p.A. employs an Environmental Management System at its premises. This system is certified and compliant with the UNI EN ISO 14001 standard to ensure that the environment is respected and safeguarded. Please continue safeguarding the environment. At CAME we consider it one of the fundamentals of our operating and market strategies. Simply follow these brief disposal guidelines:

DISPOSING OF THE PACKAGING

The packaging materials (cardboard, plastic, etc.) can be disposed of easily as solid urban waste, separated for recycling. Before dismantling and disposing of the product, please always check the local laws in force.

DISPOSE OF THE PRODUCT RESPONSIBLY

DISPOSING OF THE PRODUCT

Our products are made of various materials. Most of these materials (aluminium, plastic, iron and electrical cables) are classified as solid urban waste. They can be separated for recycling and disposed of at authorised waste treatment plants.

Other components (electronic boards, transmitter batteries, etc.) may contain pollutants.

These must be removed and disposed of by an authorised waste disposal and recycling firm.

It is always advisable to check the specific laws that apply in your area.

DISPOSE OF THE PRODUCT RESPONSIBLY

PRODUCT DATA AND INFORMATION

Key

 This symbol shows which parts to read carefully.

 This symbol shows which parts describe safety issues.

 This symbol shows what to tell users.


The measurements, unless otherwise stated, are in millimetres.

Description

ZLX230P - 801QA-0110

Multifunction control panel basic version, with 230 V AC power supply, for 230 V two-leaf gates, with programming and signalling display, self-diagnosis of safety devices, Digital Torque Control, 2 safety inputs and storage for up to 250 users.

Intended use

 After the Green Power module has been connected to the control panel, the product complies with Regulation (EU) 2023/826 regarding ecodesign requirements for energy consumption in standby and off mode for household and office equipment.

Technical data

MODELS	ZLX230P
Power supply (V - 50/60 Hz)	220 AC to 240 AC
Motor power supply (V)	220 AC to 240 AC
Standby consumption (W)	0,8
Power (W)	1100
Motor power (W)	950
Colour	RAL 7040
Operating temperature (°C)	-20 ÷ +55
Storage temperature (°C)*	-25 ÷ +70
Encoder	NO
Protection rating (IP)	54
Insulation class	I
Average life (cycles)**	100.000

(*) Before installing the product, keep it at room temperature where it has previously been stored or transported at a very high or very low temperature.


(**) The average product life is a purely indicative estimate. It applies to compliant usage, installation and maintenance conditions. It is also influenced by other factors, such as climatic and environmental conditions (where present, see the MCBF table).

Fuse table

MODELS	ZLX230P
Line fuse	5 A F

⚠ The accessories fuse is not on this board. See the [Short circuit check procedure] section for more information.

Description of parts

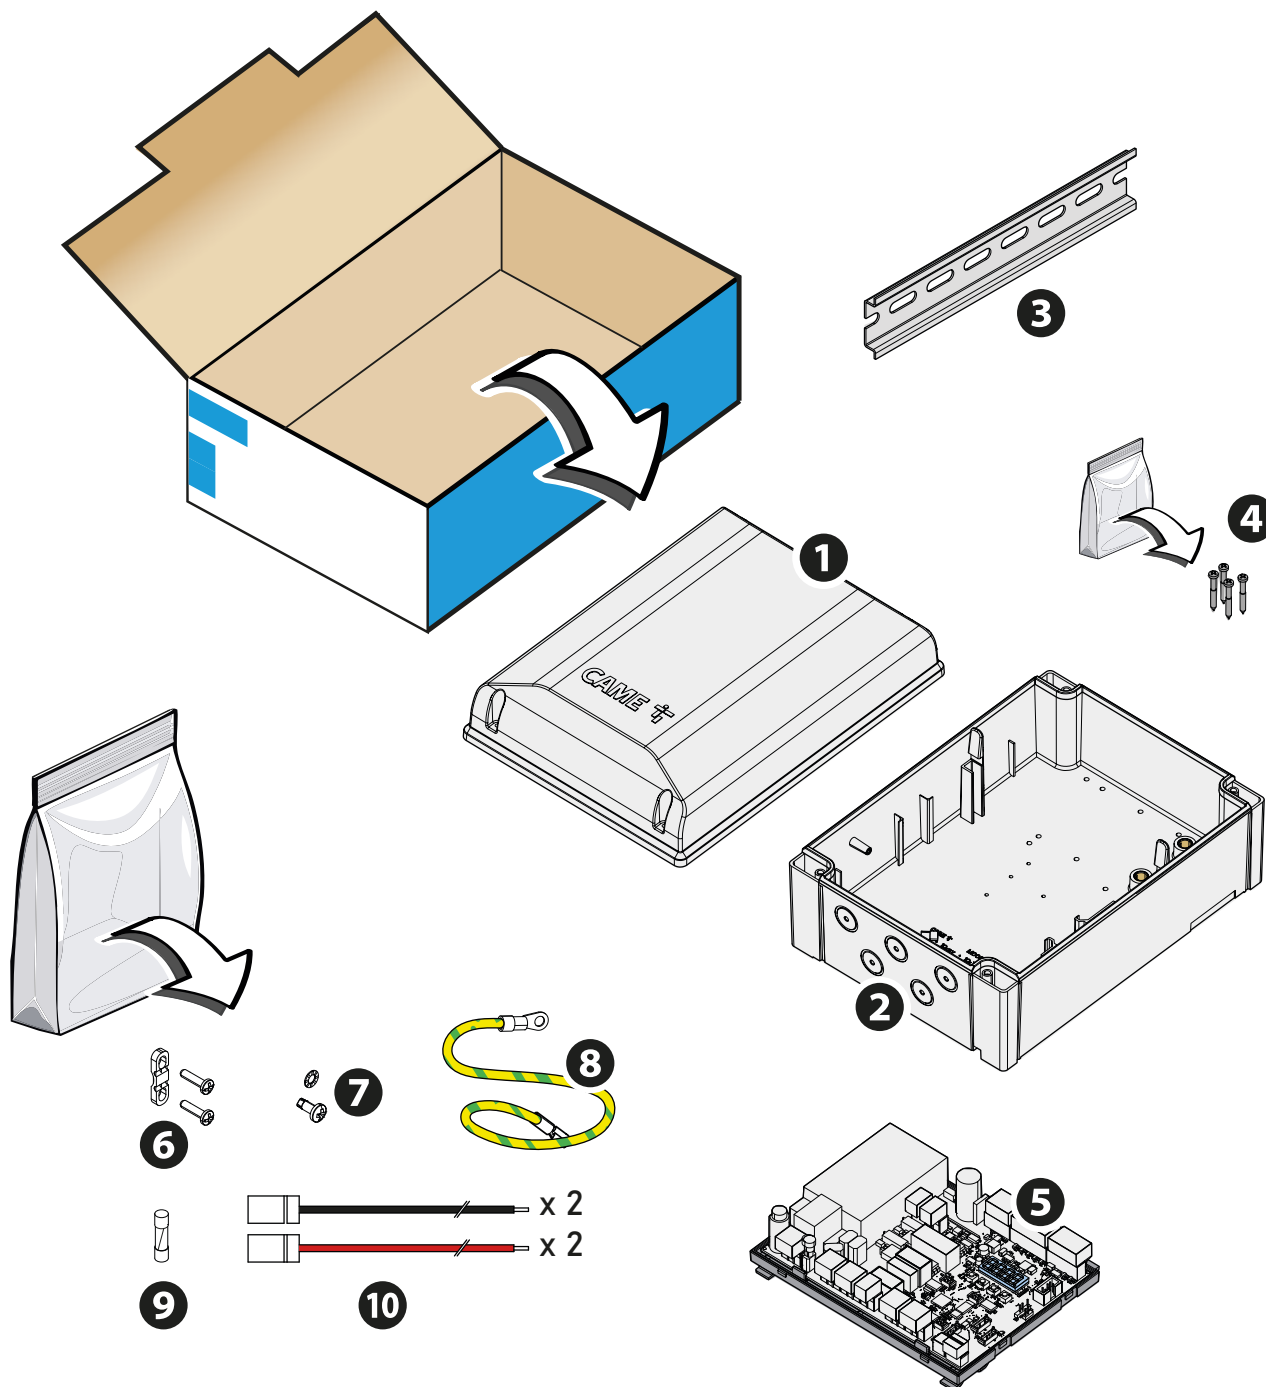


- ❶ Control panel cover
- ❷ Control panel back
- ❸ DIN rail
- ❹ Cover fastening screws
- ❺ Control board with card slot
- ❻ Cable clamp and fixing screws (3.9X19 UNI6954)

- ❼ Knurled washer (M4 UNI8842A) and fixing screw (M4X10) for earth star centre.
- ❽ Functional earth cable
- ❾ Line fuse
- ❿ Breakaway capacitor connection cables

Control panel


- ❶ Capacitor housing
- ❷ Accessory power supply terminal board and connecting warning devices
- ❸ Terminal board for connecting control devices
- ❹ Terminal board for connecting the safety devices
- ❺ Display
- ❻ Connector for CAME KEY
- ❼ RSE card connector
- ❽ RIO CONN card connector
- ❾ Connector for plug-in radio frequency card (AF)
- ❿ Terminal board for CRP connection
- ⓫ Terminal board for connecting the antenna
- ⓬ Terminal boards for connecting the capacitors
- ⓭ Programming buttons
- ⓮ Connector for the accessory module BUS RCXN (806XG-0110)
- ⓯ Flashing beacon terminal board
- ⓰ Terminal boards for connecting the gearmotors
- ⓱ Line fuse
- ⓲ Power supply terminal board
- ⓳ Earthing star point

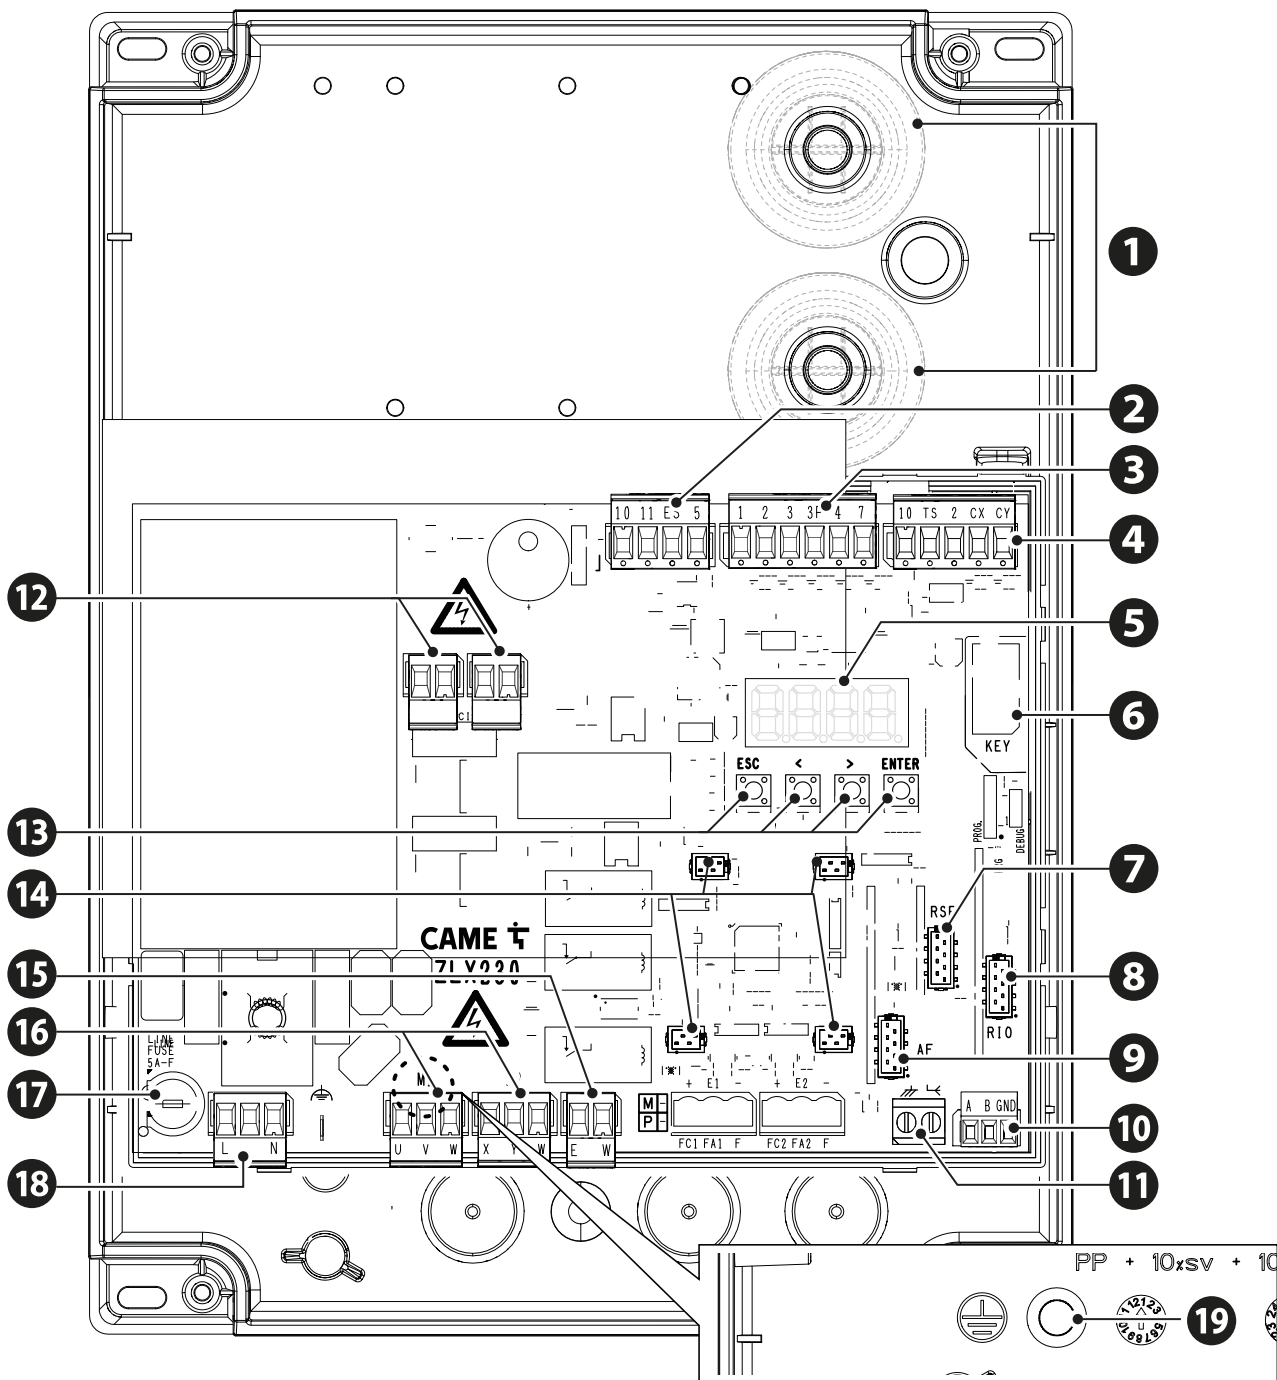


Optional accessories

25 RGSM001 module (806SA-0010)

26 SMA module (009SMA)

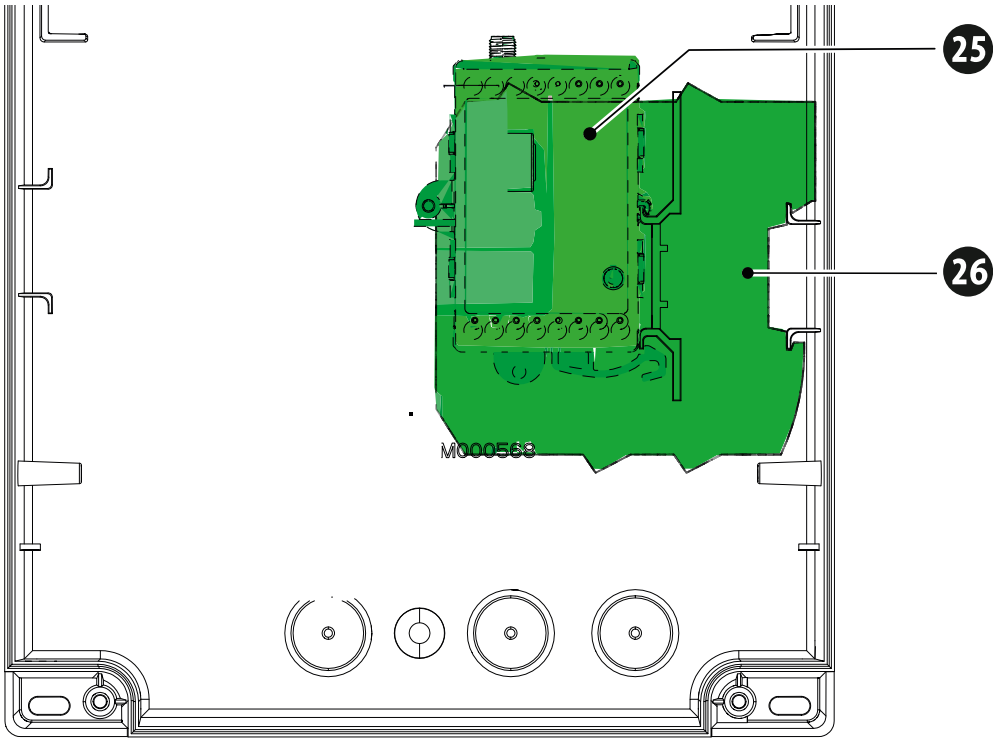

Size

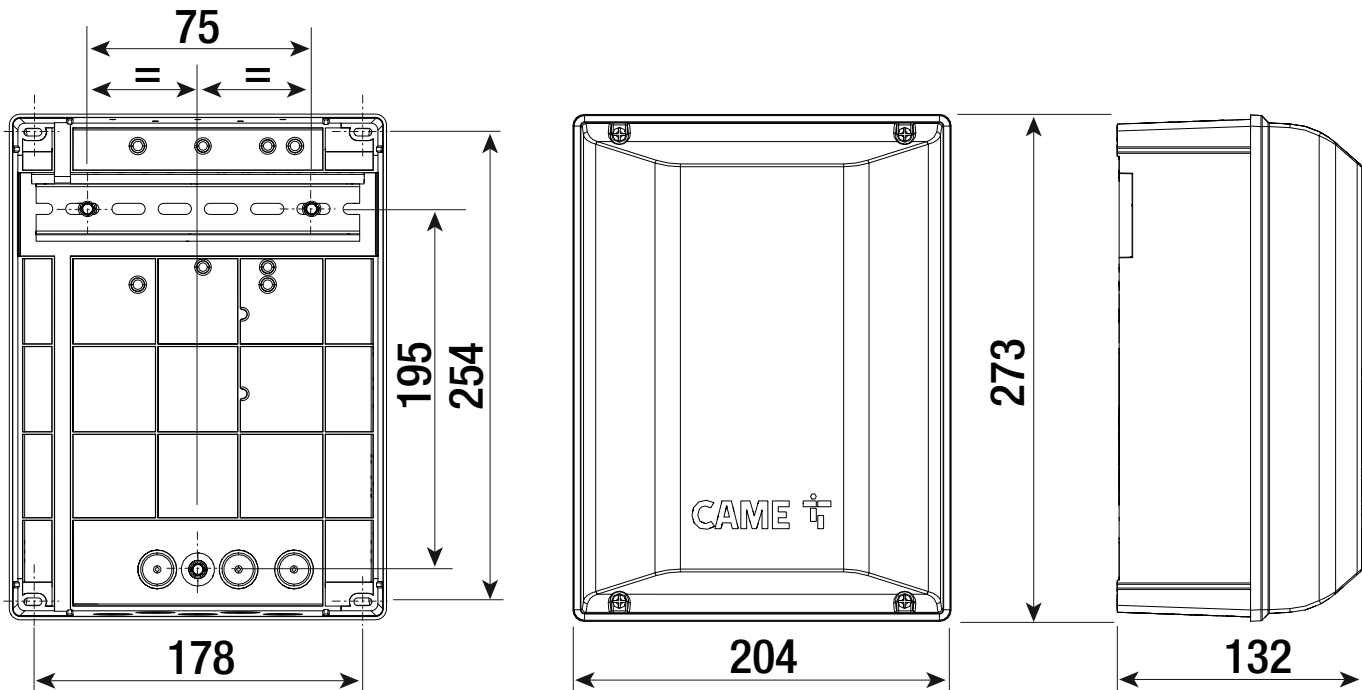



Cable types and minimum thicknesses

Cable length (m)	up to 20	from 20 to 30
Power supply 230 V AC	3G x 1.5 mm ²	3G x 2.5 mm ²
Flashing beacon 230 V AC	2 x 1 mm ²	2 x 1 mm ²
TX Photocells	2 x 0.5 mm ²	2 x 0.5 mm ²
RX photocells	4 x 0.5 mm ²	4 x 0.5 mm ²
Electric lock or electromagnet	2 x 1 mm ²	2 x 1.5 mm ²
Command and control devices	*no. x 0.5 mm ²	*no. x 0.5 mm ²

* no. = see product assembly instructions


Warning: the cable cross-section is indicative and varies according to the motor power and cable length.

 When operating at 230 V and outdoors, use H05RN-F cables that are IEC 60245 (IEC 57) compliant; when indoors, use H05VV-F cables that are IEC 60227 (IEC 53) compliant; For power supplies up to 48 V, use FROR 20-22 II cables compliant with standard EN 50267-2-1 (CEI).

 To connect the antenna, use RG58 cable (up to 5 m).

 To connect to the CRP, use a UTP CAT5 cable (up to 1,000 m long).






 If the cable lengths differ from those specified in the table, define the cable cross-sections according to the actual power draw of the connected devices and in line with regulation CEI EN 60204-1.

 For multiple, sequential loads along the same line, recalculate the values in the table according to the actual power draw and distances. For information on connecting products not covered in this manual, please see the documentation accompanying the products themselves.




INSTALLATION

Fastening the control panel

DIN rail

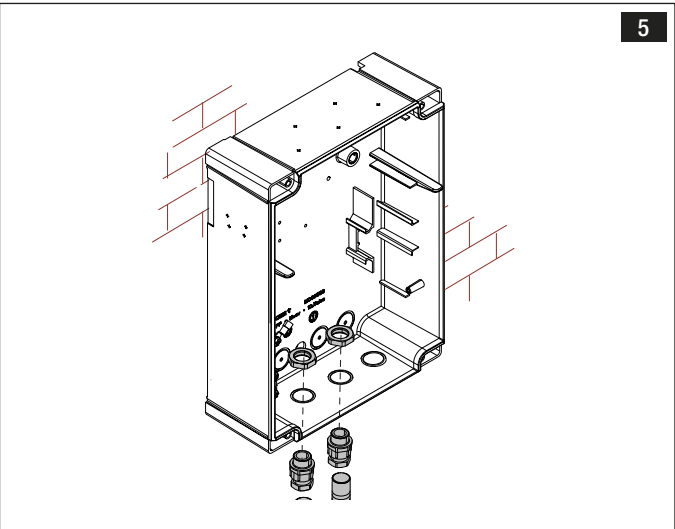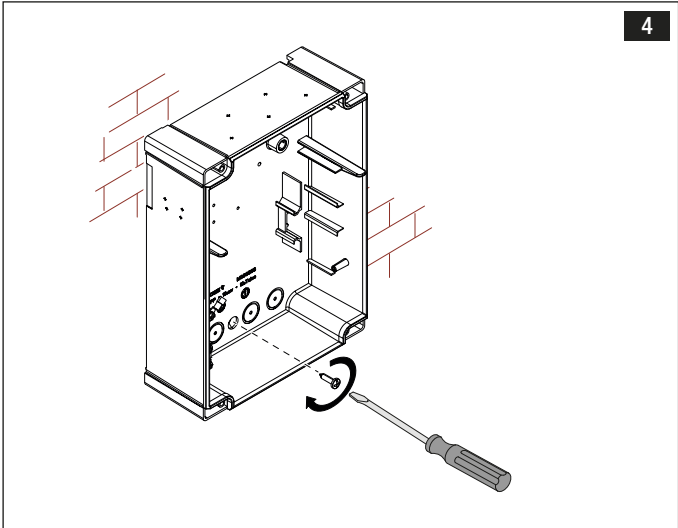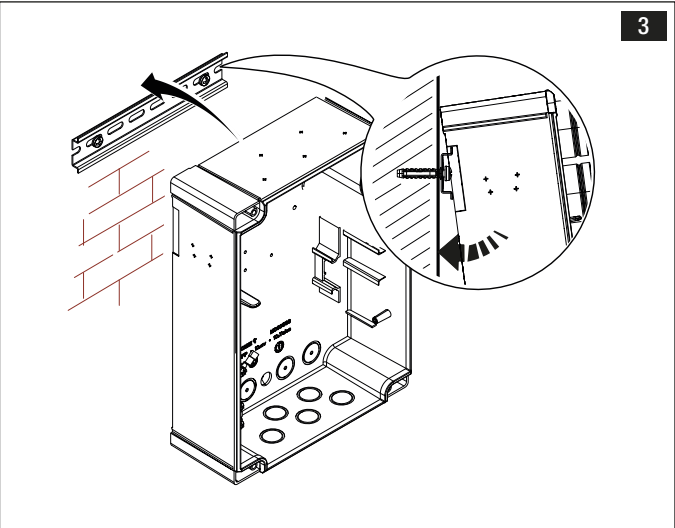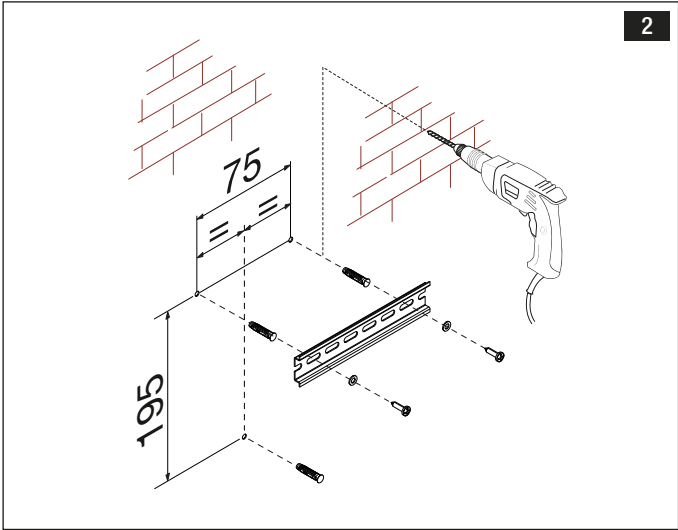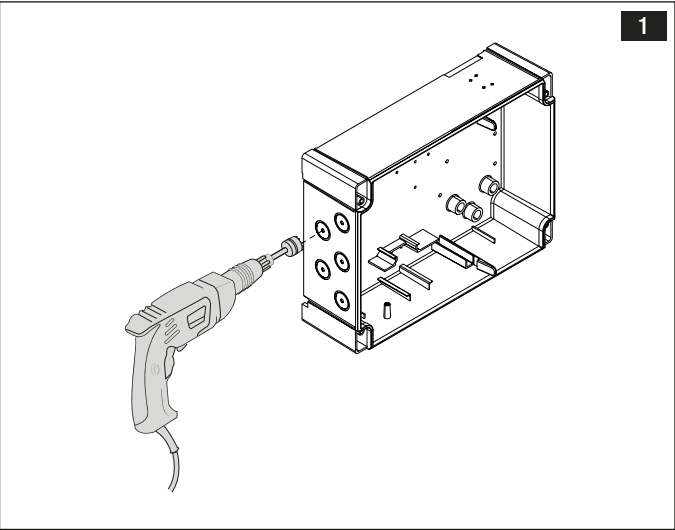

Wall-mounted

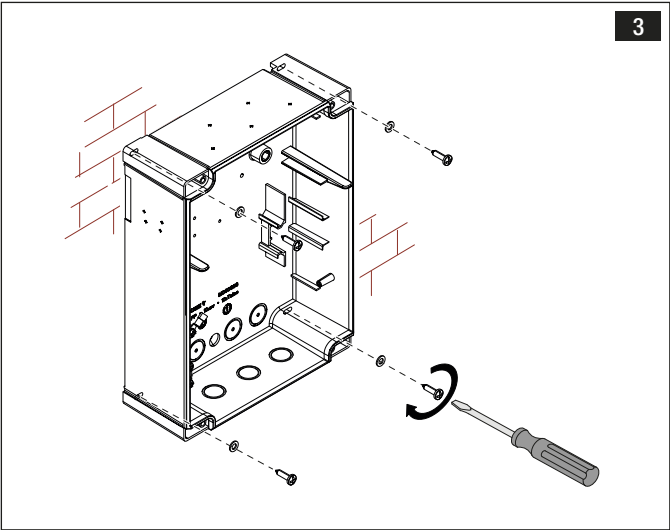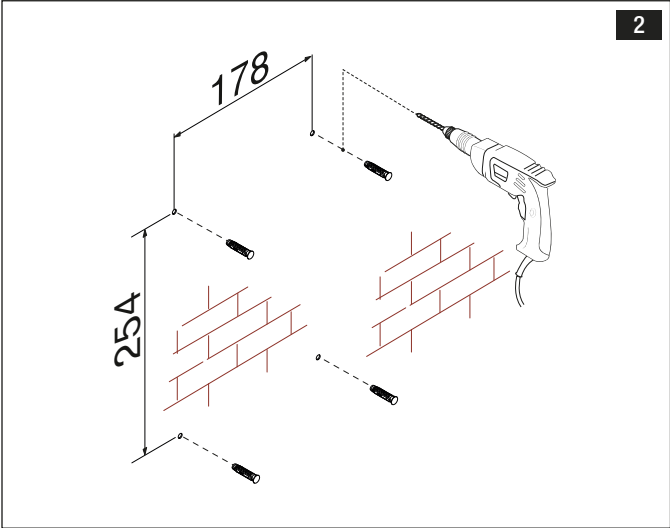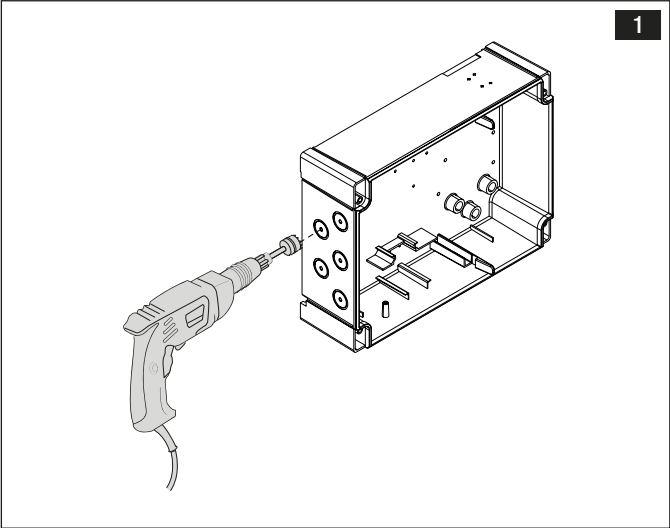


ELECTRICAL CONNECTIONS

Passing the electrical cables

Connect all wires and cables in compliance with the law.

Use cable glands with corrugated tubing to connect the devices to the control panel. One of these must be for the power cable only.

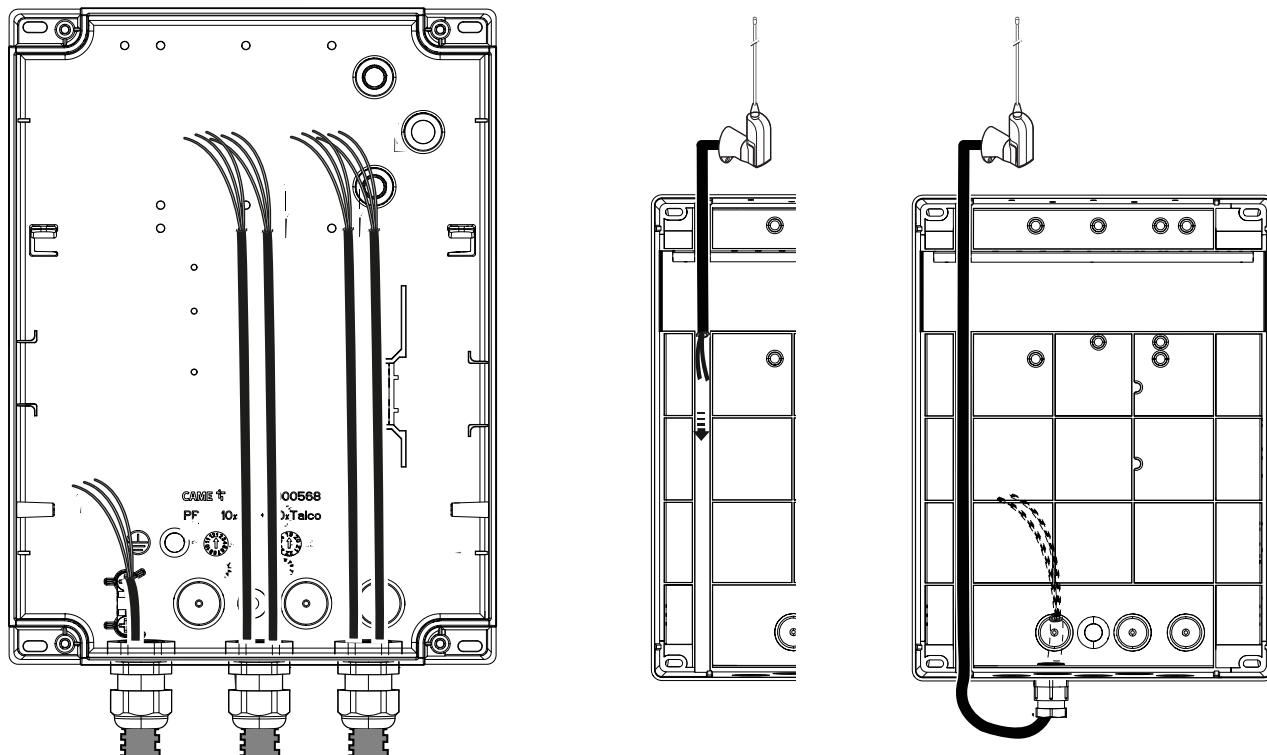


Fixing earth cable

Secure the supplied cable clamp with the screws provided. 20



With an eyelet (not supplied) connect the earth cable ⊕ with the earth star centre 19 on the box.

Connect the eyelet on the functional earth cable 8 and secure the eyelets using the knurled washer and screw provided. 21

Connect the functional earth cable ⚡ to the control board using the Faston. See section [Mains connections].

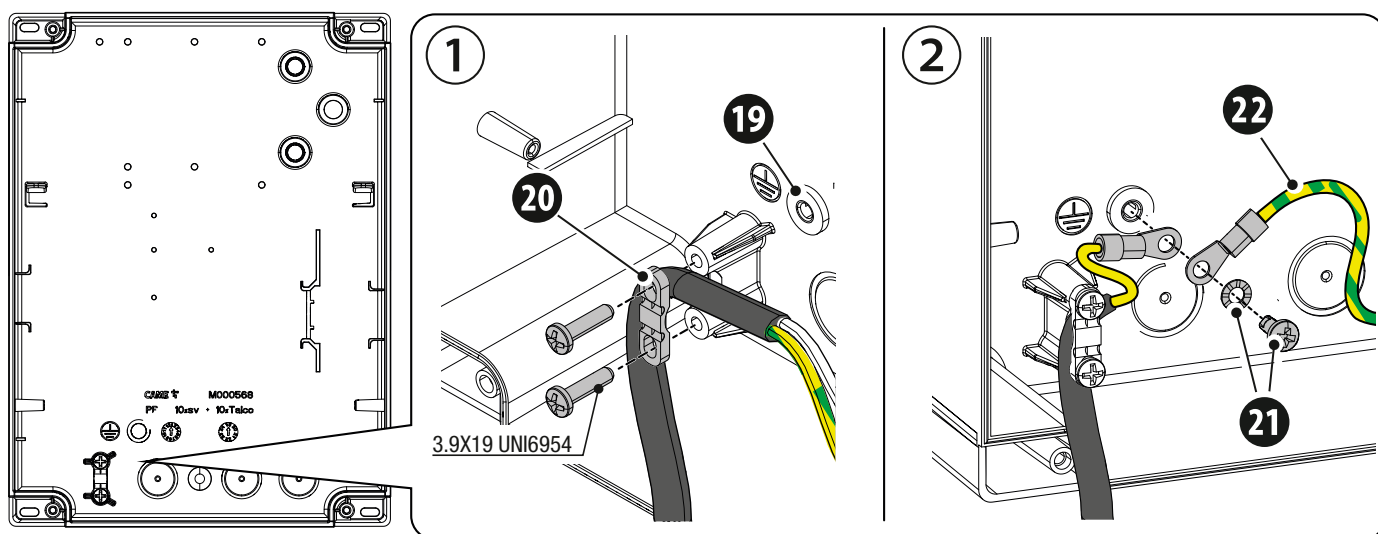


Electronic board fastening and support

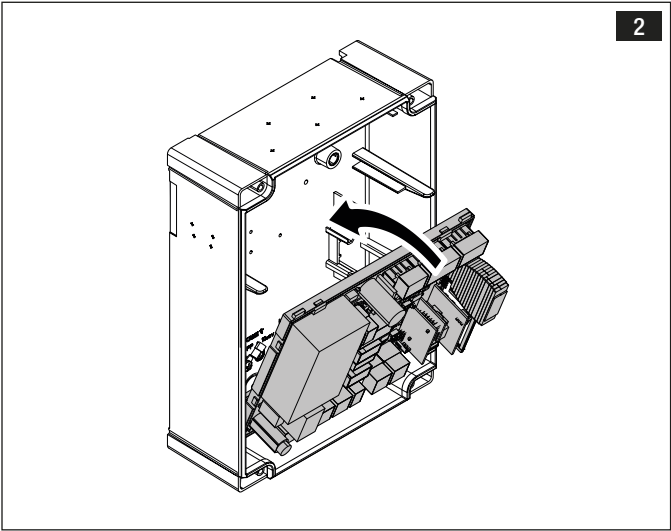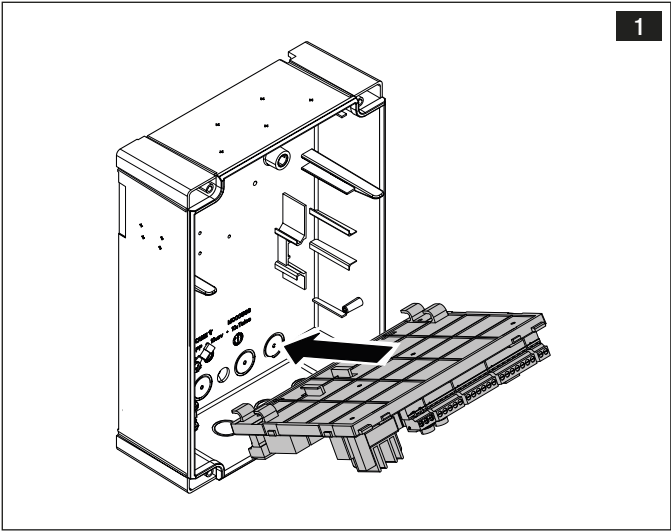

Mains connections

Power supply 230 V AC - 50/60 Hz

L - Phase N - Neutral F - Line fuse  - Functional earth cable  - Earth

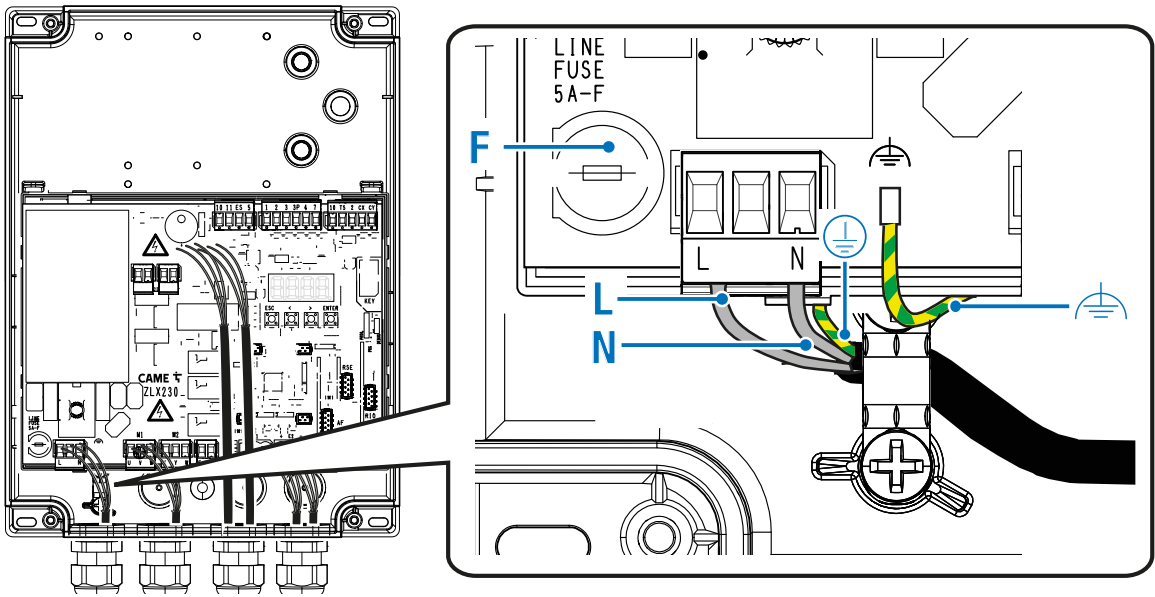


Connecting gearmotors for swing operators

M1 = Gearmotor delayed while opening


M2 = Gearmotor delayed while closing

Where there is only one gearmotor in the system, make the electrical connections on the gearmotor (M2).

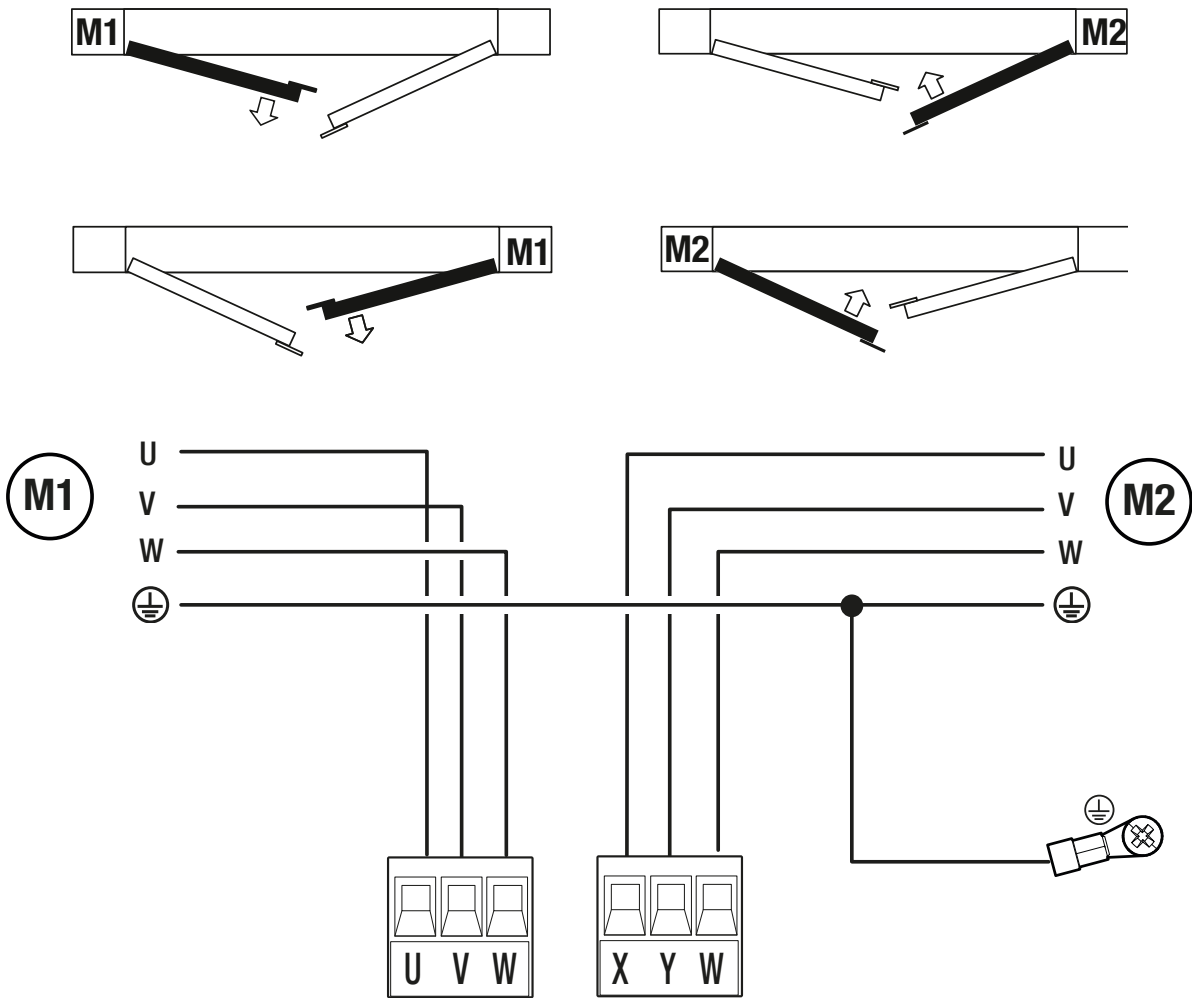

Capacitor connection

Do not connect capacitors if they are already present on the motor.

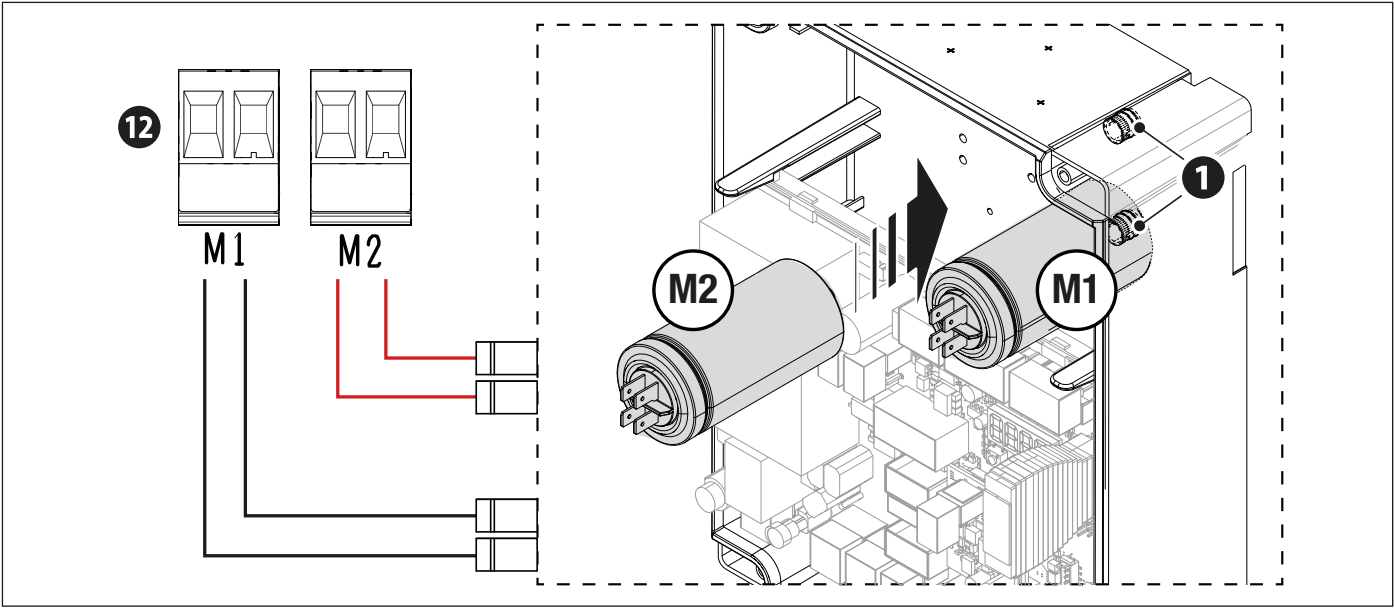

Connecting accessories

Power supply output for accessories 24 V

📖 All 24 V accessory outputs are in direct current (DC).

📖 The total power of the outputs listed below must not exceed the maximum output power [Accessories]

Device	Output	Power supply (V)	Maximum power (W)
Accessories	10 - 11	24 DC	20
Passage-open warning light	10 - 5	24 DC	3
Electric lock	10 - ES	12 DC	15
Electromagnet	10 - ES	24 DC	15

Power supply output for accessories 230 V

Device	Output	Power supply (V)	Frequency (Hz)	Maximum power (W)
Flashing beacon	E - W	230 AC	50/60	8*

(*) For incandescent or neon bulbs, the maximum power of the flashing beacon is 60 W.

CXN BUS connection*

(*) Only with accessory RCXN (806XG-0110).

⚠ The output is set for CAME CXN BUS accessories only.

Device	Output	Power supply (V)	Maximum power (W)
BUS CXN	BUS	15 DC	15

Command and control devices

1		STOP button (NC contact) See the [F1 – Total stop] function.
2		Control device (NO contact) Open command When the [F6 – Hold-to-run] function is active, a control device must be connected in OPEN.
2		Control device (NO contact) Partial Opening or Pedestrian command With the encoder active, see function [F36 - Adjusting partial opening]. With the encoder not active, see function [F71 - Adjusting partial opening].
2		Control device (NO contact) Close command When the function [F6 - Hold-to-run] is active, a control device must be connected in CLOSE.
2		Control device (NO contact) Step-by-step command Sequential command See function [F7 - 2-7 command].
3P		Antenna with RG58 cable Use this terminal to connect the antenna.


Signalling devices

E		Flashing beacon or additional light Depending on configuration, it flashes when the operator opens and closes, or increases lighting in the manoeuvre area. See function [F18 - Additional light].
W		Operator status warning light (Passage-open warning light) It notifies the user of the operator status. See function [F10 - Passage-open warning light].
10		
5		

Safety devices

Connect the devices to the CX and/or CY inputs.


During programming, configure the type of action that must be performed by the device connected to the input.

 If contacts CX and CY are used, they must be configured during programming.


 For systems with multiple pairs of photocells, please see the manual for the relevant accessory.

❶ Standard connection


❷ Connection with safety test

 See function [F5 – Safety devices test].


DIR photocells

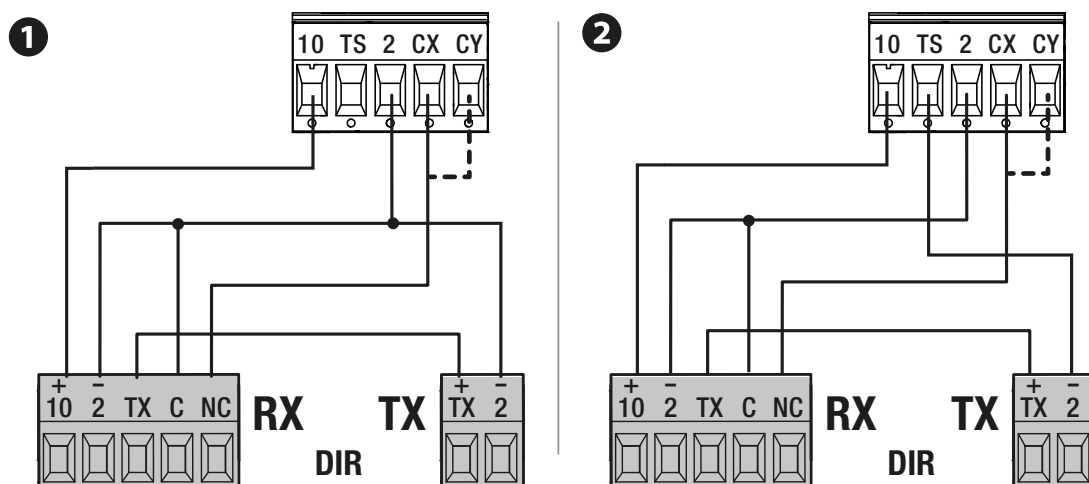

DXR / DLX photocells

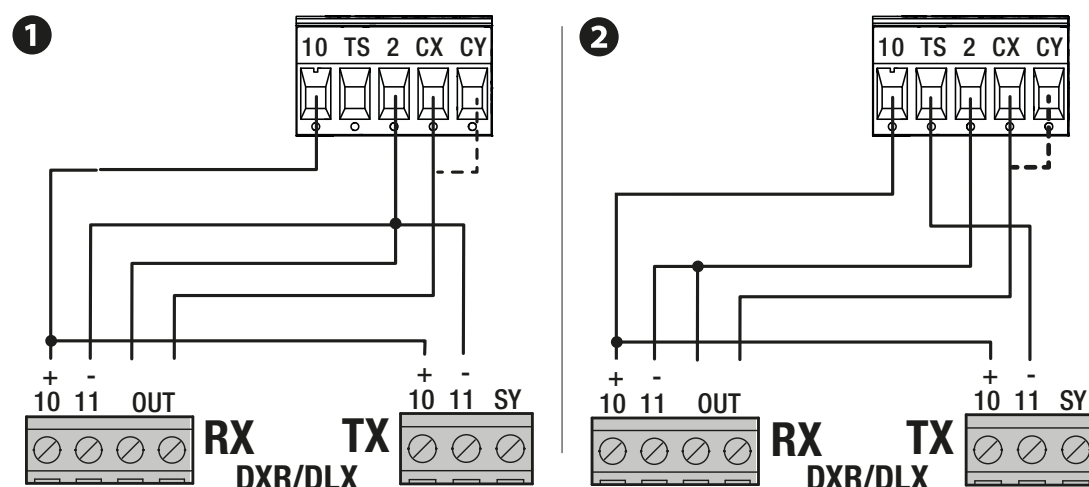


DFWN sensitive edge

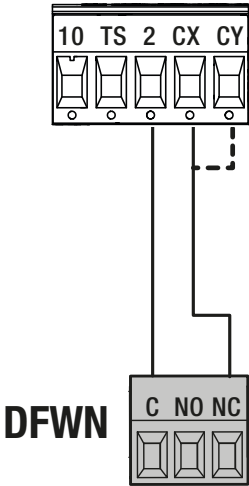

Electric lock or electromagnet

See the [F17 - Lock] function.

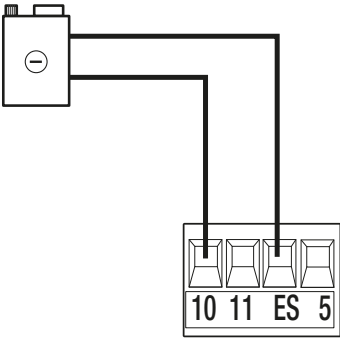


Connecting accessories with BUS CXN system*

(*) Only with accessory RCXN (806XG-0110).

The CXN CAME system is a two-wire non-polarised communication BUS which allows you to connect up all compatible CAME devices. Connection to the BUS can be in a chain, star or mixed formation. Once the system has been wired, and after having set the address on each device, the function of each accessory can be configured on the control panel. This method allows you to configure the set-up immediately without having to work directly on the accessories and system wiring later. The CXN BUS can support control devices, interfaces, photocells, safety devices, beacons and gateways at the same time.

Cabling

- 1 Chain connection
- 2 Star connection
- 3 Mixed connection

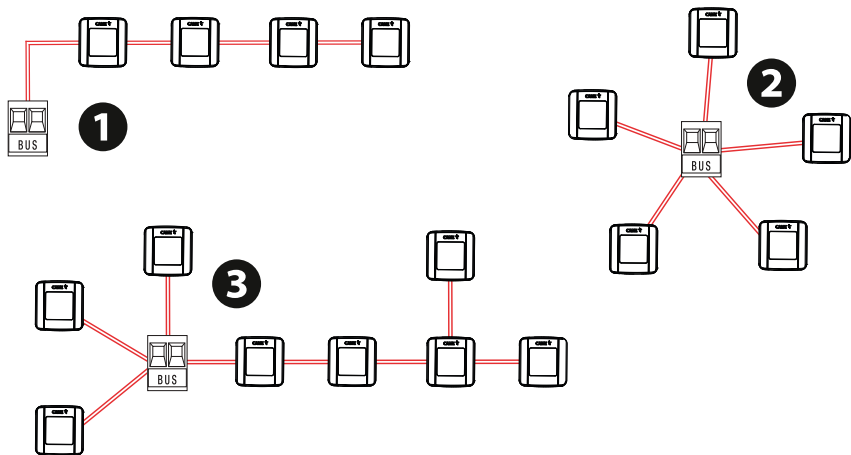

Cable types and minimum thicknesses

Branch length	0 to 15 m	15 to 50 m
KRX BUS flashing beacon (max. 1 per branch)	FROR 2 x 0.5 mm ²	FROR 2 x 1 mm ²
Branch load below 20 CXN	FROR 2 x 0.5 mm ²	FROR 2 x 0.5 mm ²
Branch load above 20 CXN	FROR 2 x 0.5 mm ²	FROR 2 x 1 mm ²

- Do not use a shielded cable.
- The maximum length of a single branch is 50 metres. The sum of all branches must not exceed 150 metres.

Maximum number of devices that can be connected, by type

Type of device	Maximum number of devices per type
Selectors	8
Photocell pairs	8
Interfaces	2
Flashing beacons	2

BUS CXN device consumption




LINK

BUS CXN device consumption is calculated in CXN units. Scan the QR code to access an interactive table showing consumption data, and calculate the maximum number of BUS devices you can connect to the control panel.

Programming button functions and warning LEDs

After one minute of inactivity, the display switches to standby mode. Press any key to reactivate it.

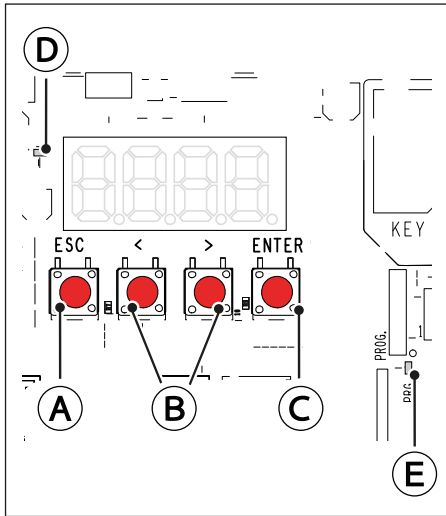

Ⓐ ESC button

The **ESC** button is used to perform the operations described below.

- Exit the menu
- Delete the changes
- Go back to the previous screen
- Stop the operator (outside the programming menu)

Ⓑ < > buttons

The <> buttons are used to perform the operations described below.

- Navigate the menu
- Increase or decrease values
- Operator opening and closing (outside the programming menu)
- > Close command (outside the programming menu)
- < Open command (outside the programming menu)

Ⓒ ENTER button

The **ENTER** button is used to perform the operations described below.

- Access menus
- Confirm a choice
- Display the motor opening/closing percentage

To display the motor opening percentage, press **ENTER** during a manoeuvre.

Press the key once to display the M1 opening/closing percentage (motor 1)

Press the key twice to display the M2 opening/closing percentage (motor 2)

Press the key three times to return to the main screen.

Ⓓ Power LED

The LED lights up when the board is powered up.

Ⓔ Programming LEDs

The LED flashes when the firmware is active and working on the board.

Getting started


⚠ When using a CAME KEY device, always update the board firmware to the latest version.

📖 Once the electrical connections have been made, proceed with commissioning. Only skilled and qualified staff may perform this operation.

Make sure that there are no obstacles in the way.

Power up the device and begin programming.

Start programming following the wizard shown on the display.

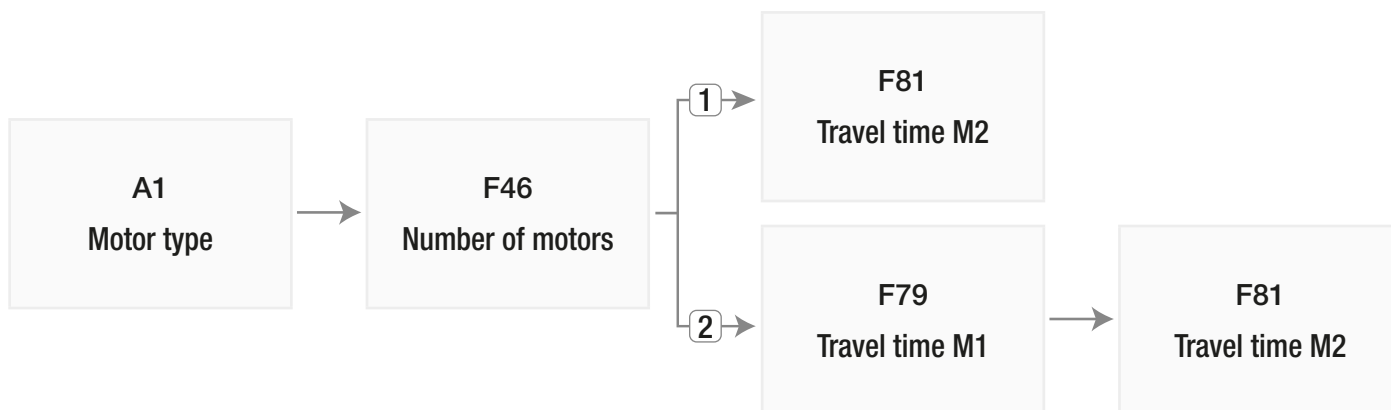


- » Complete programming and check the warning, safety and protection devices, and the manual release, are working properly.
- » Perform the first manoeuvre where you can see the gate in motion and with the photocells active, including where remotely controlled. The first manoeuvre is always to open the gate.
- » Wait for the manoeuvre to be completed.

📖 Press the **ESC** button or **STOP** button immediately in the event of any faults, malfunctions, strange noises or vibrations, or unexpected behaviour in the system.

Diagrams showing leaf speed and slowdown

- 1 Closing limit-switch
- 2 Opening limit-switch

- A Maximum opening and closing speed time of M1 [Function F79]
- B Maximum opening and closing speed time of M2 [Function F81]
- C Opening and closing slow-down time of M1 and M2 [Function F84]
- A + C = Stroke time in opening and closing M1
- B + C = Opening and closing travel time of M2

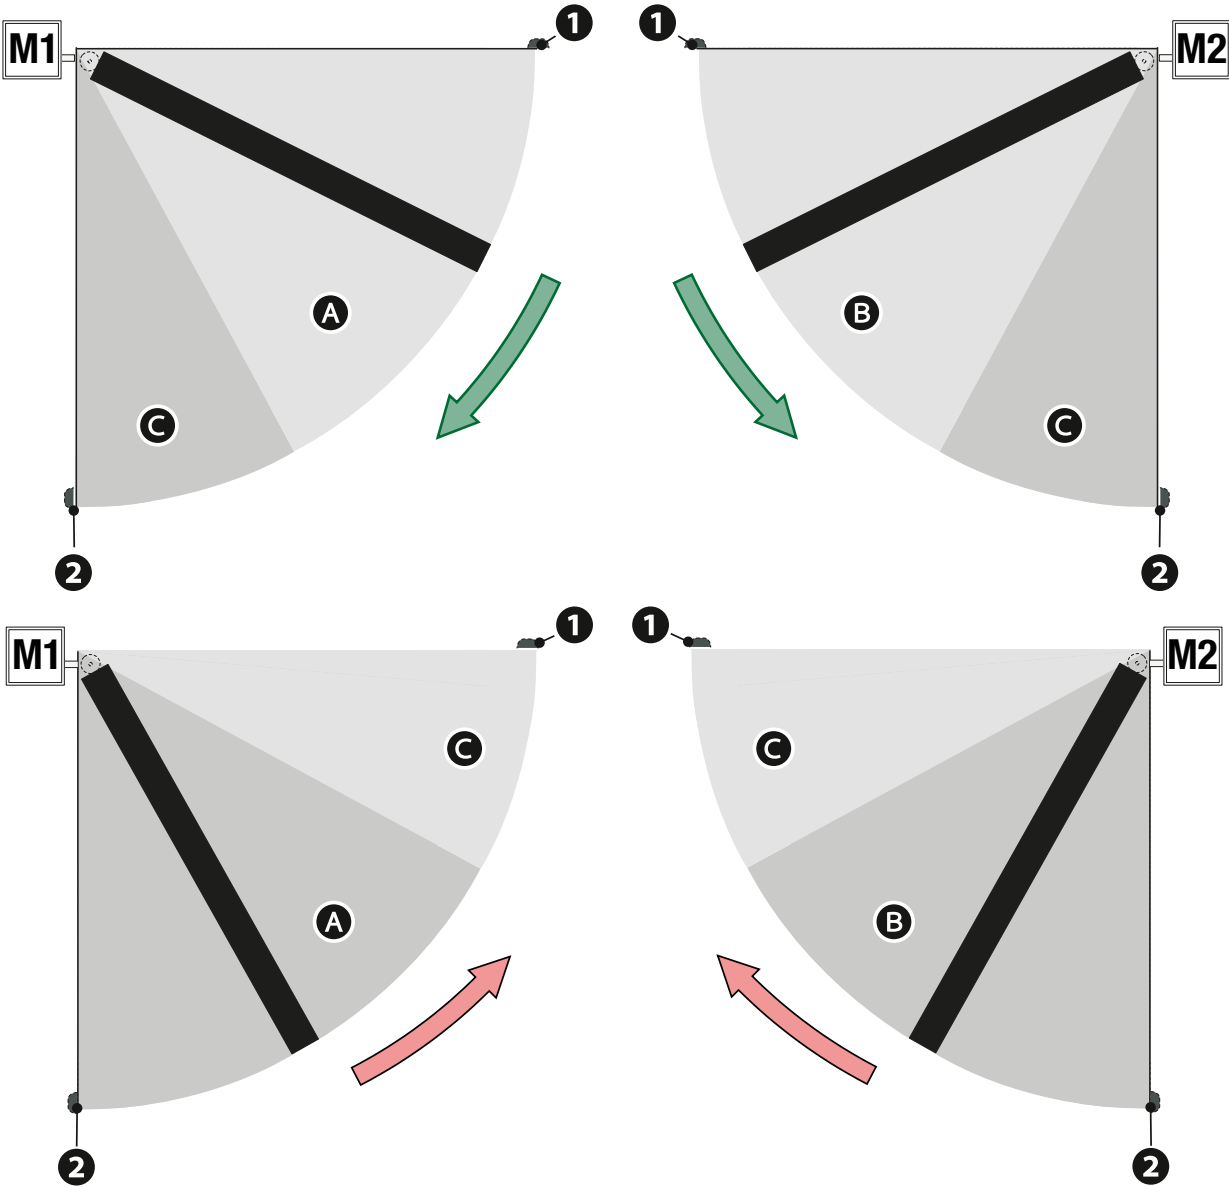




Functions menu






⚠ When using a CAME KEY device, always update the board firmware to the latest version.

📖 Some functions may not be available with firmware versions prior to the latest one or without some accessory devices.




📖 The functions relative to the BUS accessories are only available with accessory 806XG-0110.







Function		Parameters	Function description
F1	Total stop	OFF (Default) ON	<p>The function is used to manage operator stops and exclusion of all other commands. When the function is activated, the 2-1 input is used as a normally closed contact.</p> <p>By activating a device (normally closed) connected to input 2-1, the operator stops and all commands are excluded, including any automatic closing.</p> <p>📖 Use a control device to resume movement.</p>
F2 F3	CX input CY input	OFF (Default) C1 = Reopen while closing (photocells) C2 = Reclose while opening (photocells) C3 = Partial stop Only with [Automatic close] activated. C4 = Obstacle standby (photocells) C7 = Reopen while closing (sensitive edges) C8 = Reclose while opening (sensitive edges) C13 = Reopen while closing, with immediate closure once the obstruction has been removed, even if the gate is not in motion r7 = Reopen while closing (sensitive edges with 8K2 resistor) r8 = Reclose while opening (sensitive edges with 8K2 resistor) 2r7 = Reopen while closing (pair of sensitive edges with 8K2 resistor) 2r8 = Reclose while opening (pair of sensitive edges with 8K2 resistor)	<p>The function is used to configure the CX (F2) and CY (F3) input.</p>
F5	Safety devices test	OFF (Default) 1 = CX 2 = CY 3 = CX+CY	<p>The function is used to check that the photocells connected to the selected inputs are operating correctly, after each opening and closing command.</p> <p>📖 Run the test by connecting the photocells to the TS terminal [see paragraph Photocells and sensitive edges].</p>

F6	Hold-to-run	OFF (Default) ON	With the function active, the operator stops moving (opening or closing) when the control device is released.  When the function is active, it excludes all other control devices.
F7	Command 2-7	0 = Step-by-step (default) - The first command is to open and the second to close. 1 = Sequential - The first command is to open, the second to STOP, the third to close and the fourth to STOP.	The function associates a command to the device connected on 2-7.
F9	Obstacle with motor stopped	OFF (Default) ON	With the function active and the operator stopped, an open or close command is not performed if the safety devices detect an obstacle. The function is active when the passage is closed or open, or after a complete stop.
F10	Passage-open warning light	0 = Warning light on (default) - The light stays on when the operator is moving or the passage is open. 1 = Warning light flashing - The warning light flashes every half a second when the passage is opening and stays on when the passage is open. The light flashes every second when the passage is closing, and remains off when the passage is closed.	The function is used to set the type of warning for the open passage light.
F13	Closing thrust	OFF (Default) 1 = Minimum thrust 2 = Medium thrust 3 = Maximum thrust	When the function is active, the leaves briefly exert a closing thrust.
F16	Thrust	OFF (Default) ON	When the function is active, before every manoeuvre, the leaves thrust inwards to release the electric lock.  The thrust motion is performed during opening or closing, depending on where the electric lock is active. See the [F17 - Lock] function.
F17	Lock	OFF (Default) 1 = From closed 2 = From open 3 = From open and closed 4 = Continue 5 = Electromagnet 24 V  The electromagnet activates when the motor is stationary and deactivates during a manoeuvre.	This function allows you to choose the operating mode of the electric lock/electromagnet.

F18	Additional light	<p>0 =Flashing beacon (Default) 1 = Cycle light - The lamp stays on during the manoeuvre.</p> <p> An automatic closing time must be set under [F19 – Automatic closing] to ensure correct operation.</p> <p>2 = Courtesy lamp - The light switches on when a manoeuvre starts and remains on once the manoeuvre has finished, for the time set under the function [F25 - Courtesy time].</p>	<p>This function allows you to choose the operating mode of the lighting device connected to the output E - W.</p>
F19	Automatic closure	<p>OFF (Default) From 1 to 180 seconds</p>	<p>The function is used to set the time before automatic closure, once the opening travel end point has been reached or once the photocells have caused a partial stop [C3].</p> <p> The function does not work if any of the safety devices are triggered when an obstacle is detected, after a complete stop, during a power outage or if there is an error.</p>
F20	Automatic closing after either partial or pedestrian opening	<p>OFF 1 to 180 seconds (Default 10)</p>	<p>The function is used to set the time before automatic closure after a partial or pedestrian opening command.</p> <p> The function does not work if any of the safety devices are triggered when an obstacle is detected, after a complete stop, during a power outage or if there is an error.</p>
F21	Pre-flashing time	<p>OFF (Default) 1 to 10 seconds</p>	<p>The function adjusts the time for which the beacon is activated before each manoeuvre.</p>
F23	M1 opening delay time	<p>OFF 1 to 10 seconds (Default 2)</p>	<p>The function is used to adjust the delayed opening of the first leaf compared to the second.</p>
F24	M2 closing delay time	<p>OFF 1 to 25 seconds (Default 2)</p>	<p>The function is used to adjust the delayed closing of the second leaf compared to the first.</p>
F25	Courtesy light time	<p>60 to 180 seconds (Default 60)</p>	<p>The function allows you to set the seconds the additional light (set up as courtesy light) stays on after an opening or closing manoeuvre.</p>
F30	M1 leaf opening and closing slowdown speed	<p> The parameters vary according to the motor selected in the [A1 – Motor type] function.</p>	<p>The function is used to set the opening and closing slowdown speed of M1. The percentage is calculated based on the maximum travel speed.</p> <p> The slowdown speed may vary according to the weight of the leaf and the mechanical characteristics of the system.</p>

F31	M2 leaf opening and closing slowdown speed	The parameters vary according to the motor selected in the [A1 – Motor type] function.	The function is used to set the opening and closing slowdown speed of M2. The percentage is calculated based on the maximum travel speed. The slowdown speed may vary according to the weight of the leaf and the mechanical characteristics of the system.
F46	Number of motors	2 (Default) 1	The function is used to set the number of motors controlling the gate. Value 1 indicates that the M2 motor is being used
F49	RSE communication	3 = CRP/CAME KEY (Default) 6 = ModBus	The function is used to configure the card inserted in the RSE connector.
F56	CRP address	1 to 254 (Default 1)	The function assigns a unique identification code (CRP address) to the control board. The function is used where there are multiple operators connected to the same communication BUS using the CRP protocol.
F57	Dynamic automatic closing time	OFF (Default) ON	When the function is active, the automatic closing time increases progressively with intensive use of the operator. This function stops the motor from overheating.
F58	Configure maintenance	OFF (Default) from 1 x100 to 500 x100	The function allows you to set the number of manoeuvres the operator can perform before a maintenance warning signal is generated. The warning is displayed as an [SEr] message and signalled by 3 + 3 flashes every hour on the device [Passage-open warning light].
F63	RSE speed	2 = 4800 bps 3 = 9600 bps 4 = 14400 bps 5 = 19200 bps 6 = 38400 bps (default) 7 = 57600 bps 8 = 115200 bps	The function allows you to set the communication speed of the remote connection system.
F65 F66	RIO ED T1 RIO ED T2	OFF (Default) P0 = It stops the gate and excludes automatic closing. Use a control device to resume movement. P7 = Reopen while closing. P8 = Reclose while opening.	The function is used to configure a wireless safety device. The function only appears if the RIO CONN interface board is present.

F67 F68	RIO PH T1 RIO PH T2	<p>OFF (Default) P1 = Reopen while closing. P2 = Reclose while opening. P3 = Partial stop. Only with [Automatic close] activated. P4 = Obstacle standby. P13 = Reopening during closure with immediate stop once the obstacle has been removed, even with the gate not in motion.</p>	<p>The function is used to configure a wireless safety device.</p> <p> The function only appears if the RIO CONN interface board is present.</p>
F71	Partial opening time	<p>OFF 1 to 30 seconds (Default 10)</p>	<p>The function allows you to adjust the partial opening time of the operator.</p> <p> The partial opening time must not be longer than the opening and closing stroke time of M2. See function [F81 - Time of M2 opening and closing stroke].</p>
F79	M1 opening and closing travel time	5 to 180 seconds (Default 25)	The function is used to modify the M1 motor opening and closing travel time.
F81	M2 opening and closing travel time	5 to 180 seconds (Default 25)	The function is used to modify the M2 motor opening and closing travel time.
F83	Removing obstacles	<p>OFF = Inversion caused by obstacle (Default) When an obstacle is detected, the operator inverts the direction of travel until the limit switch is reached.</p> <p>ON = Remove obstruction When an obstacle is detected, the operator inverts the direction of travel to create enough space to clear the obstacle and then comes to a stop.</p>	<p>The function allows you to activate the Remove obstruction mode where an obstacle is detected.</p>
F84	M1 and M2 opening and closing slowdown time	<p>OFF (Default) 1 to 30 seconds</p>	<p>The function is used to modify the opening and closing slowdown time for both motors.</p> <p> Add the slowdown time to the travel time.</p>
U1	New user	<p>The function is used to register up to a maximum of 250 users and assign a function to each one.</p> <p> The operation can be carried out by using a transmitter or a BUS selector device (e.g. a keypad or transponder reader). The board that manages the transmitters (AF) must be inserted into the connector.</p> <p> See the [Saving a new user] section for information on the save procedure.</p>	
U2	Remove user	<p>The function is used to remove one of the registered users.</p> <p> See the [Remove registered users] section for information on how to remove them.</p>	

U3	Remove all	OFF (Cancel operation) ON (Run operation)	The function is used to remove all registered users.  “CLr” will appear to confirm deletion.
U4	Radio decoding	1 = All decoding (default) 2 = Rolling code 3 = TW key block	The function is used to choose the type of radio coding for the transmitters enabled to control the operator.  If you choose [Rolling code] or [TW key block], any transmitters with a different type of radio coding saved previously will be deleted.
U8	Self-Learning Rolling	OFF (Default) ON	The function is used to save a new rolling code transmitter by activating acquisition from a rolling code transmitter that has already been stored. The saving and acquisition procedures are explained in the transmitter manual.
A1	Motor type	0 = Generic (Default) 1 = FAST-70 3 = F1000-F1100 5 = KRONO 6 = ATI-ATixOAGS 9 = ATS 12 = FROG-A	The function is used to set the type of gearmotor installed on M1 and M2.
A2	Motor test	The > button opens gate leaf M2 The < button opens gate leaf M1	The function is used to check the gate leaves open in the right direction. With the function active, the > key opens the gate leaf connected to M2, and the < key opens the gate leaf connected to M1. The movement continues while the key is pressed or until the end-of-travel limit switch is reached. When the key is released, the movement stops.  If the leaf does not move in the correct direction, invert the motor phases.
A4	Parameter reset	OFF (Cancel operation) ON (Run operation)	The function restores the factory configurations except for:[users], [password], [motor type], [number of motors], [CRP address], and the travel calibration settings.
A5	Manoeuvre counter	Tot = total manoeuvres - Manoeuvres performed since the operator was installed. Par = partial manoeuvres - Manoeuvres carried out after the last maintenance.  Under the [Par] parameter, press the ENTER key to reset the number of partial manoeuvres. [Clr] will appear on the screen to confirm deletion.	The function allows you to view the number of total or partial operator manoeuvres (after maintenance).  The control panel regularly saves the number of manoeuvres automatically. In the event of an unexpected power outage, the number of manoeuvres last saved is restored.  The number of manoeuvres is the number shown multiplied by 100.





A8	Engine power - DTC (Digital Torque Control)	10% to 100% (Default 100%)	The function allows you to increase or decrease the maximum thrust of motors connected on M1 and M2 during a manoeuvre.
H1	FW version	The function is used to display the firmware version.	
H3	Enable password	OFF (Default) ON	Set a 4-digit password. The password will be requested to anyone who wants to access the main menu. Use the arrows and the Enter button to dial the desired code.
H4	BUS device status	b = BUS photocells b(1 - 8).<x> d = BUS selector d(1 - 8).<x> L = BUS flashing beacon L1/L2.<x> i = I/O BUS module i1/i2.<x>	The function shows the status of all devices that can be connected to the BUS and managed by the firmware in use. Device status <x> ll = Conflicting address o = Working c = Working with alarm signal F = Device fault - = No communication or not present


BUS (b1-b8) photocell functions

b1 b2 b3 b4 b5 b6 b7 b8	BUS Photocell 1 Photocell BUS 2 Photocell BUS 3 Photocell BUS 4 Photocell BUS 5 Photocell BUS 6 Photocell BUS 7 Photocell BUS 8	OFF (Default) C1 = Reopen while closing (photocells) C2 = Reclose while opening (photocells) C3 = Partial stop Only with [Automatic close] activated. C4 = Obstacle standby (photocells) C13 = Reopen while closing, with immediate closure once the obstruction has been removed, even if the gate is not in motion C23 = Open command C24 = Close command	The function is used to configure the BUS photocell input. 📖 The function only appears if there is a BUS photocell connected.
--	--	--	--


I/O BUS 1 (b11) module / I/O BUS 2 (b12) module functions*

(*) As set on the device DIP switch.


Path: b11 / b12 > i1			
i1	input I1	<p>OFF (Default) C0 = This stops the operator and excludes automatic closing. Use a control device to resume movement.</p> <p> If it is activated, the input is used as a normally closed contact.</p> <p>r7 = Reopen while closing (sensitive edge with 8K2 resistor). r8 = Reclose while opening (sensitive edge with 8K2 resistor). C22 = Partial opening C23 = Open C24 = Close C27 = Step-by-step - The first command is to open and the second to close. C28 = Sequential - The first command is to open, the second to STOP, the third to close and the fourth to STOP.</p>	<p>The function allows you to configure the inputs on the I/O modules.</p> <p> The function only appears if there is a BUS I/O module connected.</p>
Path: b11 / b12 > i2			
i2	input I2	<p>OFF (Default) C0 = This stops the operator and excludes automatic closing. Use a control device to resume movement.</p> <p> If it is activated, the input is used as a normally closed contact.</p> <p>r7 = Reopen while closing (sensitive edge with 8K2 resistor). r8 = Reclose while opening (sensitive edge with 8K2 resistor). C22 = Partial opening C23 = Open C24 = Close C27 = Step-by-step - The first command is to open and the second to close. C28 = Sequential - The first command is to open, the second to STOP, the third to close and the fourth to STOP.</p>	<p>The function allows you to configure the inputs on the I/O modules.</p> <p> The function only appears if there is a BUS I/O module connected.</p>
Path: b11 / b12 > o1			

o1	Light output	<p>0 = Passage-open warning light - It notifies the user of the operator status [F10 - Passage-open warn. light].</p> <p>1 = Cycle light - The lamp stays on during the manoeuvre.</p> <p>2 = Courtesy light - The light switches on when a manoeuvre starts and remains on once the manoeuvre has finished, for the time set under the function [F25 - Courtesy time].</p>	<p>This function allows you to configure output 1 on the I/O modules.</p> <p> The function only appears if there is a BUS I/O module connected.</p>
-----------	---------------------	---	--

Path: **b11 / b12 > o2**


o2	Relay output	<p>0 = Bistable</p> <p>ON - 1 to 180 seconds (Default 1)</p>	<p>This function allows you to configure output 2 on the I/O modules.</p> <p> The function only appears if there is a BUS I/O module connected.</p>
-----------	---------------------	--	--

BUS (b21-b28) key selector switch functions


b21 b22 b23 b24 b25 b26 b27 b28	BUS 1 key selector BUS 2 key selector BUS 3 key selector BUS 4 key selector BUS 5 key selector BUS 6 key selector BUS 7 key selector BUS 8 key selector switch	<p>0 = Step-by-step - The first command is to open and the second to close.</p> <p>1 = Sequential - The first command is to open, the second to STOP, the third to close and the fourth to STOP.</p> <p>2 = Open</p> <p>3 = Close</p> <p>4 = Partial opening</p> <p>5 = Stop</p> <p>7 = BUS 1 module relay - Activate output 2 (relay output) on BUS 1 I/O module</p> <p>8 = BUS 2 module relay - Activate output 2 (relay output) on BUS 2 I/O module</p>	<p>The function allows you to configure the BUS key selector input. Different configurations can be set according to the key turning direction.</p> <p>rIG = Key to the right</p> <p>LEF = Key to the left</p> <p> The function only appears if there is a BUS key selector connected.</p>
--	---	--	---

BUS (b40) flashing beacon functions


Path: **b40 > L1**

L1	Automatic closing time colour	<p>OFF</p> <p>1 = White</p> <p>2 = Yellow</p> <p>3 = Orange</p> <p>4 = Red</p> <p>5 = Purple</p> <p>6 = Blue</p> <p>7 = Light blue</p> <p>8 = Green (Default)</p>	<p>The function allows you to set the BUS flashing beacon colour during the automatic closing time.</p> <p> The function only appears if there is a BUS flashing beacon connected.</p>
-----------	--------------------------------------	---	---


Path: b40 > L2

L2	Opening colour	1 = White 2 = Yellow 3 = Orange 4 = Red (Default) 5 = Purple 6 = Blue 7 = Light blue 8 = Green	Set the BUS flashing beacon colour during operator opening.  The function only appears if there is a BUS flashing beacon connected.
-----------	-----------------------	---	---



Path: b40 > L3



L3	Closing colour	1 = White 2 = Yellow 3 = Orange 4 = Red (Default) 5 = Purple 6 = Blue 7 = Light blue 8 = Green	This function allows you to set the colour of the BUS flashing beacon during operator closing.  The function only appears if there is a BUS flashing beacon connected.
-----------	-----------------------	---	--

Path: b40 > L4

L4	Pre-flashing colour	1 = White (Default) 2 = Yellow 3 = Orange 4 = Red 5 = Purple 6 = Blue 7 = Light blue 8 = Green	The function allows you to set the flash colour for before opening and closing manoeuvres (pre-flash).  The function only appears if there is a BUS flashing beacon connected.
-----------	----------------------------	---	--

Path: b40 > L5

L5	Signal error	OFF (Default) 1 = White 2 = Yellow 3 = Orange 4 = Red 5 = Purple 6 = Blue 7 = Light blue 8 = Green	The function allows you to set the colour of the BUS flashing beacon in the event of an error signal.  The warning light is activated after sending a command for movement.  The function only appears if there is a BUS flashing beacon connected.
-----------	---------------------	--	---

b43	Signal maintenance	OFF (Default) 1 = White 2 = Yellow 3 = Orange 4 = Red 5 = Purple 6 = Blue 7 = Light blue 8 = Green	The function allows you to set the colour of the flash on enabled BUS devices (flashing beacons and selectors) when maintenance is necessary. With the function activated, these devices will signal that maintenance needs to be carried out at the start of each manoeuvre.  Configure maintenance and set the number of manoeuvres. See the function [F58 – Configure maintenance].  The function only appears if there is a BUS flashing beacon or a BUS selector connected.
------------	---------------------------	--	--

Saving a new user

Press **ENTER** to enter programming.

① Access: **U1** - New user. Press **ENTER** to confirm.

② Choose the function to be assigned to the user:

1 = Step-by-step - The first command is to open and the second to close.

2 = Sequential - The first command is to open, the second to STOP, the third to close and the fourth to STOP.

3 = Open


4 = Pedestrian/partial opening

6 = BUS 1 module relay - Activate output 2 (relay output) on BUS 1 I/O module

7 = BUS 2 module relay - Activate output 2 (relay output) on BUS 2 I/O module

Press ENTER to confirm.


③ The first available position for storing will appear on the screen.

 The available positions are the ones with flashing numbers.

④ Within 10 seconds, send the code from the selector (transponder or keypad) or the transmitter key. [Sto] will appear to show acquisition has been successful.

 The board that manages the control devices (AF) must be inserted into the connector.

Repeat the procedure to add other users.

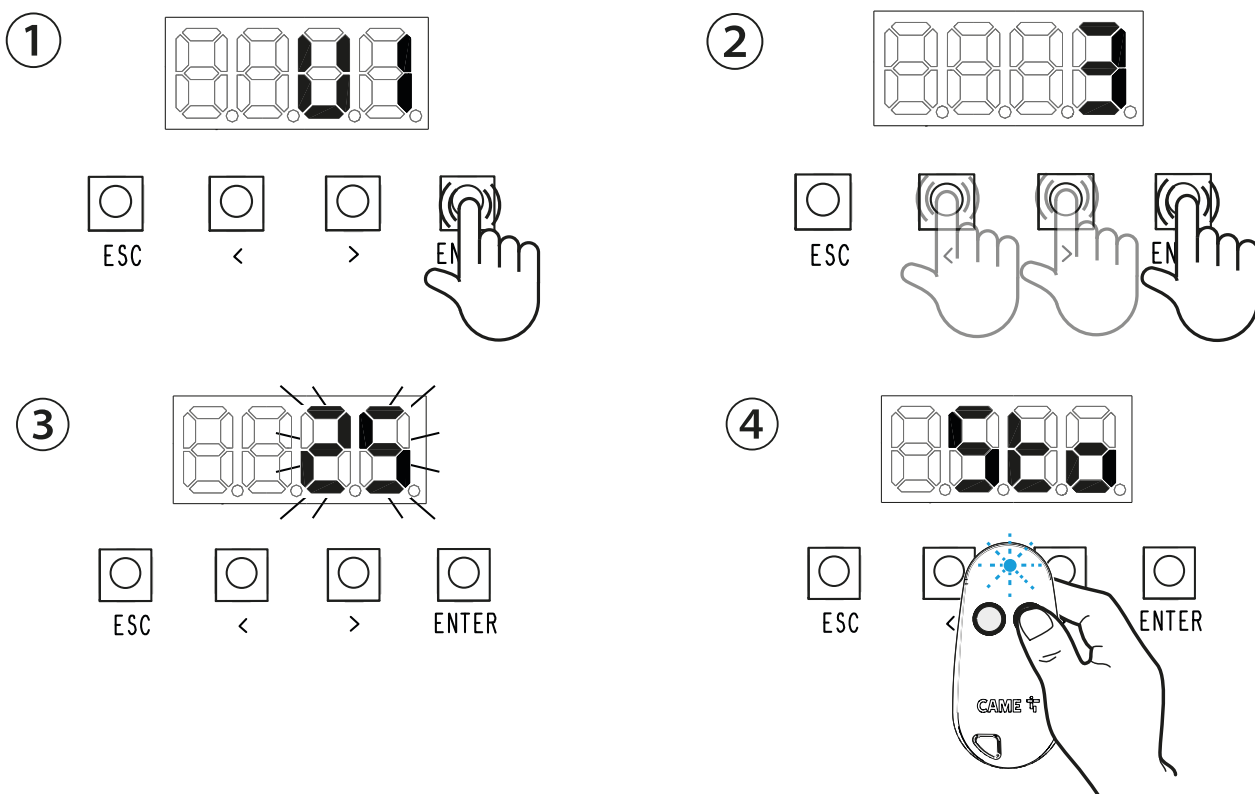

Removing registered users

Press **ENTER** to enter programming.

① Select: **U2** - Remove single user. Press **ENTER** to confirm.





② Use the arrows to select **ON** and press **ENTER** to start the remove user procedure.

③ Use the arrows to choose the number associated with the user you want to remove and press **ENTER** to confirm.

📖 Alternatively, the control device associated with the user you want to remove can be activated.

④ "CLr" will appear to confirm deletion.

Repeat the procedure to remove other users.

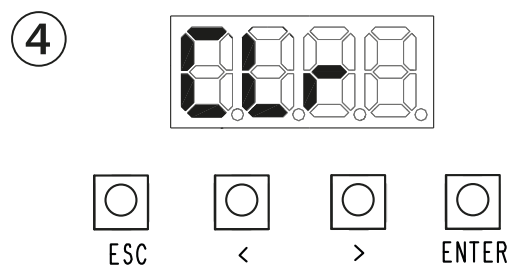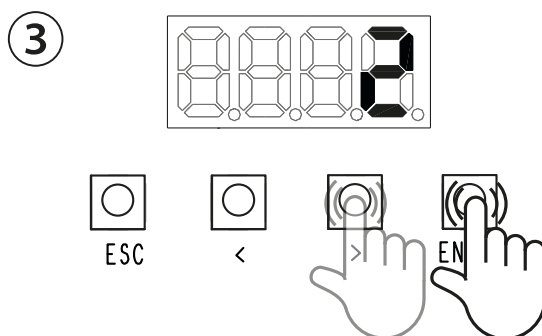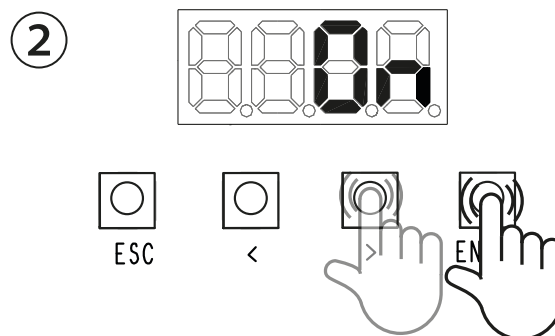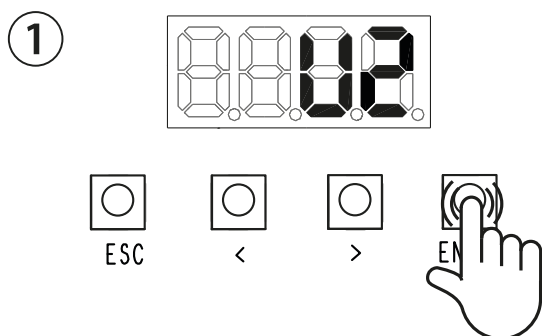

Forgotten password

If you lose the password, you will need to reset the board to its factory settings. See [Factory reset].

Factory reset

To restore the electronic board data to factory settings:

Disconnect the control board from the power supply and wait for it to switch off.

Press and hold the < and > buttons, then reconnect the control board to the power supply.




Continue to press and hold the < > buttons until [ON/OFF] is displayed.

Select [ON].

Press ENTER to confirm.

📖 When you reset the control board, all saved users and calibration operations are deleted.

DISPLAY WARNINGS KEY

C<n>	Wired safety device active  The <n> value is associated with the selected parameter for the functions [F2 - CX input] [F3 - CY input].
r7	R7 safety device (sensitive edge) active
r8	R8 safety device (sensitive edge) active
2r7	R7 safety device (pair of sensitive edges) active
2r8	R8 safety device (pair of sensitive edges) active
c<n>	BUS photocell safety device active  The <n> value is associated with the selected parameter for the [BUS photocell] functions.
c23	Open command active for BUS photocells
c24	Close command active for BUS photocells
C0	Total stop active
P<n>	RIO safety device active  The <n> value is associated with the selected parameter for the functions [RIO ED T1 - RIO ED T2] and [RIO PH T1 - RIO PH T2]
A1	Select a motor type
SEr	Maintenance required
OP.	Passage fully open
CL.	Passage fully closed

Error messages

E4	The service test failed
E7	Operating time error
E15	Incompatible transmitter error
E17	Wireless system communication error
E18	Wireless system not configured error
E24	Communication error or malfunction of a BUS safety device During a manoeuvre: communication error or malfunction of a BUS safety device
E25	Conflicting addresses for configured BUS devices
E30	Board not working

SHORT CIRCUIT CHECK PROCEDURE

In the event of a short-circuit on the 24V accessories, the power supply and the signal LED go out. The board is switched off.



To check for short circuits:

- » Check there are no other reasons for the board power supply being interrupted;
- » Disconnect the 10-11 output;
- » Disconnect the 10-2 output;
- » Remove any engaged cards (RSE, RIO, AF);

If the board switches back on correctly, a short circuit may have occurred on the 24V accessories.

FINAL OPERATIONS

 Before closing up the casing, check that the cable inlets are sealed to stop insects getting in and to prevent damp.

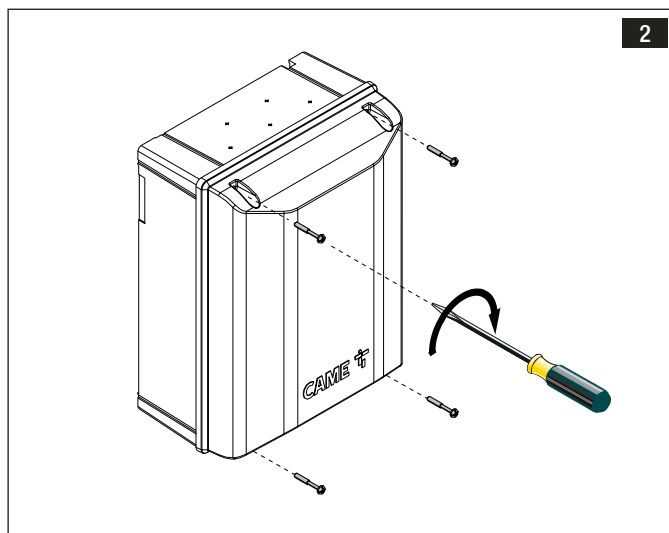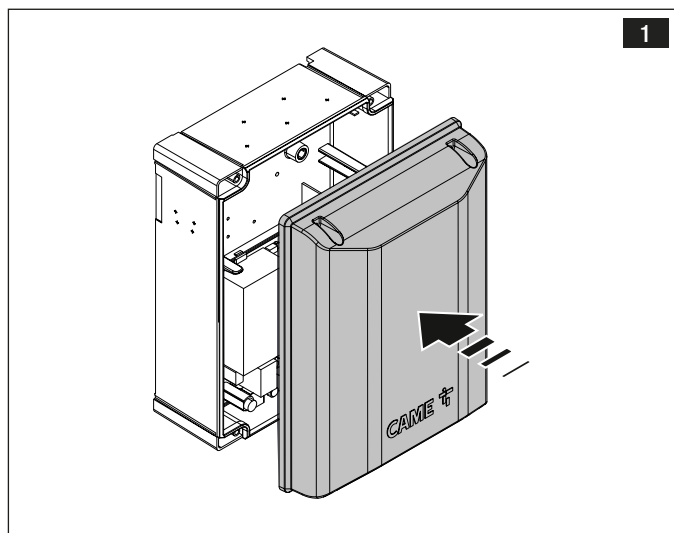



CAME.COM

**AFFIX THE PRODUCT LABEL
FROM THE BOX HERE**

CAME S.P.A.

Via Martiri della Libertà, 15

31030 Dosson di Casier

Treviso - Italy

Tel. (+39) 0422 4940

Fax (+39) 0422 4941

info@came.com - www.came.com